

EN	<p>Dear Customer,</p> <p>Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.</p> <p>We hope you enjoy your Gigaset.</p>	DA	<p>Kære Kunde,</p> <p>Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer.</p> <p>Vi håber, du får meget glæde af din Gigaset.</p>
DE	<p>Sehr geehrte Kundin, sehr geehrter Kunde,</p> <p>die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.</p> <p>Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p>	FI	<p>Arvoisa asiakkaamme,</p> <p>Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yhtiksen oikeudenomistaja, joka jatkoi puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.</p> <p>Toivotamme Teille paljon iloa Gigaset-laitteestanne.</p>
FR	<p>Chère Cliente, Cher Client,</p> <p>la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.</p> <p>Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.</p>	SV	<p>Kära kund,</p> <p>Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.</p> <p>Vi önskar dig mycket nöje med din Gigaset.</p>
IT	<p>Gentile cliente,</p> <p>la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p>	NO	<p>Kjære kunde,</p> <p>Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.</p> <p>Vi håper du får stor glede av din Gigaset-enhet.</p>
NL	<p>Geachte klant,</p> <p>Gigaset Communications GmbH is de rechtsoptvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.</p> <p>Wij wensen u veel plezier met uw Gigaset.</p>	EL	<p>Αγαπητή πελάτισσα, αγαπητέ πελάτη,</p> <p>η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH.</p> <p>Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.</p>
ES	<p>Estimado cliente,</p> <p>la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.</p> <p>Le deseamos que disfrute con su Gigaset.</p>	HR	<p>Poštovani korisnici,</p> <p>Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.</p> <p>Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.</p>
PT	<p>SCaros clientes,</p> <p>Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.</p> <p>Desejamos que tenham bons momentos com o seu Gigaset.</p>	SL	<p>Spoštovani kupec!</p> <p>Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.</p> <p>Želimo vam veliko užitkov ob uporabi naprave Gigaset.</p>

CS	Vážení zákazníci, společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.	PL	Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH. Życzymy wiele przyjemności z korzystania z produktów Gigaset.
SK	Vážený zákazník, Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní.	TR	Sayın Müşterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı ümit ediyoruz.
RO	Stimate client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmații efectuate de Siemens AG sau SHC și incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparține Gigaset Communications GmbH. Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.	RU	Уважаемые покупатели! Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH. Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.
SR	Poštovani potrošaču, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.		
BG	Уважаеми потребители, Gigaset Communications GmbH е правопреемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH. Надяваме се да ползвате с удоволствие вашия Gigaset.		
HU	Tisztelt Vásárló! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni. Reméljük, megelégedéssel használja Gigaset készülékét.		

SIEMENS

Be inspired

Gigaset
A100

DECT
DIGITAL



Operating Manual

and Safety Precautions



Brief overview

Base station symbol

- **Constant:**
ready for dialling/receiving calls
- **Flashing:**
no connection to base station

Handset key

- Accept/end call
- Dial call number (when digits are already stored)

Speed dialling

Redial

Recall key

- For PABXs and select carrier services

Keypad lock

 
- Lock on/off
hold down to activate/deactivate!

Dial pause

- Hold down!

Memory key

- For saving
- For settings

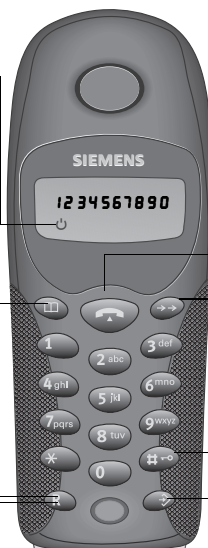

Displays

	Base station symbol		Lift handset
	Save		

Special displays

	* character		Keypad lock
	# character		Handset ready for registration
	Recall key		Handset searching for registered base
	Pause		Handset found base that is ready for registration
	Memory empty		

Safety information



Use **only the plug-in power supply unit provided**, as indicated on the bottom of the device.



Use only **approved, rechargeable batteries of the same type**. In other words, never use conventional (non-rechargeable) batteries, since these can injure you and damage your health.



Insert rechargeable batteries in accordance with polarity symbols (the instructions are found in the handset battery compartment).



Use the batteries indicated in these operating instructions (the instructions are found in the handset's battery compartment).



The operation of medical equipment may be affected. Bear in mind the technical requirements of the environment (e.g. doctor's office).



The handset can cause an unpleasant buzzing sound in hearing aids. Do not hold the handset too close to your ear.



Do not operate the telephone in environments where there is risk of explosion (e.g. paint shops).



Do not install the base station in bathrooms or showers. The handset is not splashproof (see page 13).



Do not pass your Gigaset on to a third party without the user guide.



Dispose of batteries and your phone in an environment-friendly manner.

 
When the keypad is locked (see page 11) emergency numbers cannot be dialled either.

Not all the functions described in this user guide are available in all countries.

Putting the telephone into service

Step 1: Connecting the base station

First of all, connect your base station to the telephone jack and the mains supply.

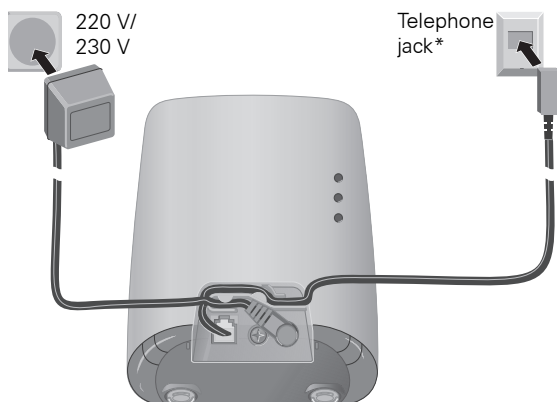

- Insert **the round plug of the mains cable** into the jack.
- Lay the cable in the channel provided (to prevent over-tensioning).
- Plug the power supply unit into the power socket.
- Plug **the square connector of the phone cable** supplied into the jack.
- Lay the cable in the channel.
- Plug the phone connector into the phone socket.

* Appearance may differ, depending on country!


If you do not want to use the telephone cable supplied, ensure that you use either a simple extension cable or a telephone cable with 3/4 connector assignment, otherwise your Gigaset A100 will not function correctly.

1	free
2	free
3	L a

4	L b
5	free
6	free

Putting the telephone into service

 Step 2: Inserting the battery

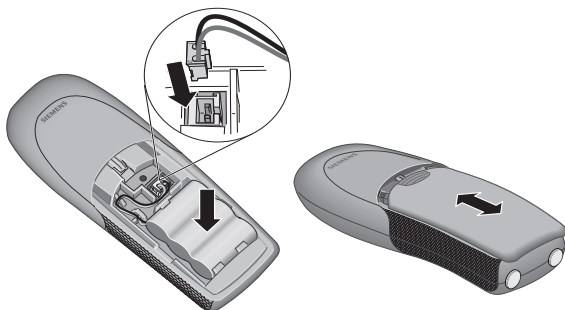

- Insert the battery connector into the socket (see inset); it must lock **securely** into place.
- Place battery in the battery compartment.
- Insert battery cable in the clip provided.
- Put the battery compartment cover on and push it up until it latches into position. To open the compartment, press on the ridged section of the cover and push downwards.



- Only use approved batteries.
- Never use non-Siemens charging units as these can damage the batteries.



The display is protected by a film.
Please remove protective film.

 
Putting the telephone into service

Step 3: Registering the handset at the base station

Before you can make or receive telephone calls you need to register the handset at the base station.



Make sure that the base station is connected to the power supply (Step 1) and the battery is inserted in the handset (Step 2).




Place the handset in the base station and leave it there until registration is complete.



The registration display will appear. This may take up to 5 minutes, depending on the charge level of the battery.

 The  symbol will flash in the display.




Unplug the power supply unit (220V/230V) from the mains socket.



The handset must remain in the base station. Plug the power supply unit back into the mains socket.

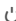


After about 90 seconds the  symbol will stop flashing and the normal standby display will appear. The handset is now registered at this base station.

Putting the telephone into service

Step 4: Charging the battery

 The battery supplied is **not charged**.



To charge the battery, place the handset in the base station. For the **first** charging we recommend a continuous charging time for at least 16 hours. You can then make calls.

Battery information

- Once the first charging operation is completed, you can replace the handset in the base station after any call.
- The batteries warm up during charging - this is normal and not a cause for concern.

Handset operating times/charging time

Capacity	Standby time	Talktime	Charging time
300 (mAh)	up to 100 hrs	up to 10 hrs	approx. 16 hrs

Approved battery

Nickel-cadmium (NiCd)
Type 1a (300 mAh)V30145-K1310-X147 NiCd

Batteries are available from your stockist, the Siemens Customer Care or via the Internet, from Siemens Service Shop at:

<http://communication-market.siemens.de/serviceshop/default.asp>; alternatively see also last page.


Making calls


Making a call




Enter the call number.



Press the handset key. A connection is set up. The icon  appears in the display.


Did you enter the wrong number by mistake? If so, then press the handset key  twice.

You can also dial a number by pressing the handset key first and then entering the relevant digits.

 
You can use the recall key  to insert a **pause** (hold the key down). This may be necessary for international calls or when dialling in to automatic announcement services.

Ending a call



Press the handset key. The icon  **disappears** from the display;

or



Place the handset in the base station.
The connection is cleared down.

Accepting a call



Press the handset key. The connection is set up.

Redialling a number

The last call number dialled is saved.



Dial the call number.



Press the handset key. The connection is set up.

Making calls

Saving/changing a call number (speed dialling)

You can save up to 10 telephone numbers as speed dialling digits and dial them at the push of a button.



Press the memory key followed by the speed dialling key.

e.g.

Enter the speed dialling digit (**0 to 9**).



Enter the call number.



Save the speed dialling digit. You will hear the confirmation beep.

Speed dialling



Press the speed dialling key.

e.g.

Select the speed dialling digit (**0 to 9**).



Press the handset key. The connection is set up.

The speed dialling digit "0" is activated **automatically** by holding down number with the identification the speed dialling key. We therefore recommend assigning a frequently dialled number to "0" (e.g. a network access number).

Cost-effective telephony

You can use the network access numbers of various providers to minimise costs (Call-by-Call*), depends on the offering of the service provider. Like a call number, these numbers can be saved as speed dialling digits (**0 to 9**).

You can, however, also dial the network access or call numbers as usual.

• Network access using a speed dialling digit



Hold down the speed dialling key. The speed dial memory location "0" with the network access number is displayed **automatically**.



Enter the user's call number and dial the complete number via the handset keypad.

* not available in all countries

Cost-effective telephoning

• "Linking" or chaining of multiple speed dialling digits

You can link multiple access numbers and call numbers that have been saved as **speed dialling numbers**.



Hold down the speed dialling key.

e.g.

Memory location "0" with the network access number is displayed.



Press the speed dialling key once more.

e.g.

Select the speed dialling digit (**0 to 9**) for a user. The network access number and the call number are chained and displayed.



Press the handset key. The connection is set up.

Further access numbers can be saved as speed dialling numbers (**0 to 9**).

To use them press and then the relevant speed dialling key.

Settings

Handset volume

You can set the handset volume to any of three levels.



Activate the function.

e.g.

Change the volume (levels **1 to 3**) and save.

Ringer volume

You have three volumes to choose from.



Activate the function – the ringer sounds.

e.g.

Change the ringer volume (levels **1 to 3**) and save.

Settings

Ringtone

You can choose between two ringtones.



Activate the function – the ringer sounds.



e.g. Select the ringtone (version **1 or 2**) and save.

Keypad lock

When the keypad is locked, nothing happens if you inadvertently press a key. You can continue to accept calls in the usual manner.



Hold down for **more than 1 second** to activate/deactivate.



The display icon appears if active.

Operating behind a PABX

If you operate your Gigaset behind a PABX, it may be necessary to change the preset Dual Tone Multifrequency Dialling (DTMF) procedure and flash times (please refer to the operating instructions of your PABX).

Use digits **1 to 4** to set the following:

1	DTMF, long flash 250 ms
2	DTMF, short flash 100 ms
3	DP (Dial Pulsing) 1.5/1
4	DP 2/1



Press the handset key.



Activate the function.




e.g. Enter the desired setting (**1 to 4**).



Save the setting.



Press the handset key.

 
Did you enter the wrong number by mistake? Then press the handset key  twice or wait until the display returns to standby.

Registering the handset manually

Handset A1 to an A100 base:

Manual registration has to be carried out if


- automatic registration has not functioned or
- the original handset supplied has been replaced.



Remove the power supply unit (220V/230V) from its socket.



 Prepare the handset for registration.



Place the handset in the base station and leave it there until registration has been completed.



Make sure the handset is still in the base station. Now replug the power supply unit into the socket.




The handset will now take about 60 seconds searching for a base that is ready for registration.



A base that is ready for registration has been found; registration was successful (display appears for about 3 seconds).



No base ready for registration has been found (display appears for about 3 seconds).

- Manual handset registration will overwrite an existing registration.
- The search for a base that is ready for registration can be cancelled by pressing the handset key .

Tips

Maintenance

Simply wipe your telephone with a **damp cloth** or an anti-static wipe. **Never** use a dry cloth as this can cause static discharge!


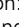
Contact with liquid

If the handset should come into contact with liquid,
on no account switch the device on.
Remove all batteries immediately.

Allow the liquid to drip out of the device, and then dab all parts of the device dry.


Keep the handset with the batteries removed in a warm, dry place for at least 72 hours. In many cases, you will then be able to use it again.

Troubleshooting

Malfunction	Possible causes	Solution
Registration did not work.	The battery is not sufficiently charged. Handset and base station were not prepared for registration.	Charge the battery for 16 hours (see page 12). Remove and then re-insert the power supply unit.
No display.	The battery is not charged.	Charge the battery or replace it (see page 7).
No reaction to keystroke.	The keypad is locked.	Press  for 1 second.
No radio connection to the base station:  icon flashing!	The handset is outside the base station range.	Move closer to the base station.

Malfunction	Possible causes	Solution
	The handset is not registered.	Register the handset (see page 12).
	The base station is not active.	Insert round plug of the mains cable into jack and lay the cable in cable channel (to prevent over-tensioning). Plug the power supply unit into the power socket.

Range

The range is up to 50 m indoors and approx. 300 m outdoors. The base station symbol  flashes when the range is exceeded.

Guarantee

Scope

- This equipment guarantee applies to end users ("customers"). This guarantee does not in any way affect the customer's statutory rights.
- The guarantee applies to the supplied devices and all their components but not to their installation or configuration or to the services provided by the dealer. Manuals and any software supplied in a separate data medium are excluded from the guarantee. This guarantee does not apply to decorative covers or any other personalised parts or software not supplied as part of this A100 package. The guarantee also excludes any decorative top or bottom shells for special editions.
- The guarantee provides for devices or components that, despite proper care and use, have demonstrably developed defects due to faulty workmanship and/or faulty materials. These will be replaced or repaired at our discretion, free of charge. The guarantee does not cover normal wear and tear. Alternatively, we reserve the right to replace the defective

device with a successor model or reimburse the original purchase price on return of the defective device. Our decision is final. Any legal claims are excluded.

- Claims under the guarantee cannot be made if
 - the defect or damage was caused by improper care or use.
Improper care or use includes the following:
 - Opening the device (this is classed as third-party intervention)
 - Manipulating components on the printed circuit board
 - Manipulating the software
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage were caused by mechanical, chemical, radio interference or thermal factors (e.g. microwave, sauna, etc.).
 - Repairs or other work done by persons not authorised by us.
 - Devices fitted with accessories not authorised by Siemens.
- Any further claims due to damage are excluded, such as damage arising outside the device, provided this was not due to gross negligence and/or intent on our part.
- Claims under the guarantee must be made as soon as the defect is noticed.
- A till receipt showing the date of purchase must be presented as proof. Each claim under the guarantee is accepted with the express reservation that subsequent investigations confirm the validity of the claim.
- Any devices or components that are replaced become our property.
- The costs of materials and labour will be borne by us, but not the costs of transport, postage or freight.

- We are entitled, at our discretion, to make technical changes (such as firmware updates) beyond repair or replacement in order to upgrade the device to the latest state of the art. There is no additional charge to the customer for this work. Our decision is final. Any legal claims are excluded.
- The guarantee is valid in the country of purchase. It applies only if the device is operated in the relevant geographical area in accordance with the information on the packaging and in the operating instructions.
- Any further claims are excluded. Siemens is not liable in any circumstances for downtime, loss of profits, loss of data or loss of any other information. The customer alone is responsible for safeguarding such data and information.
- Changes to this guarantee require prior approval by Siemens in writing.

Guarantee period

- The guarantee applies in countries in the EU from 1 January 2002 for a period of 12 months.
- In all other countries the guarantee period shall be the relevant minimum statutory guarantee period, but no longer than 12 months.
- The guarantee period starts on the day of purchase by the customer.
- A successful claim under the guarantee does not extend the guarantee period.
- Work under the guarantee is handled by our Customer Care Centre.

The guarantor is Siemens Aktiengesellschaft Germany, Schlavenhorst 88, D-46395 Bocholt.

Service Ireland: Siemens hotline 1850777277

Siemens Service should only be contacted in the event of problems with the unit. Your stockist will be happy to answer any questions on unit operation. Contact your provider for questions concerning telephone connections.

Gigaset A100 is designed for operation in your country as indicated on the box and on the machine. Special country-specific features have been taken into consideration. If you have any queries with regard to differences in public telephone networks, please contact your dealer or operator. Unit compliance with the basic requirements of the R&TTE directive is confirmed by the CE symbol.

"We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with the registration number Q810820M in compliance with ANNEXE V of the R&TTE Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/05/EC is ensured."

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be obtained via the company hotline.

CE 0682



A31008- A100- B101- 2- 7619

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 München

© Siemens AG 2002
All rights reserved. Subject to availability.
Right of modification reserved.
Printed in Germany (11/2002).

Siemens Aktiengesellschaft
<http://www.siemens.com/gigaset>

Order no.: A31008-A100-B101-2-7619