

# Gigaset

## A116

You can find the most up-to-date user  
guide at  
[www.gigaset.com/manuals](http://www.gigaset.com/manuals)



User guide online on your  
smartphone or tablet:  
Download the Gigaset Help app



# Contents

<b>Brief overview of the handset</b> .....	<b>3</b>
<b>Illustration in the user guide</b> .....	<b>4</b>
<b>Safety precautions</b> .....	<b>5</b>
<b>Getting started</b> .....	<b>6</b>
Contents of the package .....	6
Setting up the base .....	6
Connecting the base.....	6
Setting up the handset for use .....	7
<b>Making calls</b> .....	<b>8</b>
Making a call .....	8
Accepting a call.....	8
Information about the caller .....	9
<b>Directory and lists</b> .....	<b>9</b>
Directory .....	9
Redial list.....	10
Message lists .....	10
<b>Additional functions</b> .....	<b>11</b>
Network mailbox .....	11
Alarm clock.....	12
ECO DECT .....	12
<b>Phone settings</b> .....	<b>12</b>
Tones and signals .....	12
Changing the display language .....	13
Resetting the handset .....	13
Changing the system PIN .....	13
Resetting the base.....	13
Advanced settings.....	14
<b>Appendix</b> .....	<b>15</b>
Customer service & assistance.....	15
Authorisation.....	15
Environment .....	15
Care.....	16
Contact with liquid .....	16
Technical details.....	17
Entering letters and characters.....	18
Menu overview.....	19



Not all functions described in the user guide are available in all countries or from all network providers.

## Brief overview of the handset



### 1 Charge level of the batteries

- Empty to fully charged
- Flashing: Batteries almost empty
- Flashing: Charge process

### 2 Display keys and functions (→ p. 4)

Various functions, depending on the operating situation

### 3 Talk key

Accept call; select number displayed

- Open the redial list ▶ Press **briefly**
- Start dialling ▶ Press and **hold**

### 4 End call key and On/Off key

End call; cancel function

- Go back one menu level ▶ Press **briefly**
- Return to idle status ▶ Press and **hold**
- Switch the handset on and off (in idle status) ▶ Press and **hold**

### 5 Control key

Navigate in menus and entry fields; access functions (depending on the situation)

- Open the directory ▶ Press down on the key
- Set the call volume ▶ Press up on the key

### 6 Key 1

- Dial network mailbox ▶ Press and **hold**

### 7 Key 0/Recall key

- Consultation call (flash) ▶ Press and **hold**

### 8 Hash key/Lock key

- Enable/disable keypad lock (in idle status) ▶ Press and **hold**
- Toggle between upper/lower case and digits (when inputting text) ▶ Press **briefly**
- Insert a dialling pause ▶ Press and **hold**

### 9 Star key

- Switch the ringtones on/off ▶ Press and **hold**
- Enter special characters ▶ Press **briefly**
- Switch from pulse dialling to tone dialling (for the existing connection) ▶ Press **briefly**

 
### 10 Microphone



New messages in the call list / network mailbox list (→ p. 10) are shown on the display by message **New messages**.


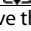
## Display keys and functions

- ▶ Press the display key ... The function shown above it on the display is called.

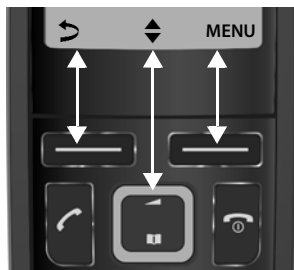




Display	Meaning on keypress
INT	No function on Gigaset A116
MENU	Open the main menu/submenu (→ Menu overview, p. 19)
OK	Confirm menu function or save the entry
↩	Back one menu level
⬅	Delete character by character to the left

### Display functions accessed from the control key

Display	Meaning on keypress
⬆	Use  to scroll up/down and to set the volume
↔	Move the cursor left and right with 







## Illustration in the user guide

	Warnings, the non-adherence to which can result in damage to devices or personal injury.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Additional helpful information.

## Procedures

Example: Switching Auto answer on/off:

- ▶ MENU ▶  Settings ▶ OK ▶  Handset ▶ OK ▶  Auto Answer ▶ OK (✓ = enabled)

Step	Follow this procedure
▶ MENU	Press the display key MENU.
▶  Settings	Use the control key  to navigate to entry Settings.
▶ OK	Press OK to confirm. The submenu Settings opens.
▶  Handset	Select the Handset entry using the control key  .
▶ OK	Press OK to confirm. The submenu Handset opens.
▶  Auto Answer	Select the Auto Answer entry using the control key  .
▶ OK	Enable or disable it using OK. Function is enabled ✓.

## Safety precautions

	<p>Read the safety precautions and the user guide before use.</p> <p>The device cannot be used in the event of a power failure. In case of a power failure it is also <b>not</b> possible to make <b>emergency calls</b>.</p> <p>Emergency numbers <b>cannot</b> be dialled if the <b>keypad/display lock</b> is activated!</p>
	<p>Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).</p>
	<p>The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.</p>
	<p>Use only the power adapter indicated on the device.</p>
	<p>Use only <b>rechargeable batteries</b> that correspond to the <b>specification</b> (see "Specifications"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.</p>
	<p>Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.</p>
	<p>Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.</p>
	<p>Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.</p> <p>The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.</p>
	<p>Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Specifications").</p>

## Getting started

### Contents of the package

One base, one power adapter, one handset, one phone cable, two batteries, one battery cover and the operating guide.

### Setting up the base



Position the base on a level, non-slip surface at a central point in the flat or house. You can also fit the base to a wall.

The range of the base is 300 metres outdoors and 50 metres indoors.

The base is designed for use in enclosed, dry rooms and within a temperature range of +5 °C to +45 °C.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

### Connecting the base

- ▶ **First** connect the power adapter **1**.
- ▶ **Then** connect the phone jack **2** and lay the cables into the cable ducts.



The power adapter must **always be connected** as the phone does not work without a power supply.

Use only the **supplied** power adapter and phone cable. The pin assignments of phone cables can vary.

## Setting up the handset for use

### Inserting the batteries



 
Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the right direction.

Note the polarity shown on the battery compartment.



- ▶ First insert the battery cover on the top **1**.
- ▶ Then press the cover **2** until it clicks into place.
- ▶ To open it again, place your fingernail in the notch on the underside of the casing and pull the battery cover up.

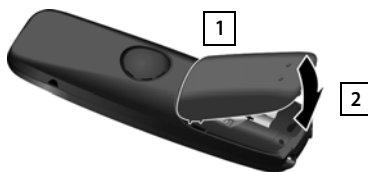

### Charging the batteries

- ▶ Fully charge the batteries in the base prior to initial use.



Batteries may heat up during charging. This is not dangerous.

After a time, the charge capacity of the batteries will decrease for technical reasons.

### Changing the display language




You can change the display language, if the telephone has been set to an incomprehensible language.

- ▶ **MENU** ▶ Press the keys **5** **2** **1=** slowly in succession ... the language set (e. g. **English**) is displayed
- ▶ To select a different language: ▶ Press the control key until the language required is selected on the display, e. g. **Français** ▶ **OK** (✓ = selected)


To revert to idle status: ▶ Press and **hold** the End call key

### Setting time and date


The time and date must be set correctly so they can be assigned correctly to incoming calls, and so that you can use the alarm.

- ▶ **MENU** ▶  **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK** ▶  Enter the date in 6-digit format (day, month and year) ▶ **OK** ▶  Enter the time in 4-digit format (hours and minutes) ▶ **OK** (Display: **Saved**)

To move the entry position left/right: ▶ Press up/down on the control key 

To revert to idle status: ▶ Press and **hold** the End call key 


### Switching the handset on and off

- ▶ Press and **hold** the End call key 

When you place a switched-off handset into the base, it switches on automatically after about 30 seconds.



## Making calls

### Making a call

- ▶  Enter the number ▶ Press the Talk key  ... The number is dialled


or

- ▶ Press and **hold** the Talk key  ... The dial tone can be heard ▶  Enter the number

To change the receiver volume during a call: ▶  ▶ Use  to set the volume

To end call / cancel dialling: ▶ Press the End call key 

### Accepting a call

- ▶ Press the Talk key 

Function **Auto Answer** enabled: ▶ Simply take the handset out of the base

Enabling function **Auto Answer**:

- ▶ **MENU** ▶  **Settings** ▶ **OK** ▶  **Handset** ▶ **OK** ▶  **Auto Answer** ▶ **OK** (✓ = enabled)



## Information about the caller

When there is an incoming call, the number or, if stored in the directory, the name of the caller is shown on the display.

### Prerequisites:

- You have authorised your network provider to show the number of the caller (CLIP) on your display
- The caller has authorised the network provider to send the phone number (CLI)

### Display:


**External call:** You have not requested call number display

**Unavailable:** Calling line identification has been suppressed or not requested by the caller

## Directory and lists

### Directory




Up to 50 phone numbers (max. 22 digits) with associated names (max. 14 characters).

To open the directory: ▶ Press down on the control key 




### Saving a number in the directory

Entering letters/characters: → p. 18.

#### First entry:


▶  ▶ New Entry? ▶ OK ▶  Enter the number ▶ OK ▶  Enter the name ▶ OK


#### More numbers:

▶  ▶ MENU ▶ New Entry ▶ OK ▶  Enter the number ▶ OK ▶  Enter the name ▶ OK

### Selecting a directory entry

▶ Open the directory with .

▶ Use  to scroll to the entry until the required name is selected.

or: ▶ Enter the first character of the name, scroll as required with  to the entry.

### Dialling from the directory

▶  ▶  Select entry ▶ 

### Using other functions

▶  ▶  Select entry ▶ MENU ▶  Select function ▶ OK

Possible functions: **New Entry** | **Show Number** | **Show Name** | **Edit Entry** | **Use Number** | **Delete Entry** | **Delete List** | **Shortcut**

### Using the quick dial keys (Shortcut)

Assign entries from the directory to keys 2 to 9.

- ▶ ▶ Select entry ▶ MENU ▶ Shortcut ▶ OK
- ▶ Select key ▶ OK (✓ = selected)

or: ▶ Press the key to which the entry is to be saved

Dial a number: ▶ Press and **hold** the quick dial key

---

### Redial list

This list contains the last 10 dialled numbers.

---

### Dialling from the redial list

- ▶ press briefly ▶ Select entry ▶

### Managing entries in the redial list

- ▶ press briefly ▶ Select entry ▶ MENU ▶ Select function ▶ OK

Possible functions: Use Number | Copy to Dir. | Delete Entry | Delete List

---

### Message lists

The phone saves messages about incoming and missed calls, and calls on the network mailbox.

Open list selection: ▶ MENU ▶ Messages ▶ OK ▶ CallsList | Netw.MBX

If new messages are available, only lists with new messages are displayed.

Scroll through the available lists:



An advisory tone sounds as soon as a **new entry** arrives in the call list / network mailbox. The display shows message **New messages**.

If calls are stored in the network mailbox, you receive a message when the setting is configured (dependent on the network provider).

## Call list

**Prerequisite:** CLIP → p. 9

Depending on the list type set, the numbers of the most recent incoming calls (**All Calls**) are displayed, or only the missed calls (**Missed Calls**).

### Setting the list type

▶ MENU ▶ Settings ▶ OK ▶ Base ▶ OK ▶ Call list type ▶ OK ▶ Missed Calls | All Calls ▶ OK

### Opening the call list

▶ MENU ▶ Messages ▶ OK ▶ CallsList

Information on the call list is displayed:

**CallsList** Number of new entries + number of old, read entries

**CallsList 01+02**

To open the list: ▶ Press the display key **OK** ... The most recent incoming call is displayed

▶ If required, select another entry with

### Using other functions

▶ Select entry ▶ MENU ▶ Select function ▶ OK

Possible functions: **Delete Entry** | **Copy to Dir.** | **Date/Time** | **Status** | **Delete List**

### Calling back a caller from the call list

▶ MENU ▶ Messages ▶ OK ▶ CallsList 01+02 ▶ OK ▶ Select entry ▶

## Network mailbox list

You can use the network mailbox list to listen to messages on the network mailbox (→ p. 11).

# Additional functions

## Network mailbox

The network mailbox is the answer machine in the phone network of your provider. Contact the provider for information. You can only use the network mailbox once you have **requested** it from your provider.

### Entering the number of the network mailbox in the phone

▶ MENU ▶ Answer Machine ▶ OK ▶ Net Mailbox ▶ Enter the number ▶ OK

### Listening to messages on the network mailbox

From the menu: ▶ MENU ▶ Answer Machine ▶ OK ▶ Play Messages

From key 1: ▶ Press and hold key **1**


From the message list: ▶ MENU ▶ Messages ▶ OK ▶ Netw.MBX ▶ OK

## Alarm clock

---

### Switching the alarm clock on and off

▶ MENU ▶  Alarm Clock ▶ OK ▶ Activation ▶ OK (✓ = switched on)




If no wake-up time is entered yet: ▶  Enter the wake-up time in 4-digit format ▶ OK

If the alarm clock is enabled, the alarm clock icon  and wake-up time are displayed instead of the date.

When the alarm rings, switch it off for 24 hours by pressing any key.

---

### Setting the wake-up time

▶ MENU ▶  Alarm Clock ▶ OK ▶  Wake-up time ▶ OK ▶  Enter the wake-up time in hours and minutes ▶ OK




---

## ECO DECT

During a call, the wireless power automatically adjusts to the distance between the handset and the base. The shorter the distance, the lower the wireless power (radiation).

When the phone is in idle status, the wireless power of the handset is switched off. The base maintains contact with the handset with only low wireless signals.

These wireless signals are also deactivated with the **No Radiation** setting.

▶ MENU ▶  Settings ▶ OK ▶  Base ▶ OK ▶  ECO DECT ▶ OK ▶ No Radiation ▶ OK (✓ = radiation deactivated, E<sup>+</sup> icon in top left of the display)

---



For speedy set-up of connections for incoming calls, the handset keeps switching to “ready to receive” momentarily. This increases the power consumption and so reduces the standby and talk times.

---

## Phone settings

---

### Tones and signals

---

#### Changing the call volume

The receiver volume can be set at 5 levels.

▶ MENU ▶  Audio Settings ▶ OK ▶  Handset Volume ▶ OK ▶  Select volume (✓ = selected)

---

#### Changing the ringer volume

Adjust the volume of the ringtone on 5 levels or select the **Crescendo** tone.

▶ MENU ▶  Audio Settings ▶ OK ▶  Ringer Volume ▶ OK ▶  Select volume or Crescendo (✓ = selected)

## Change ringtone melody

Set the ringtone melody for external calls and/or the alarm.

- ▶ MENU ▶ Audio Settings ▶ OK ▶ Ringer Melody ▶ OK ▶ Select External Calls or Alarm Clock ▶ OK ▶ Select required ringtone (✓ = selected)

## Enabling/disabling advisory tones, battery tone and ringtone

An advisory tone is sounded for different events, such as when a new message arrives. The battery tone sounds when the charge level of the battery falls below a certain value during a call. Advisory tones, the battery tone and the ringtone for incoming calls can be enabled/disabled separately.

- ▶ MENU ▶ Audio Settings ▶ OK ▶ AdvisoryTones | Battery Low | Ring Tones ▶ OK (✓ = enabled)

## Changing the display language

- ▶ MENU ▶ Settings ▶ OK ▶ Handset ▶ OK ▶ Language ▶ OK ▶ Select language ▶ OK (✓ = selected)

If you accidentally choose a language you do not understand:

- ▶ MENU ▶ Press the keys in succession ▶ Select language ▶ OK

## Resetting the handset

You can reset individual settings. Entries in the directory and call list, and the handset's registration to the base, are preserved.

- ▶ MENU ▶ Settings ▶ OK ▶ Handset ▶ OK ▶ Reset Handset ▶ OK ▶ Reset? ▶ OK

To cancel the reset: ▶

## Changing the system PIN

- ▶ MENU ▶ Settings ▶ OK ▶ Base ▶ OK ▶ System PIN ▶ OK ▶ Enter the current 4-digit system PIN (default: 0000) ▶ OK ▶ Enter the new 4-digit system PIN ▶ OK

## Resetting the base

A reset disables the **No Radiation** mode, deletes all lists and resets individual settings.

The time and date are not affected. The system PIN is **not** reset.

- ▶ MENU ▶ Settings ▶ OK ▶ Base ▶ OK ▶ Base Reset ▶ OK ▶ Reset? ▶ OK

## Advanced settings

### Operation with a router

When operating on the analogue connection of a router, **echoes** potentially occurring can be reduced by enabling **Echo mode**. If there are no problems with echoes, this function should be deactivated.

- ▶ MENU ▶ Settings ▶ OK ▶ Base ▶ OK ▶ Additional ▶ OK ▶ Echo mode ▶ OK (✓ = enabled)

### Operation with a PABX

The following settings are only necessary when your PABX requires them; refer to the PABX user guide. Enter the digits **slowly** one after the other.

#### Changing the dialling mode

- ▶ MENU ▶ 0.5 ▶ The digit for the dialling mode set flashes:  
0 = Tone dialling (DTMF); 1 = Pulse dialling (PD) ▶ Enter digit ▶ OK

#### Setting the flash time

- ▶ MENU ▶ 0.5 ▶ The digit for the current flash time flashes:  
0 = 80 ms; 1 = 100 ms; 2 = 120 ms; 3 = 400 ms; 4 = 250 ms; 5 = 300 ms; 6 = 600 ms;  
7 = 800 ms ▶ Enter digit ▶ OK

#### Changing pause after line seizure

You can set the length of the pause inserted between pressing of the Talk key and sending of the call number.


- ▶ MENU ▶ 0.5 ▶ The digit for the current pause length flashes:  
1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. ▶ Enter digit ▶ OK

#### Changing pause after Recall key

- ▶ MENU ▶ 0.5 ▶ The digit for the current pause length flashes:  
1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms ▶ Enter digit ▶ OK

# Appendix

## Customer service & assistance

Problem	Cause	Solution
Nothing on the display.	The handset is not switched on.	Press the End call key  for <b>about 5 seconds</b> or place the handset into the base.
	The batteries are empty.	Charge or replace the batteries.
No wireless connection to the base, <b>Base</b> flashes on the display.	The handset is outside the range of the base.	Move the handset closer to the base.
	The base is not switched on.	Check the mains plug on the base ➔ p. 6.
You cannot hear a ring or dial tone from the fixed line network.	The phone cable supplied has not been used or it has been replaced by a new cable with the wrong pin connections.	Please always use the telephone cable supplied or ensure that the pin connections are correct when purchasing from a retailer.: 3-4 assignment of phone wires / EURO CTR37.

If you have any further questions, your phone retailer will be happy to assist.

## Authorisation

This device is intended for analogue phone lines in your network.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset A116 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: [www.gigaset.com/docs](http://www.gigaset.com/docs).

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

## Environment

### Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

**ISO 14001 (Environment):** Certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2012/19/EU.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the reuse and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority or your refuse collection service.

---

### Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

**Never** use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

---

### Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours** (**not** in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.



## Technical details

### Batteries

Technology: 2 x AAA nickel metal hydride (NiMH)

Voltage: 1.2 V

Capacity: 300 - 1000 mAh

### Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximum possible times.)

Standby time (hours)	130 / 90 *
Talktime (hours)	12
Operating time with 1.5 hours of calls per day (hours)	80 / 55 *
Charging time in charging cradle (hours)	5

\* No Radiation switched on/off, without display backlight in idle status

### General specifications

DECT standard	supported
Radio frequency range:	1880-1900 MHz
Range	Up to 300 m outdoors, up to 50 m indoors
Power supply to base	230 V ~/50 Hz
Environmental conditions for operation	+5°C to +45°C, 20 % to 75 % relative humidity
Transmission power	10 mW average power per channel, 250 mW pulse power
Power consumption of the base	
In standby mode	
– Handset in charging cradle	approx. 1.0 W
– Handset away from charging cradle	approx. 0.8 W
During a call	approx. 1.0 W

## Entering letters and characters

### Standard characters

- Press the relevant key several times.
- Briefly** press the Hash key **[#]** to switch from mode "Abc" to "123", from "123" to "abc" and from "abc" to "Abc".

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x
[1]	1	£	\$	¥	¤										
[2]	a	b	c	2	ä	á	à	â	ã	ç					
[3]	d	e	f	3	ë	é	è	ê							
[4]	g	h	i	4	ï	í	ì	î							
[5]	j	k	l	5											
[6]	m	n	o	6	ö	ñ	ó	ò	ô	õ					
[7]	p	q	r	s	7	ß									
[8]	t	u	v	8	ü	ú	ù	û							
[9]	w	x	y	z	9	ÿ	ý	æ	ø	å					
[0.]	[ <sup>1</sup> ]	.	,	?	!	0	+	-	:	;	"	'	; _		
[*]	*	/	(	)	<	=	>	%							
[#]		#	@	\	&	§									

1) Space

### Cyrillic

- Press the relevant key several times.
- Briefly** press the Hash key **[#]** to switch from mode "ABC" to "123" and from "123" to "ABC".

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x
[1]	1	Š											
[2]	A	Б	В	Г	2	A	B	C					
[3]	Д	Е	Ё	Ж	3	З	Д	Е	F				
[4]	И	Й	К	Л	4	G	H	I					
[5]	M	H	O	5	J	K	L						
[6]	П	P	C	6	M	N	O						
[7]	T	Y	Ф	X	7	P	Q	R	S				
[8]	Ц	Ч	Ш	Щ	8	T	U	V					
[9]	bL	b	Э	Ю	Я	9	W	X	Y	Z			
[0.]	[ <sup>1</sup> ]	.	,	?	!	0	+	-	:	"	'	; _	
[*]	*	/	(	)	<	=	>	%					
[#]		#	@	\	&	§							

1) Space

### Turkish

- Press the relevant key several times.
- Briefly** press the Hash key **[#]** to switch from mode "Abc" to "123", from "123" to "abc" and from "abc" to "Abc".


	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x
[1]	1												
[2]	a	b	c	ç	2	ä	á	à	â	ã			
[3]	d	e	f	3	ë	é	è	ê					
[4]	g	ğ	h	ı	ı	4	ï	í	ì	î			
[5]	j	k	l	5									
[6]	m	n	o	ö	6	ñ	ó	ò	ô	õ			
[7]	p	r	s	ş	7	q	ß						
[8]	t	u	ü	v	8	ú	ù	û					
[9]	y	z	9	w	x	ÿ	æ	ø	å				
[0.]	[ <sup>1</sup> ]	.	,	?	!	0	+	-	:	"	'	; _	
[*]	*	/	(	)	<	=	>	%					
[#]		#	@	\	&	§							

1) Space

## Menu overview

Your phone has many functions, and they are available to you from menus.

### Select function:

- ▶ When the phone is in **idle status**, press **MENU** ▶ Use the control key  to scroll to the required function ▶ Confirm with **OK**

**Return to idle status:** ▶ Press and hold the key 

Messages	—	CallsList			→ p. 11
		Netw.MBX			→ p. 11
Alarm Clock	—	Activation			→ p. 11
		Wake-up time			→ p. 12
Audio Settings	—	Handset Volume			→ p. 12
		Ringer Volume			→ p. 12
		Ringer Melody	—	External Calls	→ p. 13
				Internal Calls	*)
				Alarm Clock	→ p. 13
		AdvisoryTones			→ p. 13
		Battery Low			→ p. 13
		Ring Tones			→ p. 13
Answer Machine	—	Play Messages			→ p. 11
		Net Mailbox			→ p. 11
Settings	—	Date/Time			→ p. 8
		Handset	—	Language	→ p. 7
				Auto Answer	→ p. 8
				Reset Handset	→ p. 13
		Base	—	Call list type	—
					Missed Calls
					All Calls
				System PIN	→ p. 13
				Base Reset	→ p. 13
				Additional	—
					Echo mode
				ECO DECT	—
					No Radiation
				Listening in	*)

\*) No function on Gigaset A116



Not all functions described in this user guide are available in all countries.

# Index

- 
- A**
- Accepting a call . . . . . 8
  - Answer . . . . . 8
  - Authorisation . . . . . 15
- 
- B**
- Base
    - connecting . . . . . 6
    - getting started . . . . . 6
    - resetting . . . . . 13
  - Batteries
    - charge level . . . . . 3
    - charging . . . . . 7
    - inserting . . . . . 7
    - technology . . . . . 17
  - Broken display . . . . . 5
- 
- C**
- Call list . . . . . 11
  - Care . . . . . 16
  - Care of the device . . . . . 16
  - Changing pause after line seizure . . . . . 14
  - Changing pause after recall key . . . . . 14
  - Changing ringtone melody . . . . . 13
  - Changing the call volume . . . . . 12
    - during a call . . . . . 8
  - Changing the dialling mode . . . . . 14
  - Changing the display language . . . . . 7, 13
  - Changing the receiver volume . . . . . 8
  - Changing the ringer volume . . . . . 12
  - Changing the system PIN . . . . . 13
  - Character charts . . . . . 18
  - Charging time of handset . . . . . 17
  - Contact with liquid . . . . . 16
  - Contents of the package . . . . . 6
  - Control key . . . . . 3
    - accessing display functions . . . . . 4
- 
- D**
- Directory
    - entry . . . . . 9
    - functions . . . . . 9
    - opening . . . . . 9
  - Display
    - broken . . . . . 5
    - Display functions . . . . . 4
    - Display keys . . . . . 4
      - functions . . . . . 3, 4
    - Displaying the name of the caller . . . . . 9
    - Disposal . . . . . 16
- 
- E**
- Echo mode . . . . . 14
  - ECO DECT . . . . . 12
  - Emergency numbers
    - not possible . . . . . 5
  - Enabling/disabling advisory tones . . . . . 13
  - Enabling/disabling ringtones . . . . . 13
  - Enabling/disabling the battery tone . . . . . 13
  - End call key . . . . . 3
  - Enter special characters . . . . . 3
  - Entering characters . . . . . 18
  - Entering letters . . . . . 18
  - Environment . . . . . 15
- 
- H**
- Handset
    - overview . . . . . 3
    - resetting . . . . . 13
    - setting up . . . . . 7
    - switching on/off . . . . . 8
  - Hash key . . . . . 3
  - Hearing aids . . . . . 5
- 
- I**
- Insert a dialling pause . . . . . 3
- 
- K**
- Key 1 . . . . . 3
  - Keys
    - control key . . . . . 3
    - end call key . . . . . 3
    - hash key . . . . . 3
    - recall key . . . . . 3
    - star key . . . . . 3
    - talk key . . . . . 3
- 
- L**
- Liquid . . . . . 16
  - List type . . . . . 11
  - Listening to message on the network mailbox . . . . . 11
  - Lock/unlock the keypad . . . . . 3
- 
- M**
- Making a call . . . . . 8
  - Making calls . . . . . 8
  - Medical equipment . . . . . 5
  - Menu overview . . . . . 19
  - Message lists . . . . . 10
  - Microphone . . . . . 3

<b>N</b>	
Network mailbox	
dialling . . . . .	3
entering number . . . . .	11
listening to message . . . . .	11
Network mailbox list . . . . .	11
Number	
dialling from the directory . . . . .	9
displaying . . . . .	9
entering . . . . .	8
<b>O</b>	
On/off key . . . . .	3
Operating time of handset . . . . .	17
<b>P</b>	
PABX	
operation with . . . . .	14
Phone jack . . . . .	6
Phone settings . . . . .	12
Power adapter . . . . .	5, 6
<b>Q</b>	
Quick dial keys . . . . .	10
<b>R</b>	
Recall key . . . . .	3
changing pause . . . . .	14
Redial list . . . . .	10
Reset	
base . . . . .	13
handset . . . . .	13
Ringtone volume . . . . .	12
Router	
operation with . . . . .	14
<b>S</b>	
Safety precautions . . . . .	4, 5
Setting the date . . . . .	8
Setting the flash time . . . . .	14
Setting the language . . . . .	7, 13
Setting the time . . . . .	8
Setting the wake-up time . . . . .	12
Settings . . . . .	12
Star key . . . . .	3
Switch between pulse and tone dialling . . . . .	3
Switch the ringtone on/off . . . . .	3
Switching the alarm clock on and off . . . . .	12
<b>T</b>	
Talk key . . . . .	3
Technical details . . . . .	17
Tones and signals . . . . .	12
<b>U</b>	
Upper/lower case and digits . . . . .	3

Issued by

Gigaset Communications GmbH  
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2016

Subject to availability.

All rights reserved. Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)

Apple, the Apple logo and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Google, Android, Google Play and other brands are trademarks of Google Inc.