

Panasonic[®]


Operating Instructions

Multi-Function Printer


Model No. **KX-MB3150CX**

Do NOT connect the unit to a computer with the USB cable until prompted to do so during the setup of Multi-Function Station (CD-ROM).

1

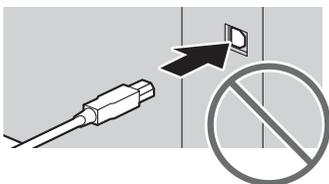

2

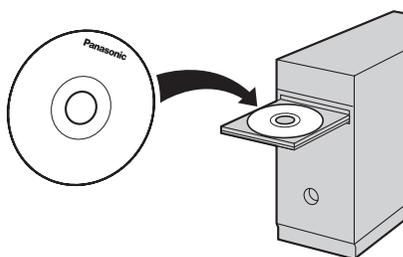

Be sure to use the USB cable supplied with this unit.

- This unit is compatible with Caller ID. You must subscribe to the appropriate service offered by your service provider/telephone company.
- Designed to be used in Middle East, Malaysia, Asia, Australia, New Zealand, Tunisia and Africa according to the location setting feature. The default setting is Middle East. To change the location setting, see page 63 (feature #114).

Note for Australian and New Zealand users:

- We recommend to change the recording paper type setting to "Plain Paper". See page 65 (feature #383).

Thank you for purchasing a Panasonic product.

Designed to be used in Middle East, Malaysia, Asia, Australia, New Zealand, Tunisia and Africa according to the location setting feature.

The default setting is Middle East. To change the location setting, see page 63 (feature #114).

Caution:

- Do not rub or use an eraser on the printed side of the recording paper, as the print may smear.

For Australian and New Zealand users:

- This model is designed for the Australian and New Zealand network.

Notice for product disposal, transfer, or return:

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase the information from the memory before you dispose of, transfer or return the product.

Environment:

- Panasonic's strategic direction incorporates concern for the environment into all aspects of the product life cycle, from product development to energy saving designs; from greater product reusability to waste-conscious packaging practices.

Trademarks:

- Microsoft, Windows, Windows Vista, Internet Explorer and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Pentium is a trademark of Intel Corporation in the U.S. and other countries.
- Screen shots reprinted with permission from Microsoft Corporation.
- Adobe and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- 3M is a trademark or registered trademark of 3M Company.
- Avery is a registered trademark of Avery Dennison Corporation.
- XEROX is a registered trademark of Xerox Corporation.
- PCL is a trademark of Hewlett-Packard Company.
- All other trademarks identified herein are the property of their respective owners.

Copyright:

- This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© Panasonic Communications Co., Ltd. 2009

Available features by location setting

The following features may vary slightly depending on the location setting (#114 on page 63). Change the location setting to match where you use the unit.

| Feature/Code | Tunisia, Malaysia | Middle East, Africa | Asia | Australia | New Zealand | Page |
|---|----------------------|---------------------------|------|-----------|----------------|---------|
| Dialling mode [#][1][2][0] | ● | ● | ● | – | – | page 20 |
| TEL/FAX ring count [#][2][1][2] | ● | ● | ● | – | – | page 67 |
| Manual answer mode [#][4][0][4] | ● | ● | ● | – | – | page 67 |
| Distinctive Ring [#][4][3][0] | – | ● | ● | ● | ● | page 61 |
| Fax ring pattern (Distinctive Ring feature) [#][4][3][1] | – | ● | ● | – | – | page 61 |
| Silent fax ring count [#][4][3][6] | ● | ● | ● | – | – | page 69 |

For your safety

Laser radiation

CLASS 1 LASER PRODUCT



The printer of this unit utilises a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Laser diode properties

Laser output : Max. 6.5 mW
Wavelength : 760 nm – 800 nm
Emission duration : Continuous

LED light

CLASS 1M LED PRODUCT



Do not view directly with optical instruments.

LED light of CIS properties

LED radiation output : Max. 1 mW
Wavelength : Red 630 nm typ.
Green 520 nm typ.
Blue 465 nm typ.
Emission duration : Continuous


Fuser unit



During or immediately after printing, the fuser unit (①) gets hot. This is normal. Do not touch the fuser unit.

Note:

- The area near the recording paper exit (②) may also get warm. This is normal.

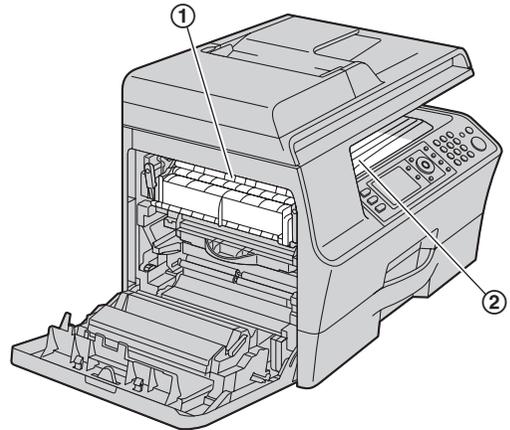

For best performance

Toner cartridge and drum cartridge

- When replacing the toner cartridge or drum cartridge, do not allow dust, water, or liquids to come in contact with the drum. This may affect print quality.
- For optimal performance, genuine Panasonic toner cartridges and drum cartridges are recommended. We cannot be responsible for problems that may be caused by a non-Panasonic toner cartridge or drum cartridge:
 - Damage to the unit
 - Poor print quality
 - Improper operation

Toner cartridge

- Do not leave the toner cartridge out of the protective bag for a long time. It will decrease the toner life.

Drum cartridge

- Read the instructions on page 13 before you begin installation of the drum cartridge. After you have read them, open the drum cartridge protective bag. The drum cartridge contains a photosensitive drum. Exposing it to light may damage the drum. Once you have opened the protective bag:
 - Do not expose the drum cartridge to light for more than 3 minutes.
 - Do not touch or scratch the black drum surface.
 - Do not place the drum cartridge near dust or dirt, or in a high humidity area.
 - Do not expose the drum cartridge to direct sunlight.
- To extend the life of the drum cartridge, the power switch should never be turned OFF immediately after printing. Leave the power turned ON for a minimum of 30 minutes after printing.

Location


- To avoid malfunction, do not position the unit near appliances such as TVs or speakers which generate an intense magnetic field.

Static electricity

- To prevent static electricity damage to the interface connectors or other electrical components inside the unit, touch a grounded metal surface before touching the components.

Environment

- Keep the unit away from electrical noise generating devices, such as fluorescent lamps and motors.
- The unit should be kept free from dust, high temperature and vibration.
- The unit should not be exposed to direct sunlight.
- Do not place heavy objects on top of the unit. When you leave the unit unused for a long period of time, unplug this unit from the power outlet.
- The unit should be kept away from heat sources such as heaters, kitchen stoves, etc. Damp basements should also be avoided.
- During the printing process, heat is used to fuse toner onto the page. As a result, it is normal for the machine to produce an odour during and shortly after printing. Be sure to use this unit in an area with proper ventilation.
- Do not cover slots or openings on the unit. Inspect the air circulation vents regularly and remove any dust build-up with a vacuum cleaner (①).

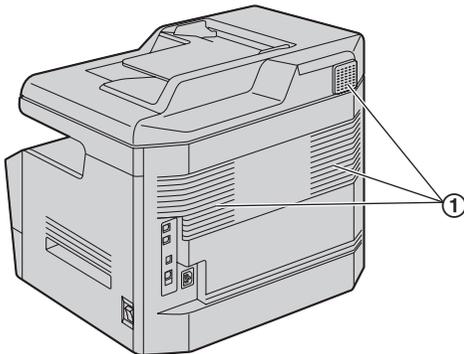




Routine care

- Wipe the outer surface of the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder.

Moving the unit

The unit is heavy. It is highly recommended that two people handle this unit.

When moving the unit, hold by the grips (①) on both sides.

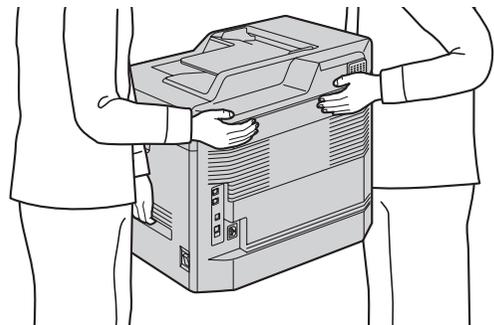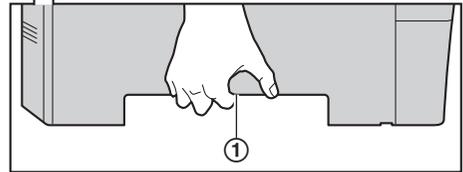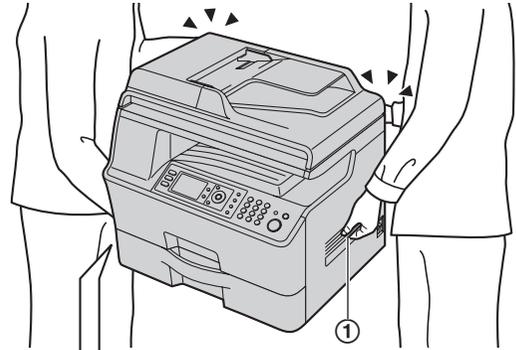

Illegal copies

- **It is unlawful to make copies of certain documents.**

Copying certain documents may be illegal in your country. Penalties of fines and/or imprisonment may be imposed on those found guilty. The following are examples of items that may be illegal to copy in your country.

- Currency
- Bank notes and checks
- Bank and government bonds and securities
- Passports and identification cards
- Copyright material or trademarks without the consent of the owner
- Postage stamps and other negotiable instruments

This list is not inclusive and no liability is assumed for either its completeness or accuracy. In case of doubt, contact your legal counsel.

Important Information

Notice:

- Install your machine near a supervised area to prevent illegal copies from being made.

1. Introduction and Installation

Accessories

- 1.1 Supplied accessories 9
- 1.2 Accessory information 10

Finding the Controls

- 1.3 Button descriptions..... 10
- 1.4 Display descriptions 11
- 1.5 Overview 12

Installation

- 1.6 Toner cartridge and drum cartridge..... 13
- 1.7 Recording paper..... 16

2. Preparation

Connections and Setup

- 2.1 Connections 19
- 2.2 Turning the power switch ON..... 20
- 2.3 Dialling mode..... 20
- 2.4 Selecting the operation mode (Scan/Copy/Fax)
..... 21

Document Requirements

- 2.5 Setting the original..... 21

Volume

- 2.6 Adjusting the volume 23

Initial Programming

- 2.7 Date and time 23
- 2.8 Your logo..... 24
- 2.9 Your fax number 25
- 2.10 Configuring the unit to access the LAN 25
- 2.11 Installing Multi-Function Station 26
- 2.12 Starting Multi-Function Station 28

3. Printer

Printer

- 3.1 Printing from Windows applications 30
- 3.2 Printing a received email attachment
automatically (LAN connection only) 31

4. Scanner

Scanner

- 4.1 Scanning from the unit (Push Scan)..... 33
- 4.2 Scanning from a computer (Pull Scan)..... 35

5. Copier

Copy

- 5.1 Making a copy 37
- 5.2 More copying features 39

6. Fax

Sending Faxes

- 6.1 Sending a fax manually 44
- 6.2 Storing items for the navigator directory..... 46
- 6.3 Sending a fax using navigator directory 47
- 6.4 Broadcast transmission 47
- 6.5 Sending an electronic document as a fax
message from your computer..... 49

Receiving Faxes

- 6.6 Selecting the way to use your unit..... 49
- 6.7 Receiving a fax automatically – Auto answer
ON..... 50
- 6.8 Receiving a fax manually – Auto answer OFF
..... 51
- 6.9 Displaying a received fax document..... 52
- 6.10 Using the unit with an answering machine... 54
- 6.11 Receive polling (retrieving a fax placed on
another fax machine) 54
- 6.12 Junk fax prohibitor (preventing fax reception
from undesired callers)..... 55
- 6.13 Receiving a fax on your computer..... 56
- 6.14 Web fax preview (LAN connection only)..... 56

7. Caller ID

Caller ID

- 7.1 Caller ID service..... 58
- 7.2 Viewing and calling back using caller
information 59
- 7.3 Editing a caller's telephone number before
calling back/storing..... 59
- 7.4 Erasing caller information..... 60
- 7.5 Storing caller information 60

8. Distinctive Ring

Distinctive Ring

- 8.1 Distinctive Ring (Fax Stream Duet/FaxAbility)
service..... 61
- 8.2 Using two or more phone numbers on a single
telephone line..... 61
- 8.3 Using three or more phone numbers on a
single telephone line 61
- 8.4 Programming the ring pattern assigned for fax
..... 61

9. Programmable Features

Features Summary

- 9.1 Programming..... 62
- 9.2 Basic features 63
- 9.3 Fax features 67
- 9.4 Copy features 73
- 9.5 PC print features 75
- 9.6 Scan features 77
- 9.7 LAN features 79
- 9.8 Network features (LAN connection only)..... 81

10. Useful Information

Useful Information

- 10.1 Character entry 83
- 10.2 Status of the unit..... 84
- 10.3 Cancelling the operations..... 85

Option

- 10.4 Lower input tray (optional)..... 85
- 10.5 Setting the lower input tray..... 86

11.Help

Reports and Displays

- 11.1 Report messages **87**
- 11.2 Display messages **88**

Troubleshooting

- 11.3 When a function does not work **91**

12.Paper Jams

Jams

- 12.1 Recording paper jam **100**
- 12.2 Document jams (Automatic document feeder)
..... **106**

13.Cleaning

Cleaning

- 13.1 Cleaning the white plates and glass **107**
- 13.2 Cleaning the document feeder rollers **108**

14.General Information

Printed Reports

- 14.1 Reference lists and reports **109**

Specifications

- 14.2 Specifications **109**

Copyrights


- 14.3 Information of copyrights and licenses **112**

15.Index


- 15.1 Index **122**

1.1 Supplied accessories


- ① Toner cartridge (starter)*1



- ② Drum cartridge




- ③ CD-ROM






- ④ Quick reference guide



- ⑤ Quick installation guide ⑥ USB cable

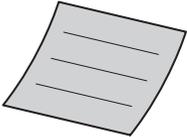

- ⑦ Power cord
(Use the appropriate power cord for where you use the unit.)



- ⑧ Telephone line cord
(Use the appropriate telephone line cord for where you use the unit.)



*1 Prints about 1,000 pages at ISO/IEC 19752 standard page.

Note:

- Save the original carton and packing materials for future shipping and transportation of the unit.
- After unpacking the product, take care of the packing materials and/or power plug cap appropriately.

1.2 Accessory information

To ensure that the unit operates properly, we recommend the use of Panasonic toner cartridge and drum cartridge.

■ Replacement accessory

– Toner cartridge

- **Model No. (Part No.): KX-FAT401A/KX-FAT401E**
- Prints about 5,000 pages at ISO/IEC 19752 standard page.

– Drum cartridge

- **Model No. (Part No.): KX-FAD402A/KX-FAD402E**

■ Optional accessory


– Lower input tray (page 85)

- **Model No. (Part No.): KX-FAP106A/KX-FAP106E**

Note:

- ISO/IEC 19752 standard is as follows:
 - Environment: $23 \pm 2 \text{ }^\circ\text{C}$ / $50 \pm 10\%$ RH
 - Print mode: Continuous printing

1.3 Button descriptions

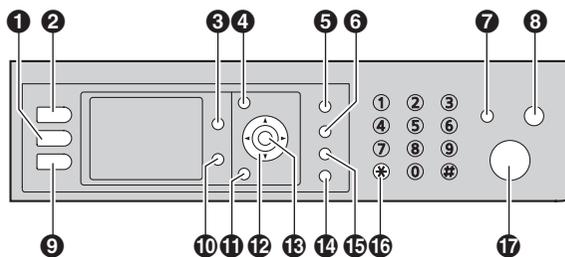

① [Copy]

- To switch to copy mode (page 21, 37).

② [Scan]

- To switch to scan mode (page 21, 33).

③ [Advance]^{*1}

- To switch to the basic/advance settings.

④ [Menu]

- To start or exit programming.

⑤ [Caller ID]

- To use Caller ID features (page 59).

⑥ [Redial][Pause]

- To redial the last number dialed. If the line is busy when you send a fax, the unit will automatically redial the number 2 or more times.
- To insert a pause during dialling.

⑦ [Fax Auto Answer]

- To turn the auto answer setting ON/OFF (page 50).

⑧ [Stop]

- To stop an operation or programming session.

⑨ [Fax]

- To switch to fax mode (page 21, 44).

⑩ [Duplex]

- To make duplex copies (page 40).
- To scan or send 2-sided originals (page 35, 45).

⑪ [Back]^{*1}

- To return to the previous display.
- To erase a character/number.

⑫ Navigator key^{*1}

- To select desired settings.
- To adjust the volume (page 23).
- To search for a stored item (page 47).

⑬ [Set]^{*1}

- To store a setting during programming.

⑭ [Monitor]

- To initiate dialling.
When you press **[Monitor]** while receiving a call, you will be able to hear the other party, but the other party will not be able to hear you.

15 [Flash]

- To access special telephone services or for transferring extension calls.

16 [Tone]


- To change from pulse to tone temporarily during dialling when your line has rotary/pulse service.

17 [Start]

- To copy a document (page 37).
- To scan a document (push scan) (page 33).
- To send a fax (page 44).

*1 See page 12 for details.

1.4 Display descriptions

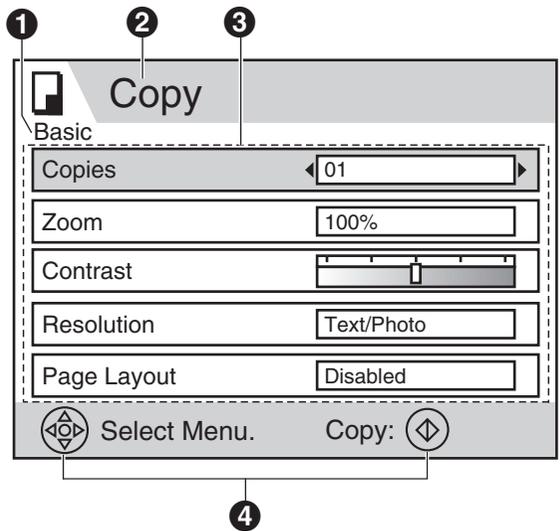**1 Feature mode**

- Displays the feature mode status.

2 Status bar

- Displays the operation mode (page 21).
- Displays date and time (page 23).
- Displays error messages (page 88).

3 Main display

- Displays the feature settings.
- Displays received fax documents (page 52).
- Displays error messages (page 88).

4 Button operation guide

- Displays the available buttons for the corresponding operations.


Note:

- The displayed menu items may be different depending on the operation. To select a menu item not shown on the current page, scroll up or down by using the navigator key.

1. Introduction and Installation

1.4.1 Display and buttons

The following buttons can be used to navigate through operations or to select items shown on the display.

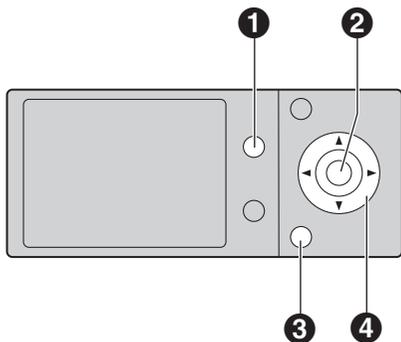

1 [Advance]

- To change the display between basic and advanced feature modes.
- To change the feature settings during operation.

2 [Set]

- To store a setting during programming.
- To place “√” and select the item, or remove “√” and cancel the selected item.

3 [Back]


- To return to the previous display.
- To exit an operation while maintaining the settings.

4 Navigator key

- To select the item shown on the display.
- To select features or feature settings during programming.
- To navigate to the next operation.
- To scroll a displayed image (page 52).

1.5 Overview

1.5.1 Front view

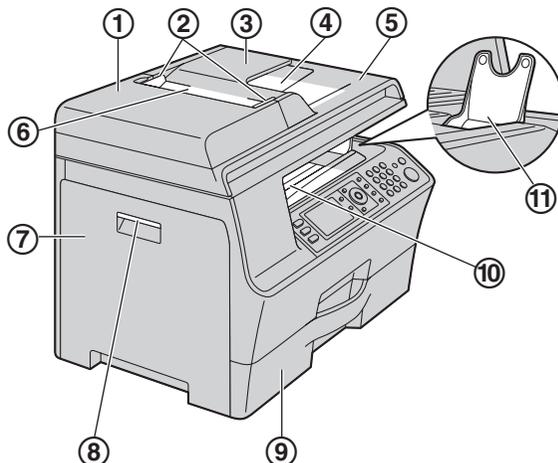

① ADF (Automatic Document Feeder) cover

② Document guides

③ Document tray

④ Document exit

⑤ Document cover

⑥ Document entrance

⑦ Left cover

⑧ Left cover open lever

⑨ Standard input tray


⑩ Recording paper exit

- The paper exit area of this unit can hold up to approximately 100 sheets of printed paper (the number of sheets may vary depending on the usage environment). Remove the printed paper before the recording paper exit becomes full.

⑪ A4/letter paper stacker

- We recommend opening the A4/letter paper stacker when using A4 or letter-size recording paper. Do not open it when using legal-size recording paper.
- For A4-size, slide the stacker to the rightmost position, then open it. For letter-size, just open the stacker (no need to slide it).
- The A4/letter paper stacker may not be shown in all illustrations.

1.5.2 Rear view

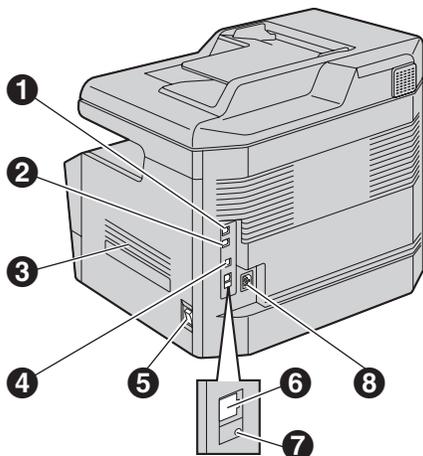

- ❶ Telephone line jack
- ❷ External telephone jack
- ❸ Speaker
- ❹ USB interface connector
- ❺ Power switch
- ❻ LAN interface connector
 - 10Base-T/100Base-TX
- ❼ LED
- ❽ Power inlet


1.6 Toner cartridge and drum cartridge

The supplied toner cartridge is a starter toner cartridge.


Caution:

- Read the following instructions before you begin installation. After you have read them, open the drum cartridge protective bag. The drum cartridge contains a photosensitive drum. Exposing it to light may damage the drum. Once you have opened the protective bag:
 - Do not expose the drum cartridge to light for more than 3 minutes.
 - Do not touch or scratch the black drum surface inside of the drum cartridge.
 - Do not place the drum cartridge near dust or dirt, or in a high humidity area.
 - Do not expose the drum cartridge to direct sunlight.
- Do not leave the toner cartridge out of the protective bag for a long time. It will decrease the toner life.
- We cannot be responsible for any damage to the unit or degradation of print quality which may occur from the use of a non-Panasonic toner cartridge and drum cartridge.
- Do not add toner to the toner cartridge.

- 1 Remove the toner cartridge (❶) and drum cartridge (❷) from the protective bags.

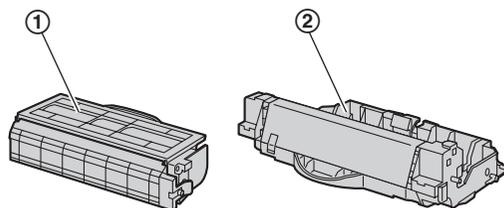


- 2 Shake the toner cartridge horizontally more than 5 times.

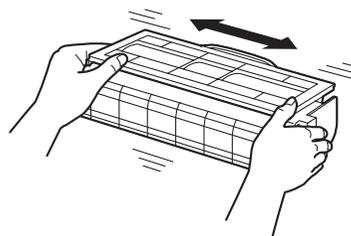


- 3 Detach the protective cover (❸) from the toner cartridge, and remove the protective sheet (❹) from the drum cartridge.

1. Introduction and Installation


- Do not touch or scratch the black drum or toner surfaces.

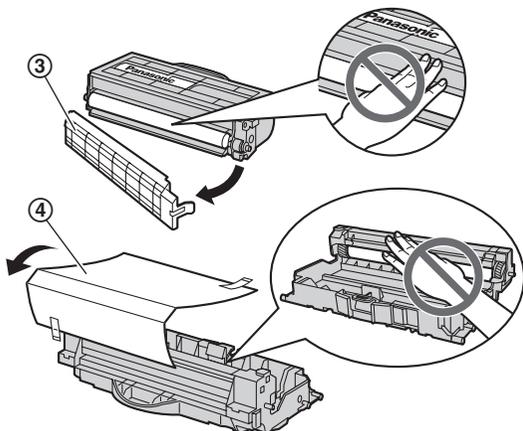



- 4 Insert the toner cartridge (5) into the drum cartridge (6) from the upper angle.

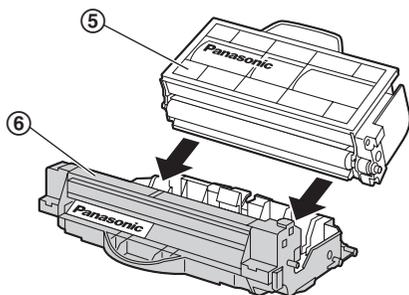

- 5 Push down the toner cartridge (7) to lock into place.
- Make sure that the triangles (8) match to install the toner cartridge correctly.

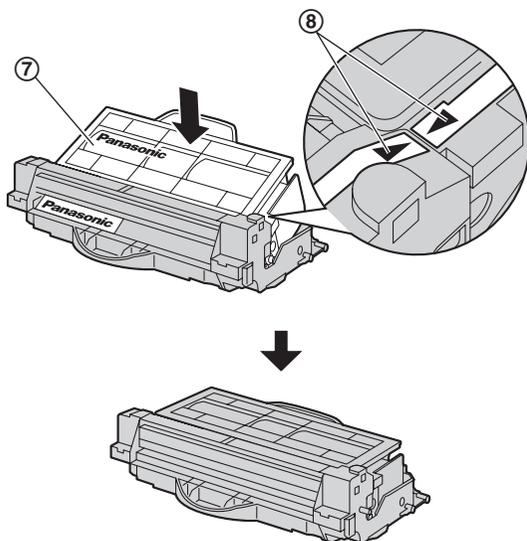



- 6 Hold the left cover release lever (9), and then pull open the left cover (10).

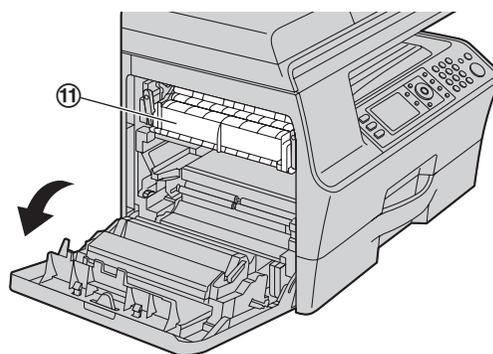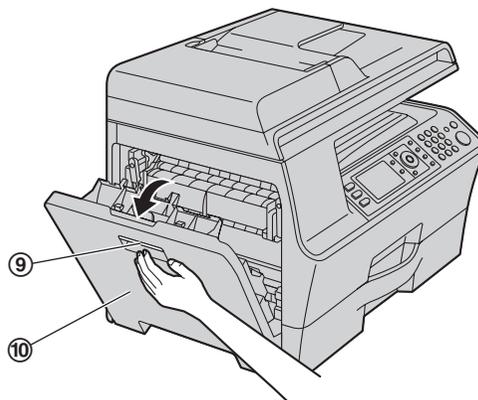


Caution:

- During or immediately after printing, the fuser unit (11) gets hot. Wait until the fuser unit cools down.

- 7** Install the drum and toner unit (12) by holding the centre handle.
- Make sure that the arrows (13) match to install the drum and toner unit correctly.

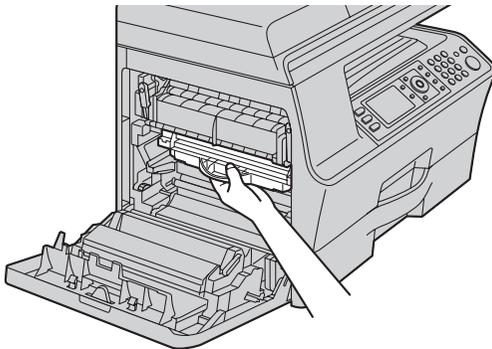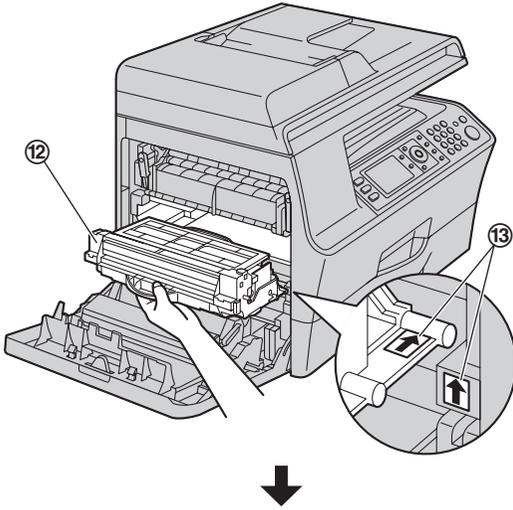

- 8** Close the left cover.

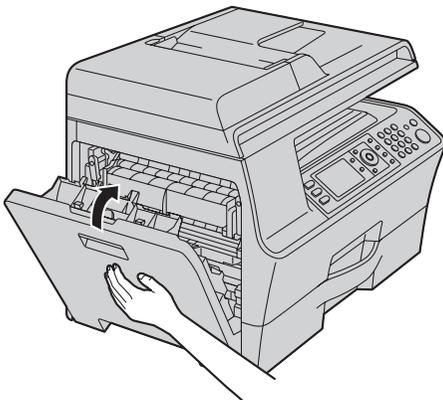

- "Change Supplies Toner Low"
- "Change Supplies Toner Empty"


Note:

- To check the drum life and quality, please print the printer test list (page 109) and refer to page 111 for information on the drum life. If printing quality is still poor or "Replace Drum" appears on the display, replace the toner cartridge and drum cartridge.
- To ensure that the unit operates properly, we recommend the use of **Panasonic toner cartridge and drum cartridge**. See page 10 for accessory information.
- See page 110 for information on toner life and drum life.

Cleaning the drum cartridge


Important:

- If the groove of the drum cartridge is dirty, lines or dirty patterns may appear on printed sheets. Be sure to remove any toner remaining on the inside of the drum cartridge to maintain the print quality.
- A cleaner for the drum cartridge is supplied with the replacement toner cartridge. If you replace only the toner cartridge, clean the drum cartridge using the cleaner.
- Insert the cleaner (14) into the left groove (15) and move it from side to side at least 3 times to clean the inside of the drum cartridge. Repeat this for the right groove (16).

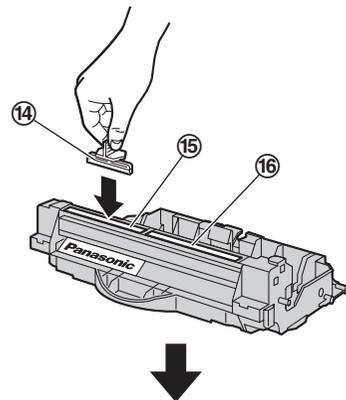

When to replace the toner cartridge and the drum cartridge

When the display shows the following, replace the toner cartridge.

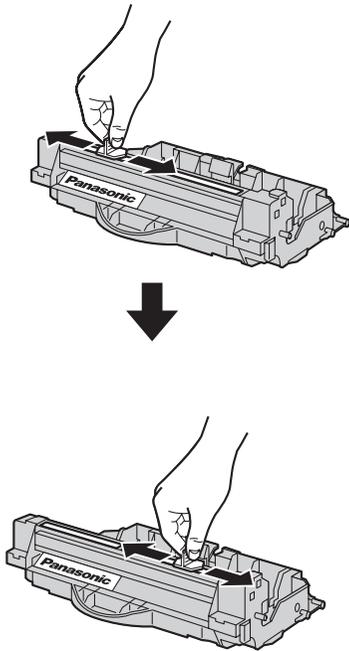

Note:

- Be sure to clean all the way to the edge of each groove.

Waste disposal method

Waste material should be disposed of under conditions which meet all national and local environmental regulations.

Toner save feature

If you want to reduce toner consumption, set the toner save setting to ON (feature #482 on page 66). The toner cartridge will last approximately 20 % longer. This feature may lower the print quality.

1.7 Recording paper

The standard input tray unit can hold:

- Up to 520 sheets of 75 g/m² paper.
- Up to 470 sheets of 80 g/m² paper.
- Up to 410 sheets of 90 g/m² paper.
- Up to 100 sheets of 105 g/m² paper.
- Up to 25 transparencies.*¹
- Up to 25 labels.*¹

*1 Only when using the unit as a printer. See page 31 for details.


- The number of sheets may vary due to paper thickness variation during paper manufacturing.
- **The unit is set for printing A4-size thin paper by default.**
 - **To use other paper sizes, change the recording paper size setting (feature #380 on page 65).**
 - **To use plain or thick paper, change the recording paper type setting (feature #383 on page 65).**

Note for recording paper:


- We recommend that you test paper (especially special sizes and types of paper) on the unit before purchasing large quantities.
- Do not use the following types of paper:
 - Paper with cotton and/or fibre content that is over 20 %, such as letterhead paper or paper used for resumes
 - Extremely smooth or shiny paper, or paper that is highly textured
 - Coated, damaged or wrinkled paper
 - Paper with foreign objects attached, such as tabs or staples
 - Paper that has dust, lint or oil stains
 - Paper that will melt, vaporize, discolour, scorch or emit dangerous fumes near 200 °C, such as vellum paper. These materials may transfer onto the fusing roller and cause damage.
 - Moist paper
 - Inkjet paper
- Some paper is designed to be printed on only one side. Try printing on the other side of the paper if you are not happy with the print quality, or if misfeeding occurs.
- For proper paper feeding and best print quality, we recommend using long-grained paper.
- Do not use paper of different types or thicknesses at the same time. This may cause paper jams.
- Do not use paper printed from this unit for double-sided printing with other copiers or printers. This may cause paper jams.
- To avoid curling, do not open paper packs until you are ready to use the paper. Store unused paper in the original packaging, in a cool and dry location.
- For customers who live in high humidity areas: Please be sure to store paper in an air-conditioned

room at all times. If you print using moist paper, it may cause paper jam.


- 1 Pull the standard input tray (①) until it clicks into place, then pull it completely out, lifting the front part of the tray.

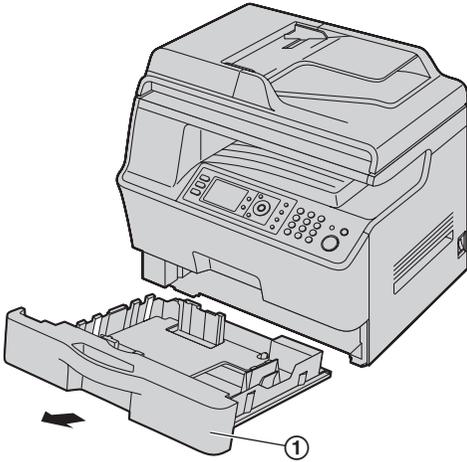

- 2 Before loading a stack of paper, fan the paper to prevent paper jams.

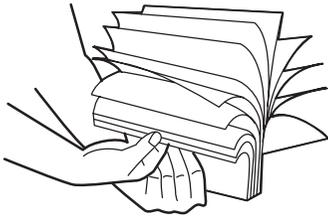


- 3 Pinch the right side of the recording paper guide (②), then slide it to match the paper size mark. Pinch the front and back recording paper guides (③) at the same time, then slide them together to match the paper size mark.

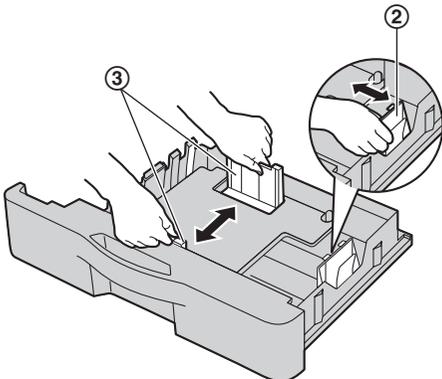


- 4 Load the paper, print-side up (④).

Important:

- Push down to lock the plate (⑤) in the standard input tray, if it has come up.

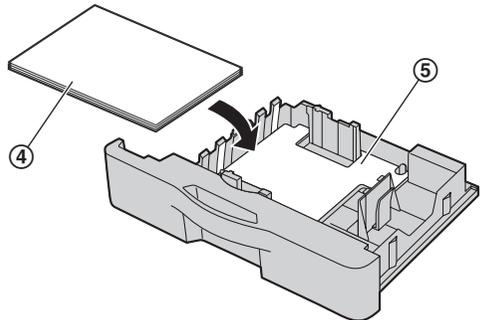


- Make sure that the recording paper guides (⑥) are at the paper size mark and the recording paper is under the paper limit mark (⑦). The paper should not be loaded over the tab (⑧).

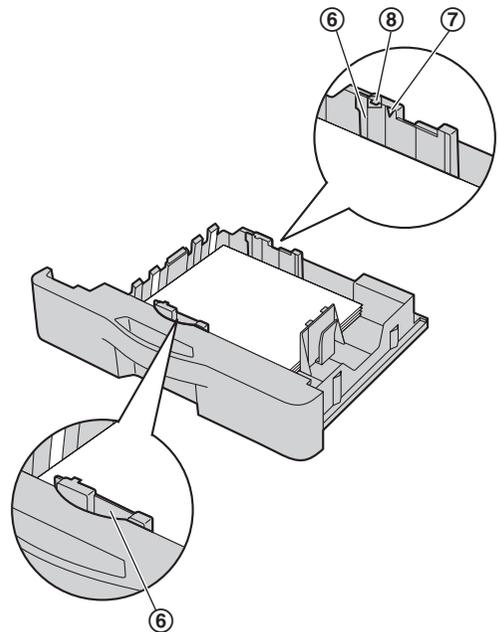

1. Introduction and Installation

- 5 Insert the standard input tray into the unit, lifting the front part of the tray. Then push it completely into the unit.

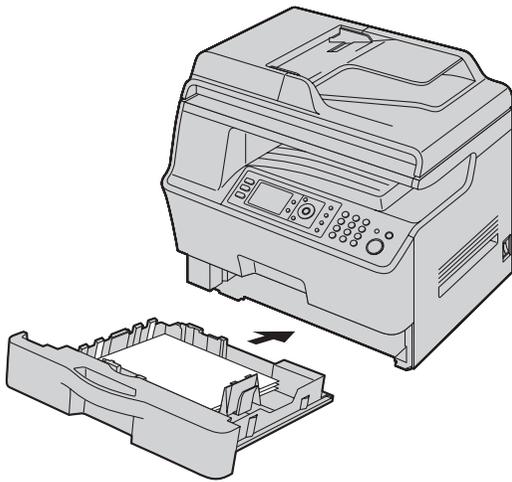


Note:

- If the paper is not loaded correctly, re-adjust the paper guides, or the paper may jam.
- If the standard input tray does not close, the plate in the standard input tray may not be in the locked position. Push the paper down and make sure that the paper is lying flat in the standard input tray.


Caution for the standard input tray

- Do not drop the standard input tray.

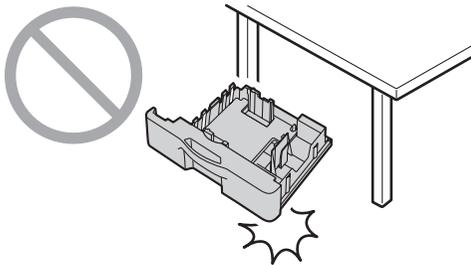

- Hold the standard input tray with both hands when removing or installing. The standard input tray weighs approximately 4.8 kg when fully loaded with recording paper.

Do not touch the plate (9) on the left side of the standard input tray.

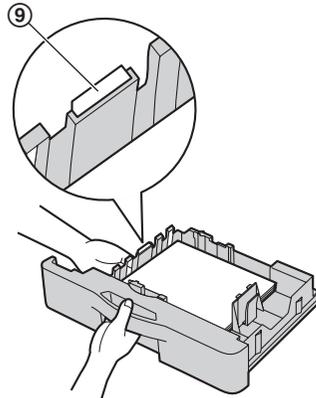


Approx. 4.8 kg

2.1 Connections

Caution:

- When you operate this product, the power outlet should be near the product and easily accessible.
- Be sure to use the telephone line cord supplied with this unit.
- Do not extend the telephone line cord.

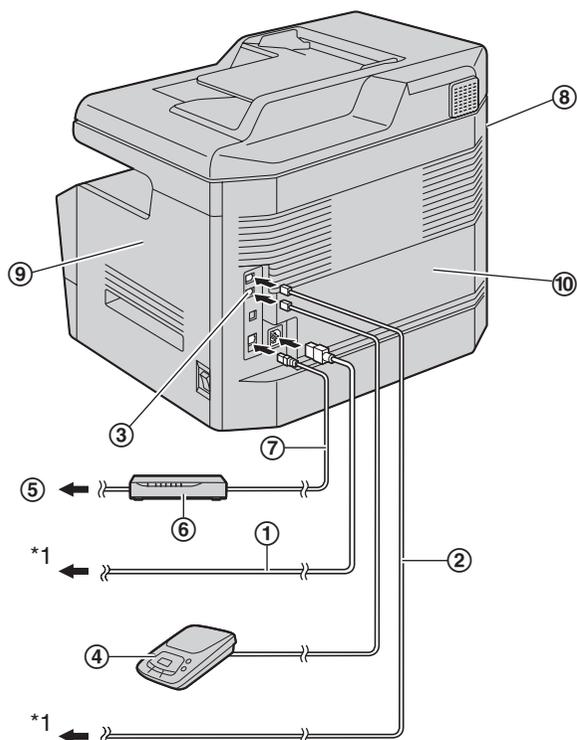

- ① Power cord
 - Connect to a power outlet (220–240 V, 50/60 Hz).
- ② Telephone line cord
 - Connect to a single telephone line jack.
- ③ [EXT] jack
 - You can connect an answering machine or an extension telephone. Remove the stopper if attached.
- ④ Answering machine (not supplied)
- ⑤ To the Internet
- ⑥ Network router/Network hub (not supplied)
 - Also connect networked computers.
- ⑦ LAN cable (not supplied)
 - To assure continued emission limit compliance, use only shielded LAN cable (category 5 straight cable).


*1 The power cord or telephone line cord may differ slightly. Use the appropriate power cord or telephone line cord for where you use the unit.

IMPORTANT NOTICE FOR THE USB CONNECTION

- DO NOT CONNECT THE UNIT TO A COMPUTER WITH THE USB CABLE UNTIL PROMPTED TO DO SO DURING THE SETUP OF MULTI-FUNCTION STATION (page 26).

Note:

- Do not place any objects within the following distance:
 - Left side (⑧): 40 cm
 - Right side (⑨) and back side (⑩): 10 cm
- If any other device is connected to the same telephone line, this unit may disturb the network condition of the device.
- If you use the unit with a computer and your internet provider instructs you to install a filter (⑪), please connect it as follows.

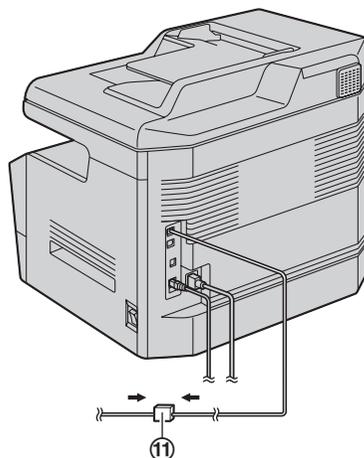

- A telephone handset cannot be connected directly to this unit. To talk to the other party, please connect an extension telephone.

Designed to be used in Middle East, Malaysia, Asia, Australia, New Zealand, Tunisia and Africa according to the location setting feature.

The default setting is Middle East. To change the location setting, see page 63 (feature #114).


Using network router/network hub

- We recommend using network routers/network hubs (⑥) under secure network environments. Consult your network administrator for firewall settings, etc.
- The warranty does not cover damage due to security problems or any inconveniences relating to it.

2. Preparation

2.2 Turning the power switch ON

Turn the power switch to the ON position (①).

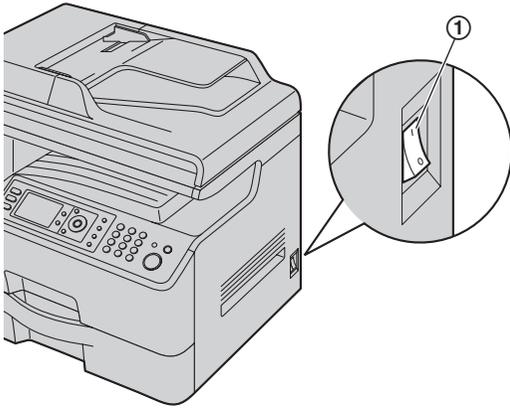


2.3 Dialling mode

Important:

- Not available when “Australia” or “New Zealand” is selected in feature #114 on page 63.


If you cannot dial (page 44), change this setting according to your telephone line service.

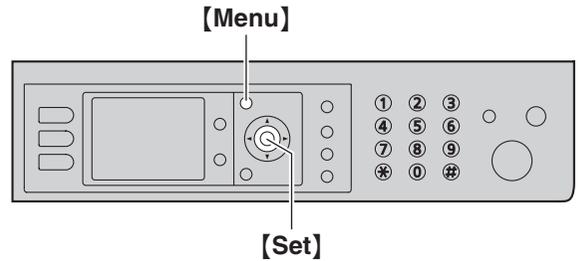

- 1 **[Menu]**
- 2 Press **[*][1][2][0]** to display “Dialling Mode”.
- 3 Press **[1]** or **[2]** to select the desired setting.
[1] “Pulse”: For rotary/pulse dial service.
[2] “Tone” (default): For tone dial service.
- 4 **[Set]**
- 5 Press **[Menu]** to exit.

2.4 Selecting the operation mode (Scan/Copy/Fax)

You can select the desired mode by pressing one of the following buttons.

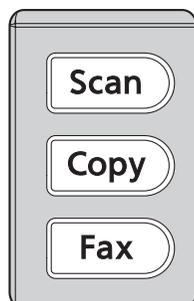


- **[Scan]:** Select this mode when using the unit as a scanner (page 33).
- **[Copy]:** Select this mode when using the unit as a copier (page 37).
- **[Fax]:** Select this mode when using the unit as a fax machine (page 44).

Note:

- The default operation mode is the copy mode.
- You can change the default operation mode (feature #463 on page 66) and the timer before returning to the default operation mode (feature #464 on page 66).

2.5 Setting the original

2.5.1 Using the scanner glass

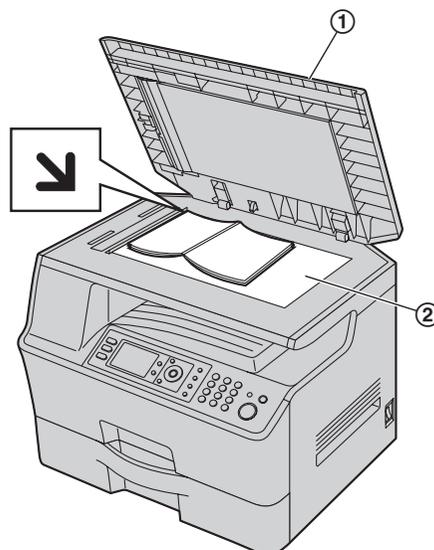


- 1 Open the document cover (①).
- 2 Place the document **FACE DOWN** on the scanner glass (②), aligning the top left of the document with the corner where the mark is positioned.
- 3 Close the document cover.

Note:


- Confirm that there are no documents in the automatic document feeder.
- Place the original onto the scanner glass gently. To avoid malfunction, do not press down too firmly.
- If the original is a thick book, do not close the document cover.
- Confirm that any ink, paste or correction fluid has dried completely.
- Effective scanning area is shown by the shaded area:

Effective scanning area

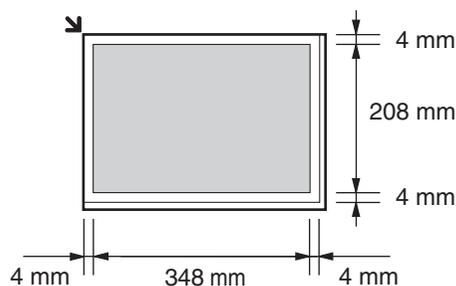

2. Preparation

2.5.2 Using the automatic document feeder

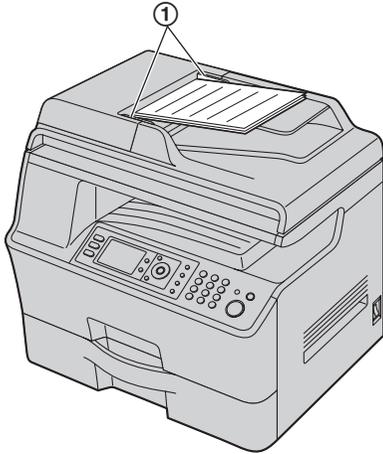


- 1 Insert the document (up to 50 pages) FACE UP into the feeder until a single beep is heard.
- 2 Adjust the width of the document guides (①) to fit the actual size of the document.


Note:

- Confirm that there are no documents on the scanner glass.
- Confirm that any ink, paste or correction fluid has dried completely.
- Remove clips, staples or other fasteners.
- Do not insert the following types of documents (Make a copy of the document using the scanner glass and set the copy instead.):
 - Chemically treated paper such as carbon or carbonless duplicating paper
 - Electrostatically charged paper
 - Badly curled, creased or torn paper
 - Paper with a coated surface
 - Paper with printing on the opposite side that can be seen through the other side, such as newsprint
- The total height of the documents when laid flat, must be less than 5 mm. If the documents exceed the capacity of the automatic document feeder, they may fall or cause a jam in the feeder.
- To set a document with a width of less than 210 mm, we recommend using the scanner glass to copy the original document onto A4 or letter-size paper, then setting the copied document for better results.
- Do not set documents that do not satisfy the requirements of size and weight. Make a copy of the document using the scanner glass and set the copy.
- Available document size, document weight and effective scanning area are as follows:


Minimum document size

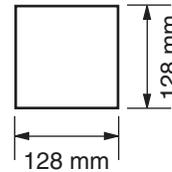

Maximum document size

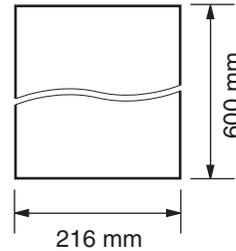

Effective scanning area

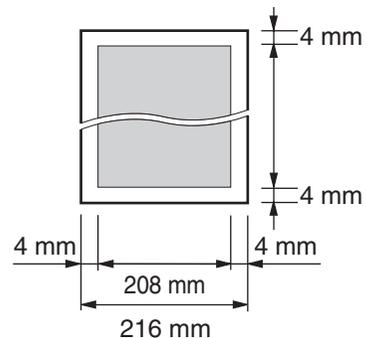

- Shaded area will be scanned.
- When using the unit as a scanner (page 33, 35), the effective scanning length depends on the selected paper size.


Document weight

- Single sheet:
45 g/m² to 90 g/m²
- Multiple sheets:
60 g/m² to 80 g/m²

2.6 Adjusting the volume

Important:

- Before adjusting the volume, set the operation mode to fax mode. If the [Fax] light is OFF, turn it ON by pressing [Fax].

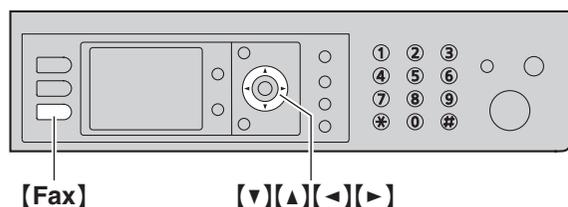

Ringer volume

1. Press [▼] or [▲] repeatedly to select "Ringer Volume".
2. Press [◀] or [▶].

To turn the ringer OFF


1. Press [▼] or [▲] repeatedly to select "Ringer Volume".
2. Press [◀] repeatedly to display "Ringer Off" in the status bar.
 - The unit will not ring.
 - To turn the ringer back ON, press [▶].

Monitor volume

1. While using the monitor, press [▼] or [▲] repeatedly to select "Monitor Volume".
2. Press [◀] or [▶].

2.7 Date and time

We recommend you to set the date and time. The other party will receive your unit's date and time as the header information.

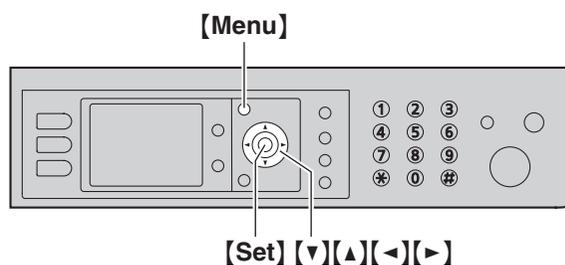

- 1 [Menu] → [✳][1][0][1] → [Set]
- 2 Enter the current date/month/year/hour/minute. Press [✳] repeatedly to select 12-hour time entry or 24-hour time entry.
 - If you selected 12-hour time entry, press [▼] or [▲] repeatedly to select "AM" or "PM".

Example: 10 August, 2009 10:15 PM (12 hour clock format)

1. Press [▼] or [▲] repeatedly to select "Date".
→ [◀]/[▶]
2. Press [1][0] [0][8] [2][0][0][9].

D:10/M:08/Y:2009

3. [Set]
4. Press [▼] or [▲] repeatedly to select "Time".
→ [◀]/[▶]
5. Press [✳], then press [1][0][1][5].
6. Press [▼] or [▲] repeatedly to select "PM".

10:15PM

7. [Set]
- 3 Press [Menu] to exit.

Note:

- Your unit's date and time will be used as the header information for the following:
 - When sending as an attached file to an email destination directly from this unit (Scan to email address) (page 34).
 - When sending faxes (page 44).
- If the date and time is not set correctly, the other party will receive an incorrect date and time as their header. This may confuse the other party.

To correct a mistake

Press [◀] or [▶] to move the cursor to the incorrect number, and make the correction.

2. Preparation


If you have subscribed to a Caller ID service

The date and time will be automatically set according to the received caller information.

- To use this feature, make sure the time adjustment is turned ON (feature #226 on page 65).
- If the time has not previously been set, Caller ID will not adjust the clock.
- You can turn this feature OFF (feature #226 on page 65).

2.8 Your logo

You can program your logo (name, company name, etc.) so that it appears on the top of each page sent.

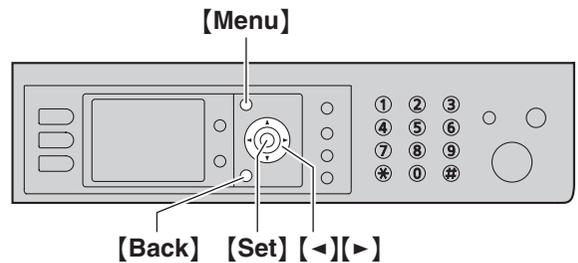

- 1 **[Menu]** → **[#][1][0][2]** → **[Set]**
- 2 Enter your logo, up to 30 characters (see page 83 for character entry). → **[Set]**
- 3 Press **[Menu]** to exit.


To correct a mistake

Press **[<]** or **[>]** to move the cursor to the incorrect character, and make the correction.

- To erase all characters, press and hold **[Back]**.

2.9 Your fax number

You can program your fax number so that it appears on the top of each page sent.

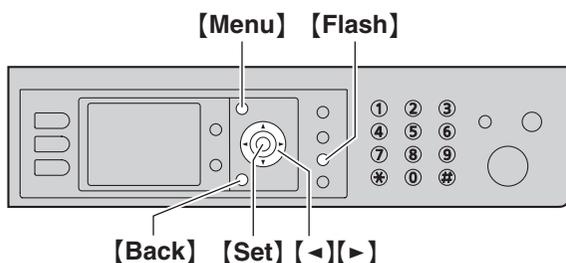

- 1 **[Menu]** → **[*][1][0][3]** → **[Set]**
- 2 Enter your fax number, up to 20 digits.
 - To enter a “+”, press **[*]**.
 - To enter a space, press **[*]**.
 - To enter a hyphen, press **[Flash]**.
 - To erase a number, press **[Back]**.
- 3 **[Set]**
- 4 Press **[Menu]** to exit.

To correct a mistake

Press **[Left Arrow]** or **[Right Arrow]** to move the cursor to the incorrect number, and make the correction.

- To erase all numbers, press and hold **[Back]**.

2.10 Configuring the unit to access the LAN

You can print documents, scan documents, receive faxes or send faxes using a computer connected to the LAN. To enable these features, you need to set the IP address, subnet mask, and default gateway for the unit.

Important:

- **Consult your network administrator when setting the IP address, subnet mask, and default gateway.**

2.10.1 Setting up automatically with a DHCP server

Your situation:

- When only one unit is connected to the LAN.

If your network administrator manages the network with a DHCP (Dynamic Host Configuration Protocol) server, it will automatically assign an IP (Internet Protocol) address, subnet mask, and default gateway to the unit.

- 1 After connecting the LAN cable to the unit and the computer, turn the power switch ON.
 - The IP address, subnet mask, and default gateway will be set automatically.
- 2 Install Multi-Function Station on the computer that you want to use it with. See page 26 for details.

Note:

- You can connect two or more units and assign IP addresses automatically with a DHCP server, but we recommend assigning static IP addresses manually for each unit to avoid network access and configuration troubles.

2.10.2 Setting up manually

Your situation:

- When your network administrator does not manage the network with a DHCP server.
- When two or more units are connected to the LAN.

You need to assign an IP address, subnet mask, and default gateway manually.

- 1 **[Menu]**
- 2 Press **[*][5][0][0]** to display “DHCP”.
- 3 Press **[0]** to select “Disabled”. → **[Set]**
- 4 Set each item.

For the IP address:

1. Press **[5][0][1]** to display “IP Address”.
2. **[Set]** → Enter the IP address of the unit. → **[Set]**

For the subnet mask:

1. Press **[5][0][2]** to display “Subnet Mask”.
2. **[Set]** → Enter the subnet mask of the network. → **[Set]**

2. Preparation

For the default gateway:

1. Press **[5][0][3]** to display “Default Gateway”.
 2. **[Set]** → Enter the default gateway of the network. → **[Set]**
- 5 Press **[Menu]** to exit.
- 6 Install Multi-Function Station on the computer that you want to use it with. See page 26 for details.

To correct a mistake in the IP address, subnet mask, or default gateway

Press **[◀]** or **[▶]** to move the cursor to the incorrect number, and make the correction.

2.10.3 Setting the computer for PC fax reception

You need to select the computer that will be used for receiving faxes.

Important:

- Make sure the PC fax setting is set to “Always” or “Connected” beforehand (feature #442 on page 70).
- Make sure the fax preview mode is turned OFF beforehand (feature #448 on page 56).

- 1 **[Menu]** → **[⌂][4][4][3]** → **[Set]**
- 2 Press **[▼]** or **[▲]** repeatedly to select the desired computer. → **[Set]**
- 3 Press **[Menu]** to exit.

Note:

- If the unit is not connected to the LAN, the computer connected to the unit by USB is assigned as the default computer for PC fax reception.
- To select the desired computer easily, change the PC name beforehand (page 29).

2.11 Installing Multi-Function Station

2.11.1 Required computer environment

Panasonic Multi-Function Station software enables the unit to carry out the following functions:

- Printing on plain paper, thin and thick paper, transparencies and labels
- Scanning documents and converting an image into text with Readiris OCR software
- Scanning from other applications for Microsoft® Windows® that support TWAIN scanning and WIA scanning (Windows XP/Windows Vista®, USB connection only)
- Storing, editing or erasing items in directories using your computer
- Programming the features using your computer
- Sending, receiving fax documents using your computer

To use Multi-Function Station on your computer, the following are required:

Operating System:

Windows 98/Windows Me/Windows 2000/Windows XP/Windows Vista

CPU:

Windows 98/Windows Me/Windows 2000: Pentium® II or higher processor

Windows XP: Pentium III or higher processor

Windows Vista: Pentium 4 or higher processor

RAM:

Windows 98/Windows Me: 64 MB (128 MB or more recommended)

Windows 2000/Windows XP: 128 MB (256 MB or more recommended)

Windows Vista: 512 MB (1,024 MB or more recommended)

Other Hardware:

CD-ROM drive

Hard disk drive with at least 150 MB of available space

USB interface

LAN interface (10Base-T/100Base-TX)

Other:

Internet Explorer® 5.0 or later

Warning:

- To assure continued emission limit compliance;
 - use only shielded USB cable (Example: Hi-Speed USB 2.0 certified cable).
 - use only shielded LAN cable (category 5 straight cable).
- To protect the unit, use only shielded USB cable in areas where thunderstorms occur.

2.11.2 Installing Multi-Function Station on a computer

- Install Multi-Function Station (CD-ROM) before connecting the unit to a computer with the USB cable. If the unit is connected to a computer with the USB cable before installing Multi-Function Station, the [Found New Hardware Wizard] dialogue box will appear. Click [Cancel] to close it.
- The screenshots shown in these instructions are for Windows XP and are included for reference only.
- The screenshots shown in these instructions may differ slightly from those of the actual product.
- Software features and appearance are subject to change without notice.
- If you are also using KX-MB200/KX-MB700/KX-FLB880 series, see page 99.

- 1 Start Windows and exit all other applications.
 - For Windows 2000, Windows XP and Windows Vista users, you must be logged in as an administrator in order to install Multi-Function Station.
- 2 Insert the supplied CD-ROM into your CD-ROM drive.
 - If the [Select Language] dialogue box appears, select the language that you want to use with this software. Click [OK].
 - If the installation does not start automatically: Click [Start]. Choose [Run...]. Type "D:\Install" (where "D" is the drive letter of your CD-ROM drive). Click [OK].
(If you are not sure what the drive letter is for your CD-ROM drive, use Windows Explorer and look for the CD-ROM drive.)

3 [Easy Installation]

- The installation will start automatically.


- 4 When the setup program starts, follow the on-screen instructions.
 - Readiris OCR software (page 34) and Device Monitor (page 84) will also be installed.

- 5 The [Connect Type] dialogue box appears.

For USB connection:

1. [Connect directly with a USB cable.] → [Next]
 - The [Connect Device] dialogue box will appear.

2. Connect the unit to a computer with the USB cable (①), then click [Next].

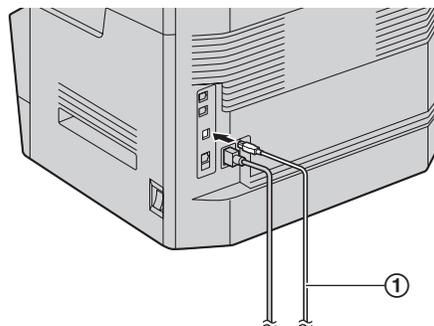

- If the unit is connected to your computer, the model name will be automatically detected.
- You can change the name of the unit if necessary.

3. Click [Install], then follow the on-screen instructions.
 - The files will be copied to your computer.

For LAN connection:

1. [Connect via the Network.] → [Next]
 - The [Select a Network Device] dialogue box will appear.
2. Check [Select in the searched list] and select the unit from the list.
 - If the name of the desired unit is not displayed on the list, and the IP address for the unit has been assigned, check [Direct input] and enter the IP address.
3. [Next]
 - You can change the name of the unit if necessary.
4. Click [Install], then follow the on-screen instructions.
 - The files will be copied to your computer.

Important notice

If you are using Windows XP or Windows Vista, a message may appear after connecting the unit with the USB cable. This is normal and the software will not cause any difficulties with your operating system. You can continue the installation with no problem. This kind of message is displayed:

● For Windows XP users

"The software you are installing for this hardware has not passed Windows Logo testing to verify its compatibility with Windows XP."

● For Windows Vista users

"Would you like to install this device software?"

To view or install the operating instructions data

1. Start Windows and insert the supplied CD-ROM into your CD-ROM drive.
2. Click [Operating Instructions], then follow the on-screen instructions to view or install the operating instructions in PDF format.

2. Preparation

- Adobe® Reader® is required to view the operating instructions.

Note:

- If the screen prompts you to insert the CD-ROM for the operating system when installing Multi-Function Station, insert it into your CD-ROM drive.
- If you install the operating instructions, you can view it anytime by clicking [?] on the Multi-Function Station launcher.

To use another unit with the computer

You need to add the printer driver for each unit, as follows.

1. Start Windows and insert the supplied CD-ROM into your CD-ROM drive.
2. [Modify] → [Add Multi-Function Station Driver]. Then follow the on-screen instructions.

Note:

- You cannot connect more than one unit to the same computer at the same time (USB connection only).

To modify the software (To add or uninstall each component)

You can select the components to install or uninstall anytime after the installation.

For Windows 2000, Windows XP and Windows Vista users, you must be logged in as an administrator in order to modify Multi-Function Station.

1. Start Windows and insert the supplied CD-ROM into your CD-ROM drive.
2. [Modify] → [Modify Utilities]. Then follow the on-screen instructions.

To uninstall the software


For Windows 2000, Windows XP and Windows Vista users, you must be logged in as an administrator in order to uninstall Multi-Function Station.

[Start] → [All Programs] or [Programs] → [Panasonic] → the unit's name → [Uninstall]. Then follow the on-screen instructions.

2.12 Starting Multi-Function Station

[Start] → [All Programs] or [Programs] → [Panasonic] → the unit's name → [Multi-Function Station]

- Multi-Function Station will appear.

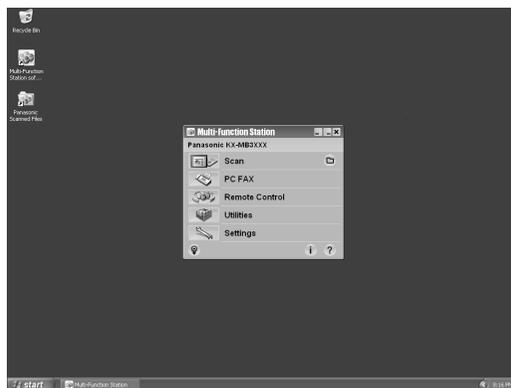

[Scan] (page 35)

- To scan and display the scanned images.
- To scan and create an image file.
- To scan and send by email.
- To scan and convert an image into editable text data.

[PC FAX]

- To send a document created on the computer as a fax message (page 49).
- To display a fax document received on the computer (page 56).

[Remote Control] (page 84)

- To program the features.
- To store, edit or erase items in directories.
- To view items in the journal report or Caller ID list.
- To store caller information into directories.
- To store or erase items for broadcast transmission.

[Utilities]

- To start the Multi-Function Viewer (page 35).
- To start the Device Monitor (page 84).
- To start the OCR application (page 34).
- To start the configuration web page (page 62, 84) (LAN connection only).

[Settings] (page 29)

- To change the general settings.
- To change the settings for scanning.
- To change the folder for saving the received fax documents (page 53).

[?]

- For detailed instructions on Multi-Function Station.
- To view operating instructions.

[Lightbulb]

- To display usage tips.

[i]

- To display information about Multi-Function Station.

Note:

- You can confirm if the unit is connected to your computer by using Device Monitor (page 84).
- Computer features (printing, scanning, etc.) may not function properly in the following situations:
 - When the unit is connected to a computer that was custom-built by the user.
 - When the unit is connected to the computer via a PCI card or other expansion card.
 - When the unit is connected to another piece of hardware (such as a USB hub or interface adapter) and not connected directly to the computer.

To change the settings

You can change the settings for Multi-Function Station beforehand.

1. Select [**Settings**] from Multi-Function Station.
2. Click the desired tab and change the settings. → [**OK**]

[General]

- [**Launcher display setting**]: To select the display type of the launcher.
- [**OCR Path**]: To select the OCR software.
- [**PC name list up on device**] (LAN connection only): To select whether or not your computer name is displayed on the unit.
- [**PC name**] (LAN connection only): The computer name that will be displayed on the unit.

[Scan]

- [**Save to**]: To select the folder where the scanned image or the received fax document will be saved.
- [**Viewer**][**File**][**Email**][**OCR**][**Custom**]: To change scanning settings for Multi-Function scan application.

Note:

- Assign a unique name for the [**PC name**] to avoid errors, or the scanned image may be sent to the incorrect computer.

To select the default Email software

The default Email software is used when using "4.1.3 Scan to Email", page 33.

You can select the default Email software as follows.

For Windows 98/Windows Me/Windows 2000:

1. [**Start**] → [**Settings**] → [**Control Panel**] → [**Internet Options**] → [**Programs**] → [**E-mail**]
2. Select the desired MAPI-compliant Email software such as [**Outlook Express**], etc. → [**OK**]

For Windows XP:

1. [**Start**] → [**Control Panel**] → [**Internet Options**] → [**Programs**] → [**E-mail**]
2. Select the desired MAPI-compliant Email software such as [**Outlook Express**], etc. → [**OK**]


For Windows Vista:

1. [**Start**] → [**Control Panel**] → [**Internet Options**] → [**Programs**] → [**Set programs**] → [**Set program access and computer defaults**]
 - If the [**User Account Control**] dialogue box appears, click [**Continue**].
2. [**Custom**]
3. Select the desired MAPI-compliant Email software such as [**Windows Mail**], etc. from [**Choose a default e-mail program**]. → [**OK**]

3.1 Printing from Windows applications

You can print a file created in a Windows application. For example, to print from WordPad, proceed as follows:

- 1 Open the document you want to print.
- 2 Select **[Print...]** from the **[File]** menu.
 - The **[Print]** dialogue box will appear.
For details about the **[Print]** dialogue box, click **[?]**, then click the desired item.

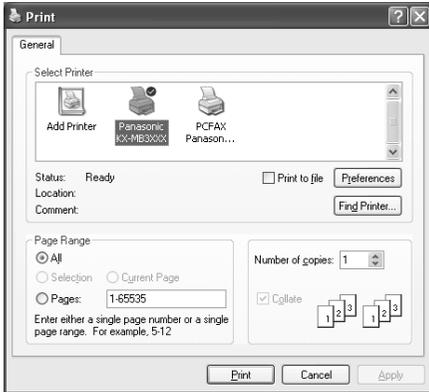

Note:

- For Microsoft PowerPoint®, select **[Color]** or remove the check next to **[Grayscale]** in the print dialogue so that coloured or grey objects will be printed in greyscale properly.

- 3 Select the unit's name as the active printer.
 - If you have changed the name of the unit when installing, select that name from the list.
 - To change the printer settings, proceed as follows.

For Windows 98/Windows Me:

Click **[Properties]**, then click the desired tab. Change the printer settings, then click **[OK]**.

For Windows 2000:

Click the desired tab and change the printer settings.

For Windows XP/Windows Vista:

Click **[Preferences]**, then click the desired tab. Change the printer settings, then click **[OK]**.

- 4 Click **[Print]** or **[OK]**.
 - The unit will start printing.

Note:

- To stop printing from the unit, see page 85.
- To load paper, see page 16.
- For details about the paper specifications, see page 110.
- If a printing error occurs, the Device Monitor (page 84) will start automatically and display the error information.

Setting the printer properties

You can change the printer setting in step 3. We recommend that you test paper (especially special sizes and types of paper) on the unit before purchasing large quantities.

You can change or display the settings on the following tabs.

[Basic]: Paper size, media type, duplex, etc.

[Output]: Number of prints, collate, etc.

[Quality]: Quality, contrast, toner save feature, etc.

[Effects]: Watermark, overlay.

[Profile]: Saving the desired settings, selecting the saved settings, etc.

[Support]: Version information.

Note:

- Select the desired media type on the **[Basic]** tab according to the recording paper.

| Recording paper type | Media type |
|---|-----------------------|
| Plain paper 75 g/m ² to 90 g/m ² | [Plain Paper] |
| Thin paper 64 g/m ² to 75 g/m ² | [Thin Paper] |
| Thick paper 90 g/m ² to 165 g/m ² | [Thick Paper] |
| Transparency | [Transparency] |
| Label | [Label] |

- When printing from a computer, the printer properties setting overrides the following unit's programming features:
 - Media type setting (feature #383 on page 65)
 - Toner save setting (feature #482 on page 66)

3.1.1 Duplex printing

For example, to print from WordPad, proceed as follows:

- Plain paper and thin paper can be used.

- 1 Open the document you want to print.
- 2 Select **[Print...]** from the **[File]** menu.
- 3 Select the unit's name as the active printer.
 - For Windows 2000 users, go to step 5.
- 4 **For Windows 98/Windows Me:**
[Properties]
For Windows XP/Windows Vista:
[Preferences]
- 5 Click the **[Basic]** tab.
- 6 Select the desired duplex layout. → **[OK]**
 - Select **[None]** to deactivate this feature.
 - You can also change the duplex margin.
- 7 Click **[Print]** or **[OK]**.

3.1.2 Printing on special media

You can print not only on plain paper but also on special media (transparencies / labels).

- Please refer to page 110 for information on recording paper.
- To load paper, see page 16.

To print on transparencies

Use transparencies designed for laser printing. We recommend the following:

3M® CG3300/CG5000

- **Do not stack more than 25 transparencies at a time.**
- **After printing, place transparencies on a flat surface to cool and to prevent them from curling.**
- Do not re-use transparencies that have already been fed through the unit. This includes transparencies that have been fed through and ejected without being printed on.
- Some types of transparencies have instructions recommending which side to print on. If the print quality is poor, try printing on the other side of a new transparency.

To print on labels

Use labels designed for laser printing. We recommend the following:


Avery®

5160/5161/5162/5163/5164/5165/5167/5168

XEROX®

LWH100/LWH110/LWH120/LWH130/LWH140

- **Make sure the print side is FACE UP when loading the labels.**
- **Do not stack more than 25 labels at a time.**
- Do not use the following types of labels:
 - Labels that are wrinkled, damaged or separated from the backing sheet.
 - Any sheet of labels that has spaces in it where some of the labels have been removed.
 - Labels that do not completely cover the backing sheet as follows:

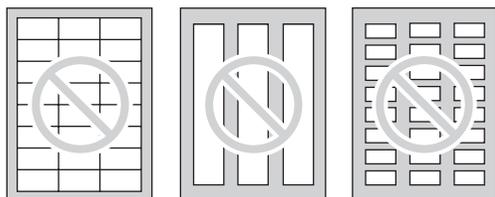


3.2 Printing a received email attachment automatically (LAN connection only)

If you configure the POP server settings beforehand, the unit will automatically print files attached to an email that are sent from a compatible unit via the Internet (**scan to email print**). This is useful if you want to print only attached files, without checking your emails.

Important:

- **The unit does not print email messages.**
- **The unit will only print attached files sent from a compatible unit, which can send emails directly (without using a computer).**
- **The attachment file formats that can be printed are as follows:**
 - TIFF
 - JPEG
 - PDF (Image type only. Such as files scanned from the unit, files scanned from the computer using Multi-Function Viewer, or received fax documents saved as an email attachment.)
- **Received emails and the attached files will be deleted automatically after printing.**

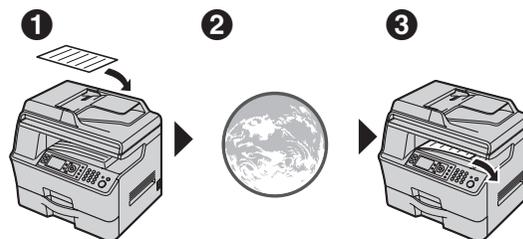

① Send from a compatible multi-function unit (Example: “4.1.5 Scan to email address (LAN connection only)”, page 34)

② Email is sent via the Internet (email server)

③ Receiving unit prints attached files

1 Start Multi-Function Station.

2 [Utilities] → [Configuration Web Page] → [Network Configuration]

3 Type “root” as the user name, then enter the password (feature #155 on page 64). → [OK]

4 Click the [Scan to Email Print] tab.

5 Set each item.

To activate this feature:

Select [Enabled] next to [Scan to Email Print].
→ [Submit]

To set the email server information:

1. Click [Edit] next to [Email Server].

2. Enter the email server and POP server information. → [Submit]

3. Printer

6 Close the web browser.

Note:

- This feature can be programmed only through the web browser interface (page 62).
- To view the recent scan to email print information, click [**List**] next to [**Email Print Log**] (page 82).
- If the attached file is too large or is in an unsupported format, it will not be printed properly.
- You can change the email checking interval (page 82) or header print setting (page 82).
- Consult your service provider or network administrator for details.


4.1 Scanning from the unit (Push Scan)

You can easily scan the document by using the operation panel on the unit. You can select one of the following scanning modes depending on how you intend to use the scanned image.

- Viewing using Multi-Function Viewer (Viewer)
- Saving as a file to your computer (File)
- Sending as an attached file to an email destination from your computer (Email)
- Using OCR software (OCR)
- Sending as an attached file to an email destination directly from this unit (Email address)
- Sending to an FTP server (FTP)

Note:

- When scanning a document, we recommend using the scanner glass rather than the automatic document feeder for better results.
- Do not open the document cover when scanning a document with the automatic document feeder.

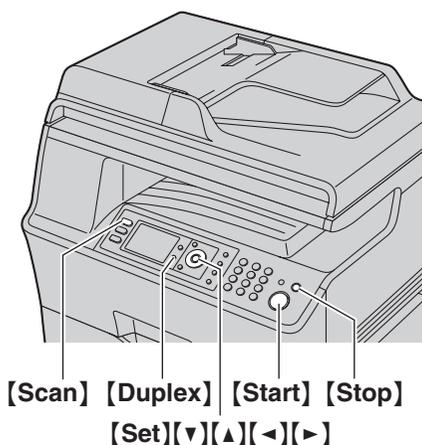

4.1.1 Scan to Multi-Function Viewer

- 1 Set the original (page 21).
- 2 **[Scan]**
- 3 Press **[v]** or **[^]** repeatedly to select “PC”. → **[Set]**
- 4 **For USB connection:**
Press **[v]** or **[^]** repeatedly to select “USB Host”. → **[Set]**
For LAN connection:
Press **[v]** or **[^]** repeatedly to select the computer to which you want to send the scanned image. → **[Set]**
- 5 Press **[v]** or **[^]** repeatedly to select “Viewer”. → **[Set]**

- 6 If necessary, change the scanning settings. Press **[v]** or **[^]** repeatedly to select the desired setting, then press **[<]** or **[>]**. → **[Set]**
- 7 **[Start]**
 - The scanned image will be displayed in the **[Multi-Function Viewer]** window after scanning. However, when you select PDF as a file format, the software that is associated to open PDF file will start.

Note:

- To stop scanning, see page 85.
- You can save the images in TIFF, JPEG, BMP or PDF formats.
- You can set the desired scan mode for scanning to your computer beforehand (feature #493 on page 77).
- The scanned image will be automatically saved in the folder selected in the **[Settings]** window (page 29).

4.1.2 Scan to save as a file

- 1 Set the original (page 21).
- 2 **[Scan]**
- 3 Press **[v]** or **[^]** repeatedly to select “PC”. → **[Set]**
- 4 **For USB connection:**
Press **[v]** or **[^]** repeatedly to select “USB Host”. → **[Set]**
For LAN connection:
Press **[v]** or **[^]** repeatedly to select the computer to which you want to send the scanned image. → **[Set]**
- 5 Press **[v]** or **[^]** repeatedly to select “File”. → **[Set]**
- 6 If necessary, change the scanning settings. Press **[v]** or **[^]** repeatedly to select the desired setting, then press **[<]** or **[>]**. → **[Set]**
- 7 **[Start]**
 - The scanned image will be automatically saved in the folder selected in the **[Settings]** window. To change the folder, see page 29.

Note:

- To stop scanning, see page 85.
- You can save the images in TIFF, JPEG, BMP or PDF formats.
- You can set the desired scan mode for scanning to your computer beforehand (feature #493 on page 77).

4.1.3 Scan to Email

You can send the scanned image as an email attachment using email software on your computer.

- 1 Set the original (page 21).
- 2 **[Scan]**

4. Scanner

- 3 Press [▼] or [▲] repeatedly to select “PC”. → [Set]
- 4 **For USB connection:**
Press [▼] or [▲] repeatedly to select “USB Host”. → [Set]
For LAN connection:
Press [▼] or [▲] repeatedly to select the computer to which you want to send the scanned image. → [Set]
- 5 Press [▼] or [▲] repeatedly to select “Email”. → [Set]
- 6 If necessary, change the scanning settings. Press [▼] or [▲] repeatedly to select the desired setting, then press [◀] or [▶]. → [Set]
- 7 [Start]
 - The email software will automatically start and the scanned image will be attached to a new email message.

Note:

- To select the default email software, see page 29.
- To stop scanning, see page 85.
- You can save the images in TIFF, JPEG or PDF formats.
- You can set the desired scan mode for scanning to your computer beforehand (feature #493 on page 77).
- The scanned image will be automatically saved in the folder selected in the [Settings] window (page 29).

4.1.4 Scan to OCR

With OCR software, you can convert an image into text data that can be edited with word processing software. Readiris OCR software can be installed when installing Multi-Function Station.

- 1 Set the original (page 21).
- 2 [Scan]
- 3 Press [▼] or [▲] repeatedly to select “PC”. → [Set]
- 4 **For USB connection:**
Press [▼] or [▲] repeatedly to select “USB Host”. → [Set]
For LAN connection:
Press [▼] or [▲] repeatedly to select the computer to which you want to send the scanned image. → [Set]
- 5 Press [▼] or [▲] repeatedly to select “OCR”. → [Set]
- 6 If necessary, change the scanning settings. Press [▼] or [▲] repeatedly to select the desired setting, then press [◀] or [▶]. → [Set]
- 7 [Start]
 - The scanned image will be displayed in the OCR window after scanning.

Note:

- To stop scanning, see page 85.
- You can save the images in TIFF, JPEG or BMP formats.
- For detailed instructions about OCR, select [Help].
- You can set the desired scan mode for scanning to your computer beforehand (feature #493 on page 77).
- The scanned image will be automatically saved in the folder selected in the [Settings] window (page 29).

4.1.5 Scan to email address (LAN connection only)

You can send the scanned image as an attachment without using email software.

Important:

- **Program the email server, SMTP server settings (page 77) and the email destinations (page 77) beforehand.**

- 1 Set the original (page 21).
- 2 [Scan]
- 3 Press [▼] or [▲] repeatedly to select “Email Address”. → [Set]
- 4 Enter the destination email address.
Using navigator key:
Press [▼], [▲], [◀] or [▶] repeatedly to select the desired destination.
Using dial keypad:
 1. Press [▼] or [▲] repeatedly to select “Temporary Address”. → [Set]
 2. Enter the email address using the dial keypad (page 83).
- 5 [Set]
- 6 If necessary, change the scanning settings. Press [▼] or [▲] repeatedly to select the desired setting, then press [◀] or [▶]. → [Set]
- 7 [Start]
 - The scanned image will be sent as an email attachment directly from this unit.

Note:

- You can search for an email address by initial.
Example: “Lisa”
 1. Perform steps 1 to 3 on “4.1.5 Scan to email address (LAN connection only)”, page 34.
 2. Press [5] repeatedly to display any name with the initial “L” (see page 83 for character entry).
 - To search for symbols, press [✕].
 3. Press [▼], [▲], [◀] or [▶] repeatedly to select “Lisa”.
 - To stop the search, press [Stop].
- To stop scanning, see page 85.
- You can save the images in TIFF, JPEG or PDF formats.

4.1.6 Scan to FTP server (LAN connection only)

You can send the scanned image to a folder on an FTP server.

Important:

- **Program the FTP server settings beforehand (page 78).**
- 1 Set the original (page 21).
 - 2 **[Scan]**
 - 3 Press **[▼]** or **[▲]** repeatedly to select “**FTP Server**”. → **[Set]**
 - 4 Press **[▼]** or **[▲]** repeatedly to select the destination to which you want to send the scanned image. → **[Set]**
 - 5 If necessary, change the scanning settings. Press **[▼]** or **[▲]** repeatedly to select the desired setting, then press **[←]** or **[→]**. → **[Set]**
 - 6 **[Start]**
 - The scanned image will be automatically saved in the selected folder on the FTP server.

Note:

- To stop scanning, see page 85.
- You can save the images in TIFF, JPEG or PDF formats.
- To display the scanned image, download the data to your computer beforehand.

4.1.7 Scanning 2-sided originals (automatic document feeder only)

You can scan 2-sided originals using the automatic document feeder.

- 1 Before pressing **[Start]** to start scanning, press **[Duplex]**.
- 2 Press **[▼]** or **[▲]** repeatedly to select the desired binding of the original.
 - “**Long Edge**”
 - “**Short Edge**”
- 3 **[Set]** → **[Start]**

4.2 Scanning from a computer (Pull Scan)

Note:

- When scanning a document, we recommend using the scanner glass rather than the automatic document feeder for better results.
- Do not open the document cover when scanning a document with the automatic document feeder.

4.2.1 Using Multi-Function scan application

By clicking an application icon, the selected application starts automatically after scanning.

- 1 Set the original (page 21).
- 2 Start Multi-Function Station. → **[Scan]**
- 3 Click the desired application icon.
 - When you click **[Custom]**, the pre-programmed application starts.
 - To cancel scanning while the documents is being scanned, click **[Cancel]**.

Note:

- You can change the scanning settings beforehand for each application (page 29).
- When you point to an application icon, the scanning settings for that application are displayed as a tooltip.
- The scanned image will be automatically saved in the folder selected in the **[Settings]** window (page 29).

4.2.2 Using Multi-Function Viewer

- 1 Set the original (page 21).
- 2 Start Multi-Function Station.
- 3 **[Utilities]** → **[Viewer]**
 - **[Multi-Function Viewer]** will appear.
- 4 Click the **[Scan]** icon in the **[Multi-Function Viewer]** window.
 - The unit's name dialogue box will appear.
- 5 If necessary, change the scanning settings on your computer.
 - To preview the scanned image, click **[Preview]**. You can drag the frame to specify the scanning area. If you change the scan settings, click **[Preview]** to refresh the scanned image. If you use the automatic document feeder, only the first page will be previewed. When you need to refresh the scanned image, set the document to preview again.
- 6 **[Scan]**
 - If you preview the scanned image using the automatic document feeder in step 5, set the document again and click **[Scan]**.

4. Scanner

- The scanned image will be displayed in the **[Multi-Function Viewer]** window after scanning.
- To save the scanned image, select **[Save As ...]** from the **[File]** menu.
- To cancel scanning while the document is being scanned, click **[Cancel]**.

Note:

- You can display images in applications that support TIFF, JPEG, PCX, DCX and BMP formats.
- You can save images in TIFF, JPEG, PCX, DCX, BMP or PDF formats.
- If the **[Select...]** button is displayed in **[Target Device]**, click **[Select...]** to select the unit from the list, and then click **[OK]**.
The **[Select...]** button will not be displayed when there is only one printer driver installed.
- You can move, copy and delete a file or page.

4.2.3 Using other applications

Multi-Function Station includes a TWAIN and WIA compliant scanner driver. You can also scan using other applications that support TWAIN or WIA scanning. For scanning example, proceed as follows:


- 1 Set the original (page 21).
- 2 Start an application that supports TWAIN or WIA scanning.
- 3 **For TWAIN scanning:**
Select **[Acquire Image...]** from the **[File]** menu.
For WIA scanning:
Select **[From Scanner or Camera...]** from the **[File]** menu.
 - The unit's name dialogue box will appear.
- 4 If necessary, change the scanning settings on your computer. → **[Scan]**
 - The scanned image will be displayed in the application window after scanning.
 - To cancel scanning while the document is being scanned, click **[Cancel]**.

Note:

- Scanning from WIA compliant applications is only available for Windows XP and Windows Vista, and only via a USB connection.
- Depending on the application used, the appearance may differ slightly.
- If the **[Select...]** button is displayed in **[Target Device]** when performing TWAIN scanning, click **[Select...]** to select the unit from the list, and then click **[OK]**.
The **[Select...]** button will not be displayed when there is only one printer driver installed.

5.1 Making a copy

5.1.1 Using the scanner glass

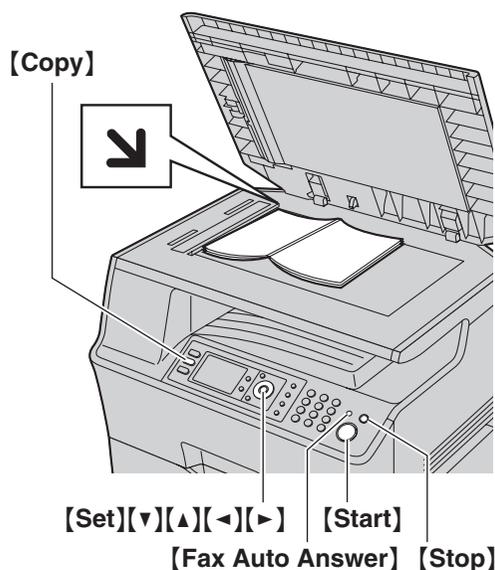

- 1 If the **[Copy]** light is OFF, turn it ON by pressing **[Copy]**.
- 2 Set the original (page 21).
- 3 If necessary, change the copy settings according to the type of document.
 - To change the number of copies, see page 37.
 - To select the contrast, see page 37.
 - To select the resolution, see page 37.
 - To select the zoom rate, see page 37.
- 4 **[Start]**
 - If the copy input tray prompt (feature #471 on page 74) is activated, select the desired recording paper size by pressing **[◀]** or **[▶]** repeatedly, then press **[Start]** again.
 - The unit will start copying.
- 5 After you finish copying, press **[Stop]** to reset the settings you set in step 3.

Note:

- To stop copying, see page 85.
- You can change the default operation mode (feature #463 on page 66) and the timer before returning to the default operation mode (feature #464 on page 66).
- If the **[Fax Auto Answer]** light is ON, the unit can receive faxes automatically even when in the copy mode.

To change the number of copies

1. Press **[▼]** or **[▲]** repeatedly to select “Copies”.
2. Enter the number of copies (up to 99).

3. [Set]

To select the contrast

Adjust this setting depending on the darkness or lightness of the document. 5 levels (low to high) are available.

1. Press **[▼]** or **[▲]** repeatedly to select “Contrast”.
2. Press **[◀]** or **[▶]**. → **[Set]**

Note:

- You can hold the previous contrast setting (feature #462 on page 65).

To select the resolution

1. Press **[▼]** or **[▲]** repeatedly to select “Resolution”.
2. Press **[◀]** or **[▶]** repeatedly to select the desired resolution.
 - “Text/Photo”: For both text and photographs.
 - “Text”: For text only.
 - “Photo”: For photographs, shaded drawings, etc.

3. [Set]

Note:

- You can change the default resolution (feature #461 on page 73).

To select zoom rate (enlargement / reduction)

1. Press **[▼]** or **[▲]** repeatedly to select “Zoom”.
2. Press **[◀]** or **[▶]** repeatedly to select the zoom rate that fits the size of your document and recording paper.
 - “100%”
 - “50%”
 - “200%”
 - You can enter the desired percentage from “25%” to “400%” specifically by using the dial keys.
 - Additional zoom rates can be selected according to the recording paper size setting (feature #380 on page 65 or feature #382 on page 65).

5. Copier

| Feature #380/#382 setting | Additional zoom rate |
|---------------------------|---|
| "Letter" | "A4→Letter" "Legal→Letter" "216×330→Letter"*1 "216×340→Letter"*1 |
| "A4" | "Letter→A4" "Legal→A4" "216×330→A4"*1 "216×340→A4"*1 |
| "Legal" | – |
| "216×330"*1 | "Legal→216×330"*1 "216×340→216×330"*1 |
| "216×340"*1 | "Legal→216×340"*1 |


*1 When you set feature #147 to "Inches", the numbers are displayed in inches.

3. [Set]


Note:

- Zoom copy is not available for the following features:
 - Quick ID copy feature (page 41)
 - Easy repeat feature (page 41)
 - Poster feature (page 41)
 - N in 1 feature (page 41)
 - Separate N in 1 feature (page 42)
 - Booklet feature (page 42)
- You can hold the previous zoom setting (feature #468 on page 73).
- **When using the scanner glass**, the unit will only enlarge the right top corner of the document starting from the ↙ mark on the unit.
- **When using the automatic document feeder**, the unit will only enlarge the centre of the upper part of the document. To make an enlarged copy of the bottom of the document, turn the document around, and then make a copy.


Example: 150 % enlarged copy Using the scanner glass (①):

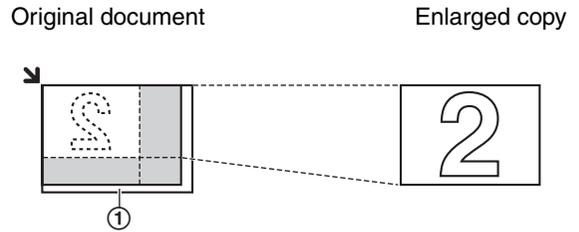


Using the automatic document feeder:

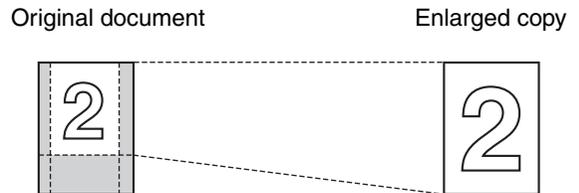


Example: 70 % reduced copy Using the scanner glass (①):

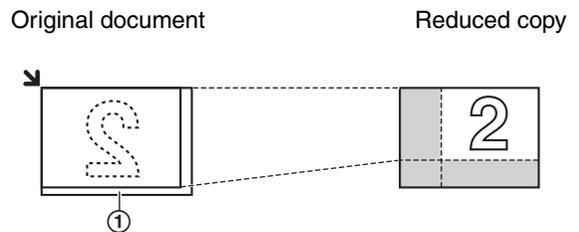

Using the automatic document feeder:

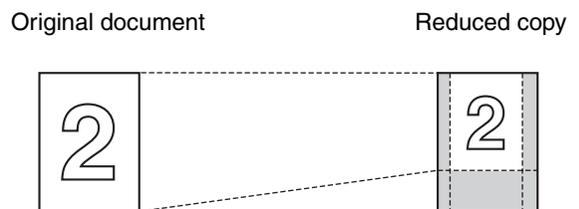

5.1.2 Using the automatic document feeder

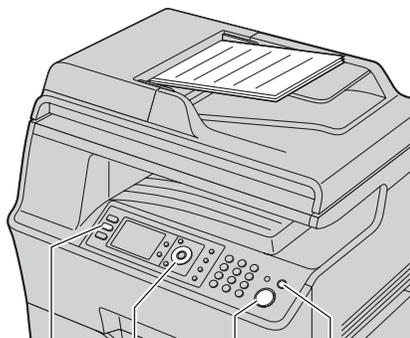

[Copy] [◀] [▶] [Start] [Stop]

- 1 If the **[Copy]** light is OFF, turn it ON by pressing **[Copy]**.
- 2 Set the original (page 22).
- 3 If necessary, change the copy settings according to the type of document.
 - To change the number of copies, see page 37.
 - To select the contrast, see page 37.
 - To select the resolution, see page 37.
 - To select the zoom rate, see page 37.
- 4 **[Start]**
 - If the copy input tray prompt (feature #471 on page 74) is activated, select the desired recording paper size by pressing **[◀]** or **[▶]** repeatedly, then press **[Start]** again.
 - The unit will start copying.
- 5 After you finish copying, press **[Stop]** to reset the settings you set in step 3.

Note:

- To stop copying, see page 85.

5.2 More copying features

- Make sure that the **[Copy]** light is ON.

5.2.1 Collate copy

The unit can collate multiple copies in the same order as the original document pages.


- 1 Set the original (page 21).
- 2 Press **[▼]** or **[▲]** repeatedly to select “Copies”.
- 3 Enter the number of copies (up to 99). → **[Set]**
- 4 **[Advance]**
- 5 Press **[▼]** or **[▲]** repeatedly to select “Collate”.
- 6 Press **[◀]** or **[▶]** repeatedly to select “On”. → **[Set]** → **[Advance]**
- 7 **When using the scanner glass:**

1. **[Start]**
 - The unit will scan 1 page.
2. Place the next document on the scanner glass and press **[Set]**. Repeat this until you have scanned all pages, and then press **[Start]**.
 - The unit will start copying.

When using the automatic document feeder:
[Start]

- 8 After you finish copying, press **[Stop]** to reset this feature.

Example: Making 2 copies of a 4-page original document

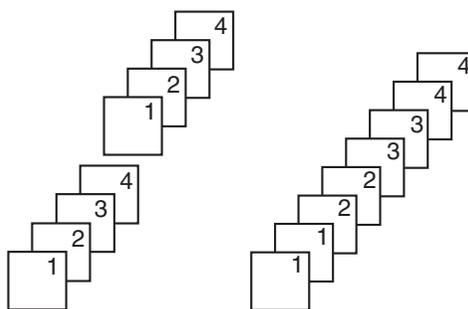

Collated pages

Uncollated pages

Note:

- The unit will store the documents into memory while collating the copies. If the memory becomes full while storing, the unit will only print out the stored pages.
- You can hold the previous collate setting (feature #469 on page 73).

Proof set feature

To make 1 set of a collated copy first, press **[◀]** or **[▶]** repeatedly to display “Proof Set” (step 6 on

5. Copier

"5.2.1 Collate copy", page 39). The unit will make 1 set of a collated copy and stop temporarily so you can check whether the copy was made as you expected. If the copy is correct, press **[Start]** to continue copying. If the copy is not correct, press **[Stop]** and start again from the beginning.


5.2.2 Duplex feature

The following types of copies are available:


- 1-sided originals to 2-sided copies
- 2-sided originals to 1-sided copies using the automatic document feeder
- 2-sided originals to 2-sided copies using the automatic document feeder

You then need to select the binding for originals and/or copies.

- Long edge

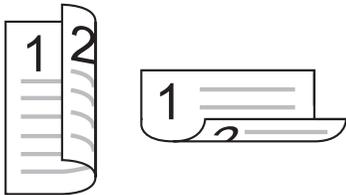


- Short edge

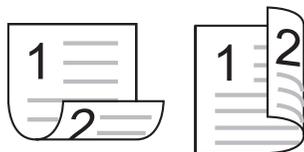

- A4, letter, legal, 216 mm × 330 mm or 216 mm × 340 mm size recording paper (plain and thin) can be used.
- Duplex copy is not available for the quick ID copy feature (page 41), easy repeat feature (page 41) or poster feature (page 41).

To make 1-sided originals into 2-sided copies



1. Set the original (page 21).
2. Press **[Duplex]**, and press **[▼]** or **[▲]** repeatedly to select "1-Side/2-Side". → **[Set]**
3. Press **[▼]** or **[▲]** repeatedly to select the desired binding setting for copies.
 - "→ Long Edge"
 - "→ Short Edge"
4. **[Set]**
5. If necessary, enter the number of copies (page 37).

- Other copy settings are also available. See page 37 for details.

6. When using the scanner glass:

1. **[Start]**

- The unit will scan 1 page.

2. Place the next document on the scanner glass and press **[Set]**.

- The unit will start copying.

When using the automatic document feeder:

[Start]

7. After you finish copying, press **[Stop]** to reset this feature.

Note:

- You can save the previous duplex setting (feature #470 on page 73).

To make 2-sided originals into 1-sided copies (automatic document feeder only)



1. Set the original (page 22).
2. Press **[Duplex]**, and press **[▼]** or **[▲]** repeatedly to select "2-Side/1-Side". → **[Set]**
3. Press **[▼]** or **[▲]** repeatedly to select the type of originals.
 - "Long Edge →"
 - "Short Edge →"
4. **[Set]**
5. If necessary, enter the number of copies (page 37).
 - Other copy settings are also available. See page 37 for details.
6. **[Start]**
7. After you finish copying, press **[Stop]** to reset this feature.

To make 2-sided originals into 2-sided copies (automatic document feeder only)



1. Set the original (page 22).
2. Press **[Duplex]**, and press **[▼]** or **[▲]** repeatedly to select "2-Side/2-Side". → **[Set]**
3. Press **[▼]** or **[▲]** repeatedly to select the desired setting for originals and copies.
 - "Long → Long Edge": For long edge originals to long edge copies
 - "Long → Short Edge": For long edge originals to short edge copies

- “Short → Long Edge”: For short edge originals to long edge copies
- “Short → Short Edge”: For short edge originals to short edge copies

4. [Set]

5. If necessary, enter the number of copies (page 37).
- Other copy settings are also available. See page 37 for details.

6. [Start]

7. After you finish copying, press **[Stop]** to reset this feature.

Note:

- You can save the previous duplex setting (feature #470 on page 73).

5.2.3 Quick ID copy feature / Easy repeat feature (Scanner glass only)

Quick ID copy feature: To copy 2-sided documents onto one page.

Easy repeat feature: To copy a single document repeatedly onto one page.

Note:

- The copied documents will not be reduced to fit the recording paper, and useful for copying small sized documents such as business cards.

- 1 Press **[▼]** or **[▲]** repeatedly to select “Page Layout”. → **[◀]/[▶]**
- 2 Press **[▼]** or **[▲]** repeatedly to select “Quick ID Copy” or “Easy Repeat”. → **[Set]**
- 3 Press **[▼]** or **[▲]** repeatedly to select the desired page layout.

Quick ID copy feature:

- “2 in 1 (Landscape)”
- “2 in 1 (Portrait)”
- “4 in 1 (Landscape)”
- “4 in 1 (Portrait)”
- “8 in 1 (Landscape)”
- “8 in 1 (Portrait)”

Easy repeat feature:

- “2 in 1”
- “4 in 1”
- “8 in 1”

- 4 Set the original (page 21).
 - To make a landscape copy, set the original in landscape direction. To make a portrait copy, set the original in portrait direction.
 - The scanning area changes according to the selected setting in step 3. Follow the on-screen instructions.

5 [Set]

- 6 If necessary, enter the number of copies (page 37).

- Other copy settings are also available. See page 37 for details.

7 Quick ID copy feature:**1. [Start]**

- The unit will scan 1 page.

2. Place the next document on the scanner glass and press **[Set]**. Repeat this until all the documents are scanned.

- The unit will start copying.
- You can press **[Start]** anytime to start copying.

Easy repeat feature:**[Start]**

- 8 After you finish copying, press **[Stop]** to reset this feature.

Note:

- You can save the previous page layout setting (feature #467 on page 73).

5.2.4 Poster feature (Scanner glass only)

You can make copies divided into 4 (“2×2”) or 9 (“3×3”) sections to make enlarged copies of the individual sections. You can then glue them together to make a poster.

- 1 Set the original (page 21).
- 2 Press **[▼]** or **[▲]** repeatedly to select “Page Layout”. → **[◀]/[▶]**
- 3 Press **[▼]** or **[▲]** repeatedly to select “Poster”. → **[Set]**
- 4 Press **[▼]** or **[▲]** repeatedly to select “2×2” or “3×3”. → **[Set]**
- 5 If necessary, enter the number of copies (page 37).
 - Other copy settings are also available. See page 37 for details.
- 6 **[Start]**
- 7 After you finish copying, press **[Stop]** to reset this feature.

Note:

- You can save the previous page layout setting (feature #467 on page 73).

5.2.5 N in 1 feature

You can save paper by copying 2, 4 or 8 pages onto 1 page. The documents will be reduced to fit the recording paper.

- 1 Set the original (page 21).
 - To make a portrait copy, set the original in portrait direction. To make a landscape copy, set the original in landscape direction.
- 2 Press **[▼]** or **[▲]** repeatedly to select “Page Layout”. → **[◀]/[▶]**

5. Copier

3 Press [▼] or [▲] repeatedly to select “N in 1”. → [Set]

4 Press [▼] or [▲] repeatedly to select the desired page layout.

- “2 in 1 (Portrait)”
- “2 in 1 (Landscape)”
- “4 in 1 (Portrait)”
- “4 in 1 (Landscape)”
- “8 in 1 (Portrait)”
- “8 in 1 (Landscape)”

5 [Set]

6 If necessary, enter the number of copies (page 37).

- Other copy settings are also available. See page 37 for details.

7 When using the scanner glass:

1. [Start]

- The unit will scan 1 page.
2. Place the next document on the scanner glass and press [Set]. Repeat this until all the documents are scanned.
- The unit will start copying.
 - You can press [Start] anytime to start copying.

When using the automatic document feeder:

[Start]

8 After you finish copying, press [Stop] to reset this feature.

Note:

- You can save the previous page layout setting (feature #467 on page 73).

Separate N in 1 feature (Scanner glass only)

You can separate an N in 1 copied document back into its original, separate pages. This feature is available for documents created using the “2 in 1” and “4 in 1” settings.

1. Set the original (page 21).

2. Press [▼] or [▲] repeatedly to select “Page Layout”. → [◀]/[▶]

3. Press [▼] or [▲] repeatedly to select “Separate N in 1”. → [Set]

4. Press [▼] or [▲] repeatedly to select the desired page layout.

- “2 in 1 (Portrait)”
- “2 in 1 (Landscape)”
- “4 in 1 (Portrait)”
- “4 in 1 (Landscape)”

5. [Set]

6. If necessary, enter the number of copies (page 37).

- Other copy settings are also available. See page 37 for details.

7. [Start]

8. After you finish copying, press [Stop] to reset this feature.

5.2.6 Booklet feature

You can make copies, and then fold them in half to create booklets. The documents will be reduced to fit the recording paper.

1 Set the original (page 21).

2 Press [▼] or [▲] repeatedly to select “Page Layout”. → [◀]/[▶]

3 Press [▼] or [▲] repeatedly to select “Booklet”. → [Set]

4 Press [▼] or [▲] repeatedly to select the desired binding direction and pages.

- “Left Binding (1)”
- “Left Binding (All)”
- “Right Binding (1)”
- “Right Binding (All)”

- “(1)”: To make a booklet with every 4 documents printed as separate blocks.
- “(All)”: To make a booklet with all documents printed as 1 block.

5 [Set]

6 If necessary, enter the number of copies (page 37).

- Multiple copies will be collated automatically.
- Other copy settings are also available. See page 37 for details.

7 When using the scanner glass:

1. [Start]

- The unit will scan 1 page.

2. Place the next page on the scanner glass and press [Set]. Repeat this until you have scanned all pages.

3. If “Left Binding (1)” or “Right Binding (1)” is selected in step 4, the unit will start copying.

- You can press [Start] anytime to start copying.
- For multiple copies, press [Start] to start copying.

If “Left Binding (All)” or “Right Binding (All)” is selected in step 4, press [Start] to start copying.

When using the automatic document feeder:

[Start]

8 After you finish copying, press [Stop] to reset this feature.

Note:

- You can save the previous page layout setting (feature #467 on page 73).

5.2.7 Copy reservation


You can make a copy reservation under the following conditions:

- while the unit is printing documents from your computer.
 - while the unit is printing received fax documents.
- 1** Set the original (page 21).
 - 2** While “**PC Printing**” or “**Printing**” is displayed, press [**Copy**].
 - 3** Make necessary settings such as number of copies, resolution, zoom features and page layout features.
→ [**Start**]
 - “**Copy Reserved**” will be displayed. The unit will start copying after the current printing job.

6.1 Sending a fax manually

6.1.1 Using the scanner glass

By using the scanner glass, you can send a page from booklets or small size paper that cannot be sent with the automatic document feeder.

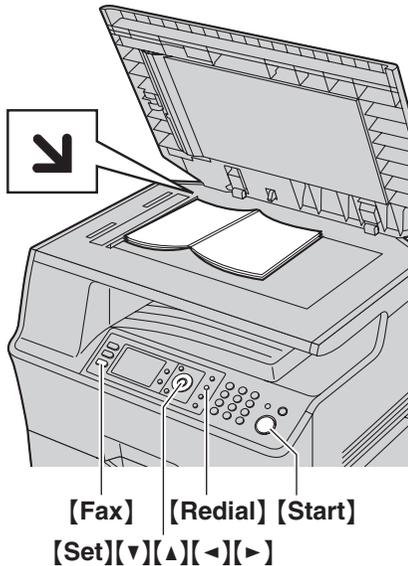

- 1 If the **[Fax]** light is OFF, turn it ON by pressing **[Fax]**.
- 2 Set the original (page 21).
- 3 If necessary, change the resolution and contrast according to the type of document.
 - To select the resolution, see page 44.
 - To select the contrast, see page 44.
- 4 Dial the fax number.
 - To send a single page, go to step 7.
 - To send multiple pages, go to the next step.
- 5 Press **[v]** or **[^]** repeatedly to select “Quick Scan”, then press **[<]** or **[>]** repeatedly to select “On”. → **[Start]**
 - Wait until “Scan: Press <Set>.” “Send: Press <Start>.” is displayed.
 - Press **[<]** or **[>]** repeatedly to change the resolution during scanning, and then press **[Set]**. The setting will be applied starting with the next page.
- 6 Place the next page on the scanner glass. → **[Set]**
 - To send more pages, repeat this step.
- 7 **[Start]**

Note:

- To stop sending, see page 85.
- You can change the default operation mode (feature #463 on page 66) and the timer before returning to

the default operation mode (feature #464 on page 66).

To select the resolution

1. Press **[v]** or **[^]** repeatedly to select “Resolution”.
 2. Press **[<]** or **[>]** repeatedly to select the desired resolution. → **[Set]**
 - “Standard”: For normal-sized characters.
 - “Fine”: For small-sized characters.
 - “Super Fine”: For very small-sized characters.
 - “Photo”: For photographs, shaded drawings, etc.
- Using the “Fine”, “Super Fine” and “Photo” settings will increase transmission time.

To select the contrast

Adjust this setting depending on the darkness or lightness of the document. 5 levels (low to high) are available.

1. Press **[v]** or **[^]** repeatedly to select “Contrast”.
2. Press **[<]** or **[>]**. → **[Set]**

Note:

- You can save the previous contrast setting (feature #462 on page 65).

To redial the last number

[Redial]

- If the line is busy, the unit will automatically redial the number 2 or more times.

Note:

- To stop sending, see page 85.

Reserving the fax transmission (Dual Access)

You can reserve a fax transmission even when the unit is just receiving a fax or sending a fax from memory.

- Up to 3 reservations when sending
- Up to 4 reservations when receiving

1. Set the original during fax reception or fax memory transmission.
2. Enter the fax number using the dial keypad or navigator directory.
3. **When using the scanner glass**, press **[Start]**. The unit will scan 1 page. Place the next document on the scanner glass and press **[Set]**. Repeat this until all the documents are scanned, then press **[Start]**. **When using the automatic document feeder**, press **[Start]**.

- If the document exceeds the memory capacity, the reservation for that document will be cancelled. You must send the entire document manually.

Printing a sending report


A sending report provides you with a printed record of transmission results. To print the sending reports, make

sure that feature #401 is activated (page 67). For an explanation of the messages, see page 87.

Printing a journal report

A journal report provides you with a printed record of the 30 most recent faxes. To print it manually, see page 109. To print it automatically after every 30 new fax transmissions and receptions, make sure feature #402 is activated (page 67). For an explanation of the messages, see page 87.

6.1.2 Using the automatic document feeder

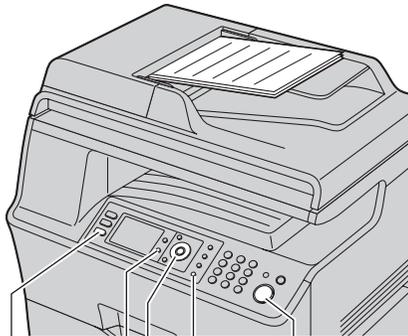

[Duplex] [Monitor]
[Fax] [Set][v][^][◀][▶] [Start]

- 1 If the **[Fax]** light is OFF, turn it ON by pressing **[Fax]**.
- 2 Set the original (page 22).
- 3 If necessary, change the resolution and contrast according to the type of document.
 - To select the resolution, see page 44.
 - To select the contrast, see page 44.
- 4 **[Monitor]**
- 5 Dial the fax number. → **[Start]**

Note:

- To stop sending, see page 85.
- Do not open the document cover when sending a fax with the automatic document feeder.

Pre-dialling a fax number

1. Enter the fax number.
2. Set the original (page 22). → **[Start]**

Sending from memory (Quick scan feature)


1. Set the original (page 22).
2. Enter the fax number.
3. Press **[v]** or **[^]** repeatedly to select "Quick scan", then press **[◀]** or **[▶]** repeatedly to select "On". → **[Start]**

To send 2-sided originals

1. Set the original (page 22).
2. **[Duplex]**
3. Press **[v]** or **[^]** repeatedly to select the desired binding of the original.
 - "Long Edge"
 - "Short Edge"
4. **[Set]**
5. Dial the fax number. → **[Start]**

6.2 Storing items for the navigator directory

The unit provides a navigator directory (300 items).

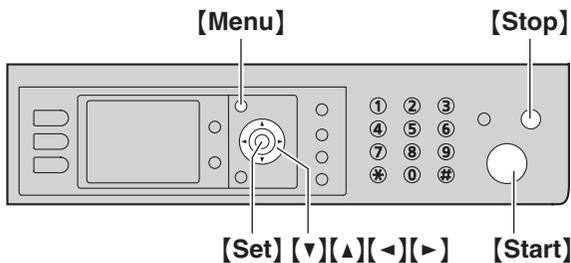

6.2.1 Storing navigator directory items

- 1 **[Menu]**
- 2 Press **[v]** or **[^]** repeatedly to select “**Directory Set**”.
- 3 Press **[←]** or **[→]** repeatedly to select “**New Addition**”. → **[Set]**
- 4 Enter the name, up to 20 characters (see page 83 for character entry). → **[Set]** → **[v]/[^]**
- 5 Enter the telephone number, up to 32 digits. → **[Set]** → **[Set]**
 - To program other items, repeat steps 4 to 5.
- 6 **[Menu]**

Note:

- A hyphen or a space entered in a telephone number counts as 2 digits.

6.2.2 Editing a stored item

- 1 **[Menu]**
- 2 Press **[v]** or **[^]** repeatedly to select “**Directory Set**”.
- 3 Press **[←]** or **[→]** repeatedly to select “**Edit**”. → **[Set]**
- 4 Press **[v]**, **[^]**, **[←]** or **[→]** repeatedly to select the desired item. → **[Set]**
- 5 Edit the name if necessary. → **[Set]** → **[v]/[^]**
- 6 Edit the telephone number if necessary. → **[Set]** → **[Set]** → **[Menu]**

6.2.3 Erasing a stored item

- 1 **[Menu]**
- 2 Press **[v]** or **[^]** repeatedly to select “**Directory Set**”.
- 3 Press **[←]** or **[→]** repeatedly to select “**Edit**”. → **[Set]**

- To erase all items, press **[←]** or **[→]** repeatedly to select “**Erase All**”. → **[Set]** → **[Start]**
- 4 Press **[v]**, **[^]**, **[←]** or **[→]** repeatedly to select the desired item. → **[⇄]**
 - To cancel erasing, press **[Stop]**, then press **[Menu]**.
 - 5 **[Set]** → **[Menu]**

6.3 Sending a fax using navigator directory

Before using this feature, store the desired names and telephone numbers into the navigator directory (page 46).

- Make sure that the **[Fax]** light is ON.

6.3.1 Using the scanner glass

- 1 Set the original (page 21).
- 2 Press **[◀]** or **[▶]** to initiate the navigator directory.
- 3 Press **[▼]**, **[▲]**, **[◀]** or **[▶]** repeatedly to select the desired item. → **[Set]**
- 4 If necessary, change the resolution (page 44) and the contrast (page 44).
 - To send a single page, go to step 7.
 - To send multiple pages, go to the next step.
- 5 Press **[▼]** or **[▲]** repeatedly to select “**Quick Scan**”, then press **[◀]** or **[▶]** repeatedly to select “**On**”. → **[Start]**
- 6 Place the next page. → **[Set]**
 - To send more pages, repeat this step.
- 7 **[Start]**

To search for a name by initial

Example: “**Lisa**”

1. Press **[◀]** or **[▶]** to initiate the navigator directory.
2. Press **[5]** repeatedly to display any name with the initial “**L**” (see page 83 for character entry).
 - To search for symbols, press **[*]**.
3. Press **[▼]**, **[▲]**, **[◀]** or **[▶]** repeatedly to select “**Lisa**”.
 - To stop the search, press **[Stop]**.

Fax auto redial

If the line is busy or if there is no answer, the unit will automatically redial the number 2 or more times.

Note:

- To stop sending, see page 85.

6.3.2 Using the automatic document feeder

- 1 Set the original (page 22).
- 2 Enter the fax number using navigator directory.
- 3 If necessary, change the resolution (page 44) and the contrast (page 44).
- 4 **[Start]**

6.4 Broadcast transmission

You can send the same document to multiple parties (up to 20). To use this feature, store the fax numbers into broadcast memory using the navigator directory (page 46).

Your programmed items will remain in the broadcast memory, allowing frequent re-use.

6.4.1 Programming items into the broadcast memory

- 1 **[Menu]**
- 2 Press **[▼]** or **[▲]** repeatedly to select “**Directory Set**”.
- 3 Press **[◀]** or **[▶]** repeatedly to select “**Broadcast**”. → **[Set]**
- 4 Press **[▼]** or **[▲]** repeatedly to select the desired broadcast memory location (“**<Broadcast1>**” to “**<Broadcast5>**”).
 - When you do not wish to change the broadcast memory name, press **[◀]** or **[▶]** and go to step 8.
- 5 Press **[Set]** to change the broadcast memory name.
- 6 **[◀]/[▶]** → Change the name, up to 20 characters (see page 83 for character entry).
- 7 Press **[Set]** 2 times.
- 8 Press **[▼]**, **[▲]**, **[◀]** or **[▶]** repeatedly to select the desired item. → **[Set]**
 - The number in the upper right indicates the number of registered items.
 - To program other items, repeat this step (up to 20 items).
 - If you have programmed the wrong item, press **[Set]** again to remove “√” and cancel the selected item.
- 9 **[Back]** → **[Menu]**

6.4.2 Adding a new item into the broadcast memory

- 1 **[Menu]**
- 2 Press **[▼]** or **[▲]** repeatedly to select “**Directory Set**”.
- 3 Press **[◀]** or **[▶]** repeatedly to select “**Broadcast**”. → **[Set]**
- 4 Press **[▼]** or **[▲]** repeatedly to select the desired broadcast memory location (“**<Broadcast1>**” to “**<Broadcast5>**”). → **[◀]/[▶]** → **[*]**
 - If you changed the broadcast memory name when programming, select that name.
- 5 Press **[▼]**, **[▲]**, **[◀]** or **[▶]** repeatedly to select the item that you want to add. → **[Set]**

6. Fax

- To add other items, repeat this step (up to 20 items).

6 [Back] → [Menu]

6.4.3 Erasing a stored item from the broadcast memory

1 [Menu]

2 Press [▼] or [▲] repeatedly to select “**Directory Set**”.

3 Press [◀] or [▶] repeatedly to select “**Broadcast**”. → [Set]

4 Press [▼] or [▲] repeatedly to select the desired broadcast memory location (“<Broadcast1>” to “<Broadcast5>”). → [◀]/[▶]

- If you changed the broadcast memory name when programming, select that name.

5 Press [▼], [▲], [◀] or [▶] repeatedly to select the item that you want to erase.

- To cancel erasing, press [Stop], then press [Menu].

6 [⏏] → [Menu]

Note:

- If you erase all programmed items, the broadcast memory name will return to the default name.

6.4.4 Sending the same document to pre-programmed parties

- Make sure that the [Fax] light is ON.

To send the same document using the scanner glass

1. Set the original (page 21).
2. Press [◀] or [▶] to initiate the navigator directory.
3. Press [▼] or [▲] repeatedly to select the desired broadcast memory location. → [Set]
4. If necessary, change the resolution (page 44) and the contrast (page 44). → [Start]
 - To send a single page, go to step 6.
 - To send multiple pages, go to the next step.
5. Place the next page. → [Set]
 - To send more pages, repeat this step.
6. [Start]

Note:

- To stop sending, see page 85.
- If you select “**Fine**”, “**Super Fine**” or “**Photo**” resolution, the number of pages that the unit can send will decrease.
- If the document exceeds the memory capacity, sending will be cancelled.
- If a party is busy or does not answer, it will be skipped and redialled later 2 or more times.
- After transmission, the unit will automatically print a report (**broadcast sending report**).

To send the same document using the automatic document feeder

1. Set the original (page 22).
2. Press [◀] or [▶] to initiate the navigator directory.
3. Press [▼] or [▲] repeatedly to select the desired broadcast memory location. → [Set]
4. If necessary, change the resolution (page 44) and the contrast (page 44).
5. [Start]

6.5 Sending an electronic document as a fax message from your computer

You can access the fax function from a Windows application using Multi-Function Station.

For example, to send a document created from WordPad, proceed as follows.

- 1 Open the document you want to send.
- 2 Select **[Print...]** from the **[File]** menu.
 - The **[Print]** dialogue box will appear.
- 3 Select the PCFAX unit's name as the active printer.
- 4 Click **[Print]** or **[OK]**.
 - The **[Send a Fax]** dialogue box will appear.



- 5 Enter the fax number using the keypad display or the directory.
 - To stop the operation, click **[Cancel]**.
- 6 **[Send]**
 - The document will be sent through the unit from your computer.

Note:

- To stop sending, see page 85.
- If the document exceeds the memory capacity of the unit, sending will be cancelled.
- For details, see the help file by selecting [?] from Multi-Function Station.
- Click **[Select...]** to change the active unit.

6.6 Selecting the way to use your unit

Depending on your situation, select the way you prefer to use your unit.

- Use only as a fax (FAX ONLY mode)
- Use mostly as a telephone (TEL mode)
- Use as a telephone and/or fax (TEL/FAX mode)*
- Use with answering machine

* Not available when "Australia" or "New Zealand" is selected in feature #114 on page 63.

6.6.1 Use only as a fax (FAX ONLY mode)


Your situation

You have a separate telephone line just for faxes, or you want to use the unit only for receiving faxes.

Setup

Set the unit to FAX ONLY mode (page 50) by pressing **[Fax Auto Answer]** repeatedly.

- The **[Fax Auto Answer]** indicator is ON.

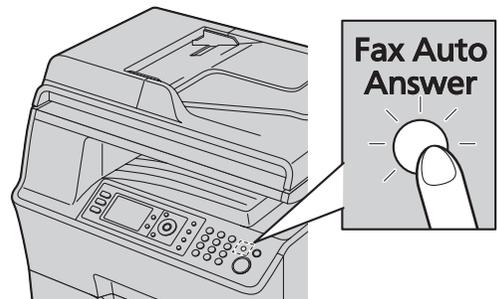

How faxes are received

All incoming calls will be answered as faxes.

6.6.2 Use mostly as a telephone (TEL mode)


Your situation

You want to answer calls by yourself. If a fax call is received, you must receive the fax manually.

Setup

Set the unit to TEL mode (page 51) by pressing **[Fax Auto Answer]** repeatedly.

- The **[Fax Auto Answer]** indicator is OFF.

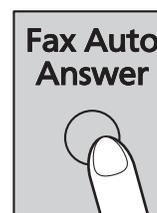

6. Fax

Note:

- Make sure feature #404 is set to “Tel” beforehand (page 67).

How to receive phone calls and faxes

You have to answer all calls manually.

To receive a fax document, press **[Start]**.

6.6.3 Use as a telephone and/or fax (TEL/FAX mode)

Important:

- **Not available when “Australia” or “New Zealand” is selected in feature #114 on page 63.**


Your situation

You want to answer phone calls yourself and receive faxes automatically without rings.

Setup

Set the unit to TEL/FAX mode (page 51) by pressing **[Fax Auto Answer]** repeatedly.

- The **[Fax Auto Answer]** indicator is OFF.

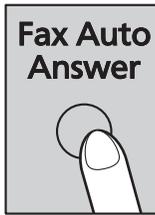

Note:

- Make sure feature #404 is set to “Tel/Fax” beforehand (page 67).

How phone calls and faxes are received

If the call is a phone call, the unit will ring.

If a fax calling tone is detected, the unit will receive the fax automatically without ringing.

6.6.4 Use with answering machine

Your situation

You want to use the unit with an answering machine.

Setup

Connect an external telephone answering machine and set the ring count of the answering machine to less than 4.

- Set the ring count in FAX ONLY mode of the unit to more than 4, if you use with auto answer ON.

How to receive calls


When receiving phone calls, the answering machine will record voice messages.

6.7 Receiving a fax automatically – Auto answer ON

6.7.1 Activating FAX ONLY mode

Press **[Fax Auto Answer]** repeatedly to display “Fax Only Mode”.

- The **[Fax Auto Answer]** light turns ON.

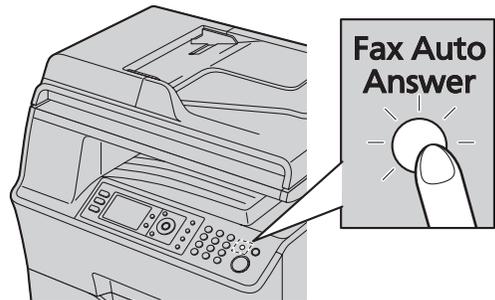

How faxes are received

When receiving calls, the unit will automatically answer all calls and only receive fax documents.

Note:

- The number of rings before a call is answered in FAX ONLY mode can be changed (feature #210 on page 64).

If you have subscribed to a Distinctive Ring service

See page 61.


6.8 Receiving a fax manually – Auto answer OFF

Important:

- Use this mode with an extension telephone.

6.8.1 Activating TEL mode

- 1 Make sure feature #404 is set to “Tel” beforehand (page 67).
 - If feature #114 is set to “Australia” or “New Zealand”, go to step 2.
- 2 Press **[Fax Auto Answer]** repeatedly to display “Tel Mode”.
 - The **[Fax Auto Answer]** light turns OFF.

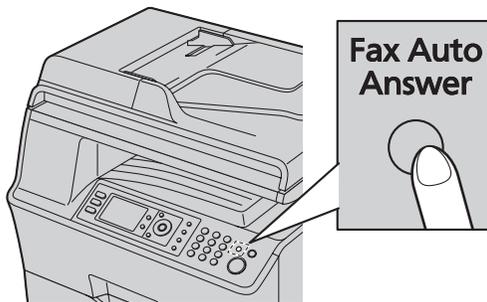

Note:

- If you do not answer the call within 10 rings, the unit will temporarily switch to fax reception. The other party can then send a fax.

How to receive faxes with an extension telephone

If you have another telephone connected to the **[EXT]** jack or the same line (extension telephone), you can use the extension telephone to receive faxes.

1. When the extension telephone rings, lift the handset of the extension telephone.
2. When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,
 press **[*] [†] [9]** (default fax activation code) **firmly**.
3. Replace the handset.


Note:

- To stop receiving, see page 85.
- To receive fax documents using the extension telephone, make sure remote fax activation is turned ON (feature #434 on page 69) beforehand. The default setting is ON.

6.8.2 Activating TEL/FAX mode

Important:

- Not available when “Australia” or “New Zealand” is selected in feature #114 on page 63.
- 1 Make sure feature #404 is set to “Tel/Fax” beforehand (page 67).
 - 2 Press **[Fax Auto Answer]** repeatedly to display “Tel/Fax Mode”.
 - The **[Fax Auto Answer]** light turns OFF.
 - 3 The ringer volume setting should be ON (page 23).

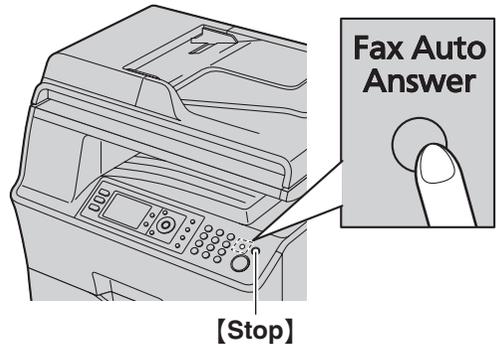

How phone calls and faxes are received


1. “Incoming Call” will be displayed but the unit will not ring.
2. The unit will wait for the duration of **2 rings** before answering the call.
 - The number of rings is determined by the “TEL/FAX delayed ring count” (feature #212 on page 67).
 - During this time, an extension telephone will ring.
3. The unit will answer the call and try to detect a fax calling tone.

When a fax calling tone is detected


The unit receives the fax automatically without ringing.

When a fax calling tone is not detected

- ❶ The unit will ring **3 times**. You may answer the call.
- To answer using another telephone connected to the **[EXT]** jack of this unit, lift the handset, then press **[Stop]** on the unit to talk to the other party.

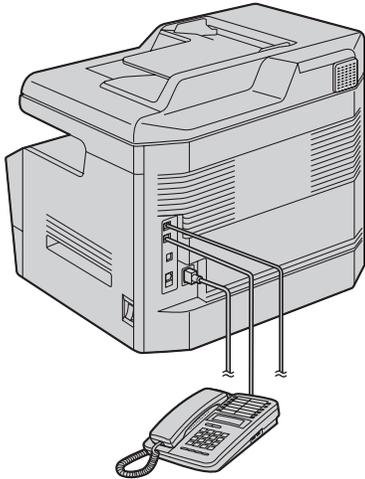

- To answer using another telephone connected to the same telephone line as this unit, lift the handset and talk to the other party.

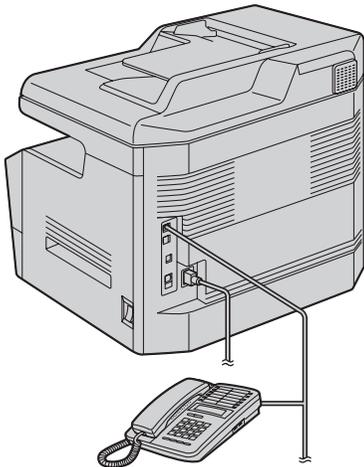


- The number of rings is determined by the “**Silent fax recognition ring count**” (feature #436 on page 69).
 - Callers will hear a ring back tone different from the one generated by the telephone company.
- ❷ If you do not answer the call, the unit will activate the fax function.
- Some fax machines do not generate fax calling tones when sending faxes, therefore the unit will try to receive a fax even if no fax calling tone is detected.

6.9 Displaying a received fax document

You can display a received fax document on the unit. You can print or save the necessary document after you confirm the image.

Make sure the fax preview mode setting is turned ON beforehand (feature #448 on page 56).

- Make sure that the **[Fax]** light is ON.
- Make sure that the unit is idle.

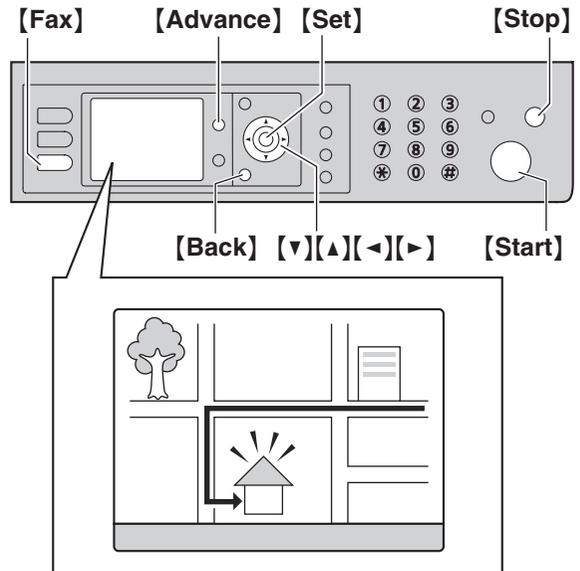

6.9.1 Viewing a fax document

- [Advance]**
- Press **[v]** or **[^]** repeatedly to select “**Fax Preview**”. → **[Set]**
- Press **[v]** or **[^]** repeatedly to select the desired fax document. → **[Set]**
 - The selected fax document will be displayed.
 - To stop viewing, press **[Back]**.
 - To print the fax document, press **[Start]**.
- [Back]** → **[Advance]**

Note:

- The display speed depends on the contents and size of the document.

What “√” means

“√” on the display means the image has already been viewed, printed or saved.

To adjust the image

The following keypad is used to adjust the image.

| Keypad | Action |
|--------------|--|
| [4] | Returns to the previous page (only available for multiple pages) |
| [6] | Goes to the next page (only available for multiple pages) |
| [2] | Enlarges an image |
| [8] | Reduces an image |
| [5] | Rotates an image (90 °, 180 °, 270 °) |
| [▲][▼][◀][▶] | Scrolls an image |

6.9.2 Printing a fax document

- [Advance]**
- Press [▼] or [▲] repeatedly to select “**Fax Preview**”. → **[Set]**
- Press [▼] or [▲] repeatedly to select the desired fax document. → **[Start]**
 - The received fax document will be printed.
- [Advance]**

Note:

- The received fax document will be deleted automatically after printing (feature #449 on page 71).

6.9.3 Saving a fax document

Important:

- When you save a fax document as an email attachment, program the email server, SMTP server settings (page 71) and the email destinations (page 71) beforehand.
- When you save the fax document in a folder on an FTP server, program the FTP server settings beforehand (page 72).

- [Advance]**
- Press [▼] or [▲] repeatedly to select “**Fax Preview**”. → **[Set]**
- Press [▼] or [▲] repeatedly to select the desired fax document. → **[*]**
- Select the desired destination.

Saving to your computer:

- Press [▼] or [▲] repeatedly to select “**PC**”. → **[Set]**
- Press [▼] or [▲] repeatedly to select “**USB Host**” or the computer on which you want to save the data. → **[Set]**
 - The fax document will be automatically saved in the folder selected in the **[Settings]** window. To change the folder, see page 29.
 - The software that is associated to open PDF files will automatically start.

Saving as an email attachment:

- Press [▼] or [▲] repeatedly to select “**Email Address**”. → **[Set]**
- Press [▼], [▲], [◀] or [▶] repeatedly to select the destination email address. → **[Set]**
 - To enter the email address using the dial keypad, select “**Temporary Address**”.
 - The fax document will be sent as an attachment via an email server.

Saving in a folder on an FTP server:

- Press [▼] or [▲] repeatedly to select “**FTP Server**”. → **[Set]**
- Press [▼] or [▲] repeatedly to select the desired FTP server. → **[Set]**
 - The fax document will be saved in the folder on the FTP server.

5 [Advance]

Note:

- The received fax document is saved as an image file (PDF format). Adobe Reader is required to view it.
- To stop saving a fax document, see page 85.

6.9.4 Erasing a fax document

- [Advance]**
- Press [▼] or [▲] repeatedly to select “**Fax Preview**”. → **[Set]**
- Press [▼] or [▲] repeatedly to select the desired fax document. → **[#]**
 - To cancel erasing, press **[Stop]**, then press **[Advance]**.
- [Set]** → **[Advance]**


Note:

- To erase the fax document, you need to view or print the data beforehand (page 52, 53).

6.10 Using the unit with an answering machine

6.10.1 Setting up the unit and an answering machine

- 1 Connect the answering machine (①).
 - An answering machine is not supplied.
 - Remove the stopper (②) if attached.

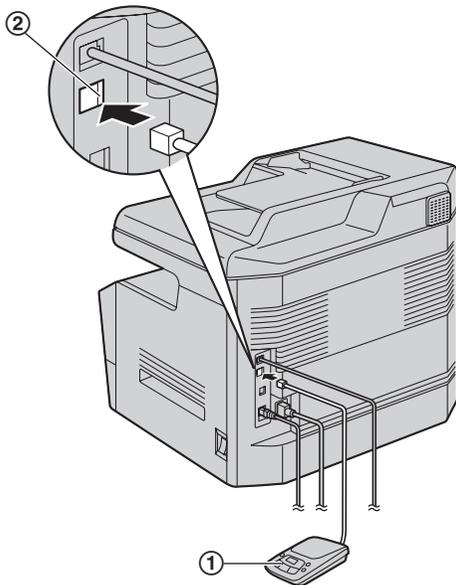

- 2 Set the number of rings on the answering machine to 4 rings or less.
 - This will allow the answering machine to answer the call first.
- 3 Record a greeting message on the answering machine.
 - We recommend you record a message that is under 10 seconds long, and not to pause for more than 4 seconds during the message. Otherwise, neither machine will function correctly.
- 4 Activate the answering machine.
- 5 Set the unit to the desired receiving mode (page 50).
 - If you set it to FAX ONLY mode, **change the ring count in FAX ONLY mode to more than 4 (feature #210 on page 64).**
- 6 Make sure each of the following is unique:
 - the remote access code of the answering machine
 - the fax activation code (feature #434 on page 69)

Note:

- If the call is a phone call, the answering machine will record voice messages.

If a fax calling tone is detected, the fax machine will receive a fax automatically.

- Regarding the remote access code for the answering machine, see the operating instructions of the answering machine.

Receiving a voice message and fax document in one call

The caller can leave a voice message and send a fax document during the same call. Inform the caller of the following procedure beforehand.

1. The caller calls your unit.
 - The answering machine will answer the call.
2. The caller can leave a message after the greeting message.
3. The caller presses **[*][#][9]** (pre-selected fax activation code).
 - The unit will activate the fax function.
4. The caller presses the start button to send a document.

Note:

- To use this feature, make sure remote fax activation is turned ON (feature #434 on page 69). The fax activation code can also be changed.
- If there is no room left in the memory of your answering machine, the unit may not be able to receive documents. See the operating instructions of the answering machine and erase unnecessary messages.

6.11 Receive polling (retrieving a fax placed on another fax machine)

This feature allows you to retrieve a document from another compatible machine. Therefore you pay for the call.

Make sure that no documents are fed into your unit and that the other party's machine is ready for your call.

- Make sure that the **[Fax]** light is ON.

1 [Advance]

- 2 Press **[▼]** or **[▲]** repeatedly to display "Polling".
→ **[Set]**

- 3 Dial the fax number. → **[Set]** → **[Start]**

6.12 Junk fax prohibitor (preventing fax reception from undesired callers)

If you subscribe to Caller ID service (page 58), this feature prevents fax reception from calls that do not show caller information.

Additionally, the unit will not accept faxes originating from numbers that match the ones on a programmable junk fax prohibitor list.

- Make sure that the **[Fax]** light is ON.

Important:

- **This feature does not work if you receive faxes manually.**

6.12.1 Activating the junk fax prohibitor

- 1 **[Advance]**
- 2 Press **[▼]** or **[▲]** repeatedly to select “**Junk Fax Prohibitor**”. → **[Set]**
- 3 Press **[▼]** or **[▲]** repeatedly to select “**Prohibitor**”.
- 4 Press **[◀]** or **[▶]** repeatedly to select “**On**”. → **[Set]**
- 5 Press **[Advance]** to exit.

6.12.2 Storing undesired callers

You can register up to 20 undesired numbers from the Caller ID list (page 59) if you do not wish to receive faxes from them.

- 1 **[Advance]**
- 2 Press **[▼]** or **[▲]** repeatedly to select “**Junk Fax Prohibitor**”. → **[Set]**
- 3 Press **[▼]** or **[▲]** repeatedly to select “**Junk List Set**”. → **[Set]**
- 4 Press **[▼]** or **[▲]** repeatedly to display the party you do not want to receive faxes from. → **[Set]**
 - If you have programmed the wrong item, press **[Set]** again to remove “√” and cancel the item.
- 5 **[Back]** → **[Advance]**

To display the junk fax prohibitor list

1. **[Advance]**
2. Press **[▼]** or **[▲]** repeatedly to select “**Junk Fax Prohibitor**”. → **[Set]**
3. Press **[▼]** or **[▲]** repeatedly to select “**Junk List Display**”. → **[Set]**
4. Press **[▼]** or **[▲]** to display the items on the list.
5. Press **[Advance]** to exit.

To print the junk fax prohibitor list

1. **[Advance]**

2. Press **[▼]** or **[▲]** repeatedly to select “**Junk Fax Prohibitor**”. → **[Set]**
3. Press **[▼]** or **[▲]** repeatedly to select “**Junk List Print**”. → **[Set]**
4. Press **[Advance]** to exit.

To erase an item from the junk fax prohibitor list

1. **[Advance]**
2. Press **[▼]** or **[▲]** repeatedly to select “**Junk Fax Prohibitor**”. → **[Set]**
3. Press **[▼]** or **[▲]** repeatedly to select “**Junk List Display**”. → **[Set]**
4. Press **[▼]** or **[▲]** repeatedly to select the desired item. → **[#]**
 - To cancel erasing, press **[Stop]**, then press **[Advance]**.
5. **[Set]** → **[Advance]**

6.13 Receiving a fax on your computer

You can receive a fax document on your computer. The received fax document is saved as an image file (TIFF-G4 format).

Important:


- Make sure the PC fax setting is set to “Always” or “Connected” beforehand (feature #442 on page 70).
 - Make sure the computer setting for the PC fax reception is set beforehand (feature #443 on page 26).
 - Make sure the fax preview mode is turned OFF beforehand (feature #448 on page 56).
- 1 Press **[Fax Auto Answer]** repeatedly to turn the auto answer setting ON (page 50).
 - 2 Start Multi-Function Station. → **[PC FAX]**
 - 3 When a fax call is received, your computer will receive a document through the unit.

Note:

- You can view, print or transfer the received document using your computer.

Viewing a received document

1. Select **[PC FAX]** from Multi-Function Station.
2. Select **[Received Log]** in **[Communication Log]**.

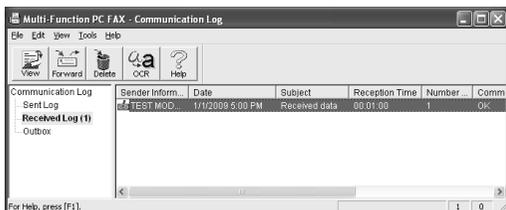

3. Click the item you want to view.
4. Click **[File]** in the menu bar, then select **[View]**, or click the **[View]** icon in the toolbar.
 - The received fax will be displayed.

If a received fax document is stored in the unit's memory

You can load the document into your computer.

1. Select **[PC FAX]** from Multi-Function Station.
2. Select **[Received Log]** in **[Communication Log]**.
3. Click **[File]** in the menu bar. → **[Receive a Fax]**
 - If the PC fax setting (feature #442 on page 70) is activated, the received fax document will be automatically transferred to the computer.

6.14 Web fax preview (LAN connection only)

You can display a received fax document in your web browser, and print or save the necessary document after you confirm the image.

Important:

- Web fax preview will not be activated when using the unit for the first time. To activate this feature, set the following:
 - “6.14.1 Activating the fax preview mode”, page 56.
 - “6.14.2 Programming the web fax preview access code”, page 56.

6.14.1 Activating the fax preview mode

- 1 **[Menu]** → **[#][4][4][8]**
- 2 Press **[1]** to select “On”.
 - Press **[0]** to select “Off”.
- 3 **[Set]** → **[Menu]**

Note:

- If you select “On”, the PC fax setting (feature #442 on page 70) will be deactivated.

6.14.2 Programming the web fax preview access code

- 1 **[Menu]** → **[#][4][5][0]** → **[Set]**
- 2 Enter the password (feature #155 on page 64). → **[Set]**
- 3 Enter the web fax preview access code, up to 8 characters, using the English alphabet and numbers (see page 83 for character entry).
 - The following symbols can also be entered.
! @ # \$ % ^ & ' (. - _ { }
- 4 **[Set]** → **[Menu]**

Note:

- If the web fax preview access code is not programmed (blank), the web fax preview feature will not be activated.

6.14.3 Displaying a received fax document on the web browser

Important:

- Make sure that the unit is idle.

- 1 Start Multi-Function Station.
- 2 **[Utilities]** → **[Configuration Web Page]** → **[Advance Configuration]**
- 3 Type “root” as the user name, then enter the password (feature #155 on page 64). → **[OK]**
- 4 Select the **[Web Fax Preview]** tab.

- 5 Enter the web fax preview access code (feature #450 on page 56). → **[Submit]**
 - A list of the received fax documents will be displayed.
- 6 Click the desired icon to preview, print or save a fax document.
 - While previewing the document, you can manipulate the fax document (Example: enlarge, rotate etc.).
- 7 Close the web browser.

Note:

- The display speed depends on the contents and size of the document.
- The received fax document is saved as an image file (PDF format). Adobe Reader is required to view it.

What “√” means

“√” on the display means the image has already been viewed, printed or saved.

- To delete a document after viewing a fax document in step 6, click **[Back]** to go back to the list. You can delete images showing “√”.
- To delete a document after printing or saving a fax document in step 6, click **[Reload]** to update the list. You can delete images showing “√”.

7.1 Caller ID service

Important:

This unit is compatible with the Caller ID service offered by your local telephone company. To use this unit's Caller ID features, you must subscribe to a Caller ID service.

For users other than Australia and New Zealand:

Important:

- This unit is designed in accordance with the ETS (European Telecommunication Standard) and only supports the basic CLIP (Calling Line Identification Presentation) features.
- This unit will only display the caller's telephone number and name.
- This unit will not support future additional telephone services.
- Depending on the service of the local telephone company, the date/time of the call or the caller's name may not be displayed.

Make sure the following ring count is set to 2 or more rings beforehand.

- FAX ring count (feature #210 on page 64)
- TEL/FAX ring count (feature #212 on page 67)
- The name display service may not be available in some areas. For further information, please contact your telephone company.

For New Zealand users:

For all local and national incoming calls, your display will show the area code (e.g. 09 for Auckland) or the cellular prefix (e.g. 0274 for Telecom Cellular) followed by the caller's telephone number. An Auckland caller's number will be displayed as 09XXXXXXX. The seven X's represent the seven digits of the caller's telephone number. A caller from a 6-digit Telecom Cellular number will be displayed as 0274XXXXXX. For incoming international calls, your display may only show "0000". For business users on a Centrex line, your display will show Centrex extension numbers in the shorter extension number format used within your company.

- Caller information will not be presented on incoming fax calls if Telecom FaxAbility is used.
- Although Telecom New Zealand and TelstraClear do not currently send caller name information, the caller's name will be displayed as stored in the directory, when a call from that caller is received.
- Your telephone company may charge you for a local call if the number dialled has the area code prefix included. If this is unacceptable, dial only the 7-digit local number. Do not dial the **[0]** prefix or the area code.

Important:

- This unit will only display the caller's telephone number and name.

- This unit will not support future additional telephone services.
- Depending on the service of the local telephone company, the date/time of the call or the caller's name may not be displayed.
- The name display service may not be available in some areas. For further information, please contact your telephone company.

7.1.1 How Caller ID is displayed

The calling party's name or telephone number will be displayed after the 1st ring. You have the option of whether or not to answer the call.

The unit will automatically store caller information (name, telephone number and date and time of the call) from the 30 most recent calls. It is possible to view caller information on the display (page 59) or print the entire Caller ID list (page 109).

- When caller information is received and it matches a telephone number stored in the unit's navigator directory, the stored name will be displayed.
- If the unit is connected to a PBX (Private Branch Exchange) system, caller information may not be received properly. Consult your PBX supplier.
- If the unit cannot receive caller information, the following will be displayed:
 - “Out of Area”: The caller dialled from an area which does not provide Caller ID service.
 - “Private Caller”: The caller requested not to send caller information.
 - “Long Distance”: The caller made a long distance call.

Note for Australian users:

- The area code will need to be stored with the 8-digit telephone number.

To confirm caller information by printing the Caller ID list

- To print manually, see page 109.
- To print automatically after every 30 new calls, activate feature #216 (page 65).

7.2 Viewing and calling back using caller information

Important:

- If the area code of the received telephone number is the same as yours, the area code may need to be deleted before calling back. This may only apply to some areas. To edit the number, see page 59.

1 **[Caller ID]** → Press **[▼]** to search from the recently received caller information.

- If you press **[▲]**, the display order will be reversed.
- To send a fax, see page 44.

2 Press **[Monitor]** to return the call.

To change the way caller information is displayed

While displaying the desired caller information, press **[←]** or **[→]** repeatedly to change name/telephone number information.

7.2.1 Symbols and operations for caller information

What “√” means

“√” on the display means the call has already been viewed or answered.

To stop viewing

Press **[Stop]**.

7.3 Editing a caller's telephone number before calling back/storing

The caller's telephone number, which is sent to your telephone from your local telephone exchange, includes “0” and an area code prefix. For local calls, “0” and the area code prefix can be omitted (For New Zealand users only).

1 **[Caller ID]**

2 Press **[▼]** or **[▲]** repeatedly to display the desired entry.

3 Press **[←]** or **[→]** to display the telephone number.

4 Press dial key (0 to 9) or **[✳]** to enter the editing mode and edit the telephone number.

- To send a fax, see page 44.

Note:

- The edited telephone number will not be saved in the caller information. To save in the directory, see page 60.

To correct a mistake

1. Press **[←]** or **[→]** to move the cursor to the incorrect number.
2. Press **[Back]** to delete the number.
3. Enter the correct number.

To delete a number

Press **[←]** or **[→]** to move the cursor to the number you want to delete and press **[Back]**.

7.4 Erasing caller information

7.4.1 Erasing all caller information

- 1 **[Menu]**
- 2 Press **[▼]** or **[▲]** repeatedly to select “**Caller Setup**”. → **[Set]**
 - “**Erase All OK?**” will be displayed.
 - To cancel erasing, press **[Stop]**, then press **[Menu]**.
- 3 **[Set]**
- 4 Press **[Menu]** to exit.

7.4.2 Erasing specific caller information

- 1 **[Caller ID]**
- 2 Press **[▼]** or **[▲]** repeatedly to select the desired item. → **[⇄]** → **[Set]** → **[Stop]**

7.5 Storing caller information

- 1 **[Caller ID]**
- 2 Press **[▼]** or **[▲]** repeatedly to select the desired item.
- 3 **[Set]**
- 4 Edit the name if necessary. → **[Set]** → **[▼]/[▲]**
- 5 Edit the telephone number if necessary. → **[Set]** → **[Set]** → **[Stop]**

Note:

- To edit a name or number, see page 46.

8.1 Distinctive Ring (Fax Stream Duet/FaxAbility) service

Important:

- Not available when “Malaysia” and “Tunisia” is selected in feature #114 on page 63.

When a call is made to one of your phone numbers, the telephone company sends a ring pattern to your telephone line to indicate which number the call is intended for. By setting up this unit for Distinctive Ring, you can make the unit automatically start fax reception when a call comes to the fax number.

To use this service, you must subscribe to the Distinctive Ring service offered by your local telephone company. Consult your local telephone company for availability.

In Australia, this service is called “Fax Stream Duet”. In New Zealand, this service is called “FaxAbility”.

8.2 Using two or more phone numbers on a single telephone line

8.2.1 Activating the Distinctive Ring feature

- 1 [Menu] → [Ⓜ][4][3][0]
- 2 Press [1] to select “On”.
 - Press [0] to select “Off”.
- 3 [Set] → [Menu]

Note:

- While the Distinctive Ring feature is activated, you cannot change the receiving mode.

How phone calls and faxes are received

If the incoming call is for the fax number, the unit will ring with the assigned ring pattern and automatically start fax reception.

If the incoming call is for the phone number, the unit will continue ringing.

- If an external telephone answering machine is connected, set the ring count of the answering machine to more than 2.

8.3 Using three or more phone numbers on a single telephone line

Important:

- Available when “Middle East”, “Asia” or “Africa” is selected in feature #114 on page 63.

You may wish to use three or more phone numbers for a single telephone line. In order to distinguish which

number the call was addressed to, a different ring pattern must be assigned for each number.

Example: Using three phone numbers

| Telephone number | Ring pattern | Use |
|------------------|---------------|----------|
| 012 1234 | Standard ring | Personal |
| 012 5678 | Double ring | Business |
| 012 9876 | Triple ring | Fax |

To use one phone number for the fax, program the ring pattern assigned for the fax (feature #431 on page 61). In the example, the ring pattern assigned for fax is a triple ring, so you should program “C” (triple ring).

| Ring pattern | Selection |
|--|-----------|
| Standard ring (one long ring)  1st ring 2nd ring | [1] “A” |
| Double ring (two short rings)  1st ring 2nd ring | [2] “B” |
| Triple ring (short-long-short rings)  1st ring 2nd ring | [3] “C” |
| Other triple ring (short-short-long rings)  1st ring 2nd ring | [4] “D” |

Note:

- The default setting is [5] “B-D”. The fax will respond to all calls with ring tone patterns “B”, “C” and “D”.


8.4 Programming the ring pattern assigned for fax

Important:

- Available when “Middle East”, “Asia” or “Africa” is selected in feature #114 on page 63.

- 1 Set feature #430 to “On” (page 61).
- 2 [Menu] → [Ⓜ][4][3][1]
- 3 Press [1] to [5] to select the ring pattern assigned for fax. → [Set] → [Menu]

9.1 Programming

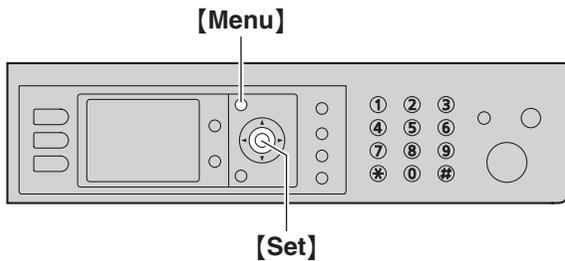

- 1 **[Menu]**
- 2 Press **[\updownarrow]** and the 3-digit code (page 63 to page 80).
- 3 Press the appropriate selection to display the desired setting.
 - This step will vary depending on the feature.
- 4 **[Set]**
- 5 Press **[Menu]** to exit.

To select features through the web browser interface (LAN connection only)

You can change features through the web browser interface instead of the unit.

1. Start Multi-Function Station. → **[Utilities]** → **[Configuration Web Page]**
 - You can also access the unit by entering its IP address on the web browser.
2. Select the desired category from the menu bar.
[Device Configuration]: features of the unit
[Advance Configuration]: advanced features for each mode
[Network Configuration]: network features
3. Type “root” as the user name, then enter the password (feature #155 on page 64). → **[OK]**
4. Select the desired feature tab at the top of the right frame.
5. Change the settings or edit the information.
 - This step will vary depending on the feature.
6. **[Submit]**
 - The new setting will be transferred to the unit.
7. Close the web browser.

Note:

- The settings displayed in the web browser will be updated by clicking **[Reload]**.

9.2 Basic features

| Feature/Code | Selection |
|---|---|
| Setting the date and time [#][1][0][1] | Enter the date and time using the dial keypad. See page 23 for details. |
| Setting your logo [#][1][0][2] | Enter your logo using the dial keypad. See page 24 for details. |
| Setting your fax number [#][1][0][3] | Enter your fax number using the dial keypad. See page 25 for details. |
| Setting the location where you use [#][1][1][4] | This setting must match your location. [1] “Middle East” (default): To use in Middle East. [2] “Malaysia”: To use in Malaysia. [3] “Asia”: To use in Asia. [4] “Australia”: To use in Australia. [5] “New Zealand”: To use in New Zealand. [6] “Tunisia”: To use in Tunisia. [7] “Africa”: To use in Africa. |
| Setting the dialling mode [#][1][2][0] | [1] “Pulse” [2] “Tone” (default) Note: <ul style="list-style-type: none"> This feature may not be available depending on feature #114 setting (page 3). See page 20 for details. |
| Setting recall/flash time [#][1][2][1] | The recall/flash time depends on your telephone exchange or host PBX. [0] “900ms” [1] “700ms” [2] “600ms” [3] “400ms” [4] “300ms” [5] “250ms” [6] “200ms” [7] “160ms” [8] “110ms” [9] “100ms” [*] “90ms” [#] “80ms” Note: <ul style="list-style-type: none"> The default may vary depending on feature #114 setting. If the unit is connected via a PBX, PBX functions (transferring a call, etc.) might not work correctly. Consult your PBX supplier for the correct setting. |
| Selecting the scale [#][1][4][7] | [1] “Millimetres” (default) [2] “Inches” Note: <ul style="list-style-type: none"> The selected scale will be used when measurements are shown on the unit’s display. |

9. Programmable Features

| Feature/Code | Selection |
|--|---|
| Changing the password for feature programming via remote operation [#][1][5][5] | <ol style="list-style-type: none"> 1. [Menu] → [#][1][5][5] → [Set] 2. Enter the current password. → [Set] <ul style="list-style-type: none"> • The default password is “1234”. 3. Enter a new 4-digit password using 0–9. → [Set] 4. Enter the new password again. → [Set] → [Menu] <p>Note:</p> <ul style="list-style-type: none"> • It is recommended that you change this password from the default password. • This password is also used for feature programming via a web browser. |
| Setting the toner maintenance time [#][1][5][8] | <p>The unit will automatically activate for maintenance, once every 24 hours. Because this is to prevent the toner from solidifying, the noise that the unit makes during maintenance cannot be stopped. However, if the unit’s noise bothers you, you can change the start time.</p> <ol style="list-style-type: none"> 1. [Menu] → [#][1][5][8] → [Set] 2. Enter the maintenance start time. <ul style="list-style-type: none"> • If you selected 12-hour time entry (page 23), the default time is “12:00AM”. Press [*] repeatedly to select AM or PM. • If you selected 24-hour time entry (page 23), the default time is “00:00”. 3. [Set] → [Menu] |
| Resetting all features (and deleting all data in memory) [#][1][5][9] | <p>Before you dispose of, transfer or return the product, activate this feature to reset all programmable features and to delete all data stored in memory. Phonebook (or caller information) and fax transmission data (journal report and faxes received in memory) will be deleted.</p> <p>[0] “No” (default) [1] “Yes”</p> <ul style="list-style-type: none"> • Disconnect the telephone line cord, USB cable and LAN cable before activating this feature. <p>To reset all features:</p> <ol style="list-style-type: none"> 1. [Menu] → [#][1][5][9] 2. Press [1] to select “Yes”. → [Set] 3. Press [1] to select “Yes”. → [Set] <p>Note:</p> <ul style="list-style-type: none"> • The counter view (feature #484 on page 66) will not be reset. |
| Setting the ringer pattern [#][1][6][1] | <p>[1] “A” (default) [2] “B” [3] “C”</p> |
| Changing the ring count in FAX ONLY mode [#][2][1][0] | <p>[1] “1” [2] “2” (default) [3] “3” [4] “4” [5] “5” [6] “6” [7] “7” [8] “8” [9] “9”</p> <p>Note:</p> <ul style="list-style-type: none"> • If feature #114 is set to “Australia” or “New Zealand”, [1] is not available. • If you are using the unit with an answering machine, set to more than 4 (page 54). |

| Feature/Code | Selection |
|--|--|
| Setting the Caller ID list to print automatically [#][2][1][6] | <p>[0] “off” (default): The unit will not print the Caller ID list, but will keep records of the information for the last 30 callers.</p> <p>[1] “on”: The unit will print the Caller ID list automatically after every 30 new calls (page 58).</p> |
| Setting the time adjustment [#][2][2][6] | <p>Using this feature, the unit’s date and time setting will be automatically adjusted when caller information is received.</p> <p>[1] “Auto”: The date and time setting will be automatically adjusted.</p> <p>[2] “Manual”: Deactivates this feature.</p> <p>Note:</p> <ul style="list-style-type: none"> • The default may vary depending on feature #114 setting. |
| Setting the recording paper size in the standard input tray [#][3][8][0] | <p>[1] “Letter”: Letter-size paper</p> <p>[2] “A4” (default): A4-size paper</p> <p>[3] “Legal”: Legal-size paper</p> <p>[4] “216×330”</p> <p>[5] “216×340”</p> <p>Note:</p> <ul style="list-style-type: none"> • When you set feature #147 to “Inches”, the numbers are displayed in inches. |
| Setting the recording paper size in the lower input tray [#][3][8][2] | <p>This feature will be displayed only when the lower input tray is installed (page 85).</p> <p>[1] “Letter”: Letter-size paper</p> <p>[2] “A4” (default): A4-size paper</p> <p>[3] “Legal”: Legal-size paper</p> <p>[4] “216×330”</p> <p>[5] “216×340”</p> <p>Note:</p> <ul style="list-style-type: none"> • When you set feature #147 to “Inches”, the numbers are displayed in inches. |
| Setting the recording paper type [#][3][8][3] | <p>[1] “Plain Paper”: 75 g/m² to 90 g/m² paper.</p> <p>[2] “Thin Paper” (default): 64 g/m² to 75 g/m² paper.</p> <p>[3] “Thick Paper”: 90 g/m² to 165 g/m² paper.</p> <p>Note:</p> <ul style="list-style-type: none"> • This setting is valid for both the standard input tray and the lower input tray. • “Thick Paper” will not be displayed if any of the paper input tray settings are changed to “#2” or “#1+#2”: <ul style="list-style-type: none"> – fax (feature #440 on page 70). – copy (feature #460 on page 73). – PCL[®] (feature #760 on page 75). – scan to email print feature (feature #565 on page 80). |
| Setting the waiting time for the power save mode [#][4][0][3] | <p>To set the length of time before the unit enters power save mode.</p> <p>[1] “5min”: 5 minutes</p> <p>[2] “15min” (default): 15 minutes</p> <p>[3] “30min”: 30 minutes</p> <p>[4] “1h”: 1 hour</p> <p>Note:</p> <ul style="list-style-type: none"> • When in power save mode, the unit needs to preheat the fuser unit before it can begin printing. |
| Holding the previous contrast setting [#][4][6][2] | <p>[0] “Disabled” (default): Deactivates this feature.</p> <p>[1] “Enabled”: The unit will hold the previous setting.</p> <p>Note:</p> <ul style="list-style-type: none"> • The previous setting will be held individually for copying and sending faxes. |

9. Programmable Features

| Feature/Code | Selection |
|---|---|
| Setting the default operation mode 【#】【4】【6】【3】 | To select the default operation mode when the selected time of the mode timer (feature #464) passes. 【1】 “Copy” (default): Copy mode is selected as default. 【2】 “Fax”: Fax mode is selected as default. Note: <ul style="list-style-type: none">• You cannot select the scan mode using this feature. |
| Setting the default operation mode timer 【#】【4】【6】【4】 | To set the timer before returning to the default operation mode (feature #463). 【0】 “off”: Deactivates this feature. 【1】 “30s”: 30 seconds 【2】 “1min” (default): 1 minute 【3】 “2min”: 2 minutes 【4】 “5min”: 5 minutes |
| Setting toner save feature 【#】【4】【8】【2】 | 【0】 “off” (default): Deactivates this feature. 【1】 “on”: The toner cartridge will last longer. Note: <ul style="list-style-type: none">• This feature may lower the print quality by reducing toner consumption.• This setting is valid for copying, and when the unit automatically prints reports/lists.• This setting is invalid for printing received faxes. |
| Viewing the counter 【#】【4】【8】【4】 | To confirm the count number of prints. 1. [Menu] → 【#】【4】【8】【4】 2. [Set] → [Menu] |

9.3 Fax features

| Feature/Code | Selection |
|--|---|
| Changing the TEL/FAX delayed ring count [#][2][1][2] | <p>If you use an extension telephone in TEL/FAX mode, select the desired number of times the extension telephone rings before the unit answers the call.</p> <p>[1] "1" [2] "2" (default) [3] "3" [4] "4" [5] "5" [6] "6" [7] "7" [8] "8" [9] "9"</p> <p>Note:</p> <ul style="list-style-type: none"> This feature may not be available depending on feature #114 setting (page 3). See page 51 for details. |
| Erasing all items stored for the navigator directory [#][2][8][9] | <p>[0] "No" (default) [1] "Yes"</p> <ul style="list-style-type: none"> Disconnect the telephone line cord, USB cable and LAN cable before activating this feature. <p>To erase all items:</p> <ol style="list-style-type: none"> [Menu] → [#][2][8][9] Press [1] to select "Yes". → [Set] Press [1] to select "Yes". → [Set] → [Menu] |
| Printing a sending report [#][4][0][1] | <p>[0] "Off": Sending reports will not be printed. [1] "On": A sending report will be printed after every fax transmission. [2] "Error" (default): A sending report will be printed only when fax transmission fails.</p> |
| Setting the journal report to print automatically [#][4][0][2] | <p>[0] "Off": The unit will not print a journal report, but will keep a record of the last 30 fax transmissions and receptions. [1] "On" (default): The unit will print a journal report automatically after every 30 new fax transmissions and receptions (page 45).</p> |
| Changing the receiving mode in the manual answer setting [#][4][0][4] | <p>[1] "Tel" (default): Telephone mode (page 51) [2] "Tel/Fax": Telephone/Fax mode (page 51)</p> <p>Note:</p> <ul style="list-style-type: none"> This feature may not be available depending on feature #114 setting (page 3). |
| Sending documents overseas [#][4][1][1] | <p>If you cannot send a fax overseas even if the number is correct and the line is connected, activate this feature before sending the fax. This feature improves the reliability by reducing the transmission speed.</p> <p>[0] "Off": Deactivates this feature. [1] "Next Fax": This setting is effective only for the next attempted fax transmission. After transmission, the unit will return to the previous setting. [2] "Error" (default): When the previous fax transmission fails and you wish to re-send the document.</p> <p>Note:</p> <ul style="list-style-type: none"> This feature is not available for broadcast transmission. Calling charges may be higher than usual. |

9. Programmable Features

| Feature/Code | Selection |
|--|--|
| <p>Sending a fax at a specific time [#][4][1][2]</p> | <p>This feature allows you to take advantage of low-cost calling hours offered by your telephone company. This feature can be set up to 24 hours in advance of the desired time.</p> <p>[0] “off” (default) [1] “On”</p> <p>To send a document:</p> <ol style="list-style-type: none"> If the [Fax] light is OFF, turn it ON by pressing [Fax]. Set the original (page 21). [Menu] → [#][4][1][2] Press [1] to select “On”. → [Set] Enter the fax number. <ul style="list-style-type: none"> To enter an item using navigator directory, see steps 2 to 3 on “6.3.1 Using the scanner glass”, page 47. [Set] Press [▼] or [▲] repeatedly to select “Time”. → [◀]/[▶] Enter the transmission start time. <ul style="list-style-type: none"> If you selected 12-hour time entry (page 23), press [◀] or [▶] repeatedly to move the cursor, and then press [▼] or [▲] repeatedly to select “AM” or “PM”. If you selected 24-hour time entry (page 23), the time is set using 24-hour time entry. [Set] If necessary, change the resolution (page 44) and the contrast (page 44). When using the scanner glass, press [Start]. → [Start] When using the automatic document feeder, press [Start]. <ul style="list-style-type: none"> The document will be fed into the unit and scanned into memory. The unit will then send the data at the specified time. You cannot use this feature for another fax transmission until the former sending is completed. <p>Note:</p> <ul style="list-style-type: none"> To cancel this setting after programming, press [Stop] while the unit is idle, and then press [Set]. |
| <p>Setting the Error Correction Mode (ECM) [#][4][1][3]</p> | <p>This feature is available when the sending / receiving fax machines are ECM compatible.</p> <p>[0] “off”: Deactivates this feature. [1] “on” (default): Fax transmission / reception will be carried out so that the errors do not occur.</p> |
| <p>Setting the connecting tone [#][4][1][6]</p> | <p>If you often have trouble when sending faxes, this feature allows you to hear connecting tones: fax tone, ring back tone and busy tone. You can use these tones to confirm the status of the other party’s machine.</p> <p>[0] “off”: Deactivates this feature. [1] “On” (default): You will hear connecting tones.</p> <p>Note:</p> <ul style="list-style-type: none"> If the ring back tone continues, the other party’s machine may not be a fax machine or may have run out of paper. Check with the other party. The connecting tone volume cannot be adjusted. |
| <p>Setting the maximum fax speed [#][4][1][8]</p> | <p>[1] “14.4Kbps” [2] “33.6Kbps” (default)</p> <p>Note:</p> <ul style="list-style-type: none"> The fax speed maybe lower than the selected speed depending on your line. |

| Feature/Code | Selection |
|---|---|
| Activating the Distinctive Ring feature [#][4][3][0] | [0] "Off" (default) [1] "On" Note: <ul style="list-style-type: none"> This feature may not be available depending on feature #114 setting (page 3). See page 61 for details. |
| Setting the ring pattern for fax (Distinctive Ring feature) [#][4][3][1] | [1] "A" [2] "B" [3] "C" [4] "D" [5] "B-D" (default) Note: <ul style="list-style-type: none"> This feature may not be available depending on feature #114 setting (page 3). See page 61 for details. |
| Setting auto reduction feature [#][4][3][2] | To receive a fax document that is longer than your recording paper. [0] "Off": The unit will print received documents at their original size. [1] "On" (default): The unit will fit received documents onto your recording paper. |
| Changing the fax activation code [#][4][3][4] | If you wish to use an extension telephone to receive faxes, activate this feature and program the activation code. Important: <ul style="list-style-type: none"> The fax activation code must be different from the code that you programmed on the answering machine. [0] "Off" [1] "On" (default) 1. [Menu] → [#][4][3][4] 2. Press [1] to select "On". → [Set] 3. Enter your code from 2 to 4 digits, using 0–9, [*] and [#] . <ul style="list-style-type: none"> The default code is "*#9". Do not enter "0000". 4. [Set] → [Menu] |
| Changing the silent fax recognition ring count [#][4][3][6] | To change the number of times the unit rings while in TEL/FAX mode. [3] "3" (default) [4] "4" [5] "5" [6] "6" [7] "7" [8] "8" [9] "9" Note: <ul style="list-style-type: none"> This feature may not be available depending on feature #114 setting (page 3). See page 52 for details. |

9. Programmable Features

| Feature/Code | Selection |
|---|--|
| Setting the memory reception alert [#][4][3][7] | <p>To alert you with a beeping sound when a received fax document is stored into memory.</p> <p>[0] “off”: Deactivates this feature. [1] “on” (default): You will hear a beeping sound.</p> <p>Note:</p> <ul style="list-style-type: none"> • If documents are stored into memory due to some printing problem, the beeps will continue until you solve the problem. If a message is displayed, see page 88 to page 90 for directions on printing out the stored documents. Make sure the unit is supplied with enough paper to print the stored document. • If documents are stored into memory due to activating the web fax preview (feature #448 on page 56), the unit will not beep. However, the unit will start to beep when the memory is nearly full. |
| Setting friendly reception [#][4][3][8] | <p>To receive a fax automatically when you answer a call and hear a fax calling tone (slow beep).</p> <p>[0] “off”: You have to press [Start] for fax reception. [1] “on” (default): You do not have to press [Start] for fax reception.</p> |
| Setting the paper input tray to use for printing received faxes [#][4][4][0] | <p>This feature will be displayed only when the lower input tray is installed (page 85).</p> <p>[1] “#1”: Standard input tray [2] “#2”: Lower input tray [3] “Auto” (default): The unit will automatically select the standard input tray or the lower input tray according to the paper size of the received faxes.</p> <p>Note:</p> <ul style="list-style-type: none"> • To select “#2”, select “Plain Paper” or “Thin Paper” for the recording paper type setting (feature #383 on page 65). • Even if you select “Auto”, recording paper will always be fed from the standard input tray if “Thick Paper” is selected for the recording paper type setting (feature #383 on page 65). |
| Receiving a fax into the computer [#][4][4][2] | <p>If you wish to receive a fax into a computer, activate this feature and run [PC FAX] from Multi-Function Station.</p> <p>This feature is available when the fax preview mode is turned OFF (feature #448 on page 56).</p> <p>[0] “off”: Deactivates this feature. [1] “Always”: If the unit recognizes the connection to the computer, it will transfer received documents to the computer. If the unit cannot recognize the connection, it will store received documents into memory, and then transfer the data after recognition of the computer connection. [2] “Connected”: If the unit recognizes the connection to the computer, it will transfer received documents to the computer. If the unit cannot recognize the connection, it will print the data.</p> <p>Note:</p> <ul style="list-style-type: none"> • The default may vary depending on feature #114 setting. |
| Setting the computer for PC fax reception [#][4][4][3] | <p>To select the computer that will be used for receiving a fax. See page 26 for details.</p> |
| Sending legal size documents using the scanner glass [#][4][4][5] | <p>[0] “off” (default): Deactivates this feature. [1] “Next Fax”: Legal-size documents can be sent for the next fax transmission using the scanner glass. After transmission, this setting will turn OFF automatically. [2] “Always”: Legal-size documents can be sent using the scanner glass anytime.</p> |

| Feature/Code | Selection |
|---|---|
| Setting the fax preview mode [#][4][4][8] | See page 56 for details. |
| Deleting received fax documents automatically [#][4][4][9] | This feature is available when feature #448 is activated. [0] "Off": Deactivates this feature. [1] "On" (default): The received fax document will be deleted automatically after printing (page 53). |
| Setting the web fax preview access code [#][4][5][0] | See page 56 for details. |
| Resetting fax features to their default settings [#][4][5][9] | [0] "No" (default) [1] "Yes" To reset the fax features: 1. [Menu] → [#][4][5][9] 2. Press [1] to select "Yes". → [Set] → [Set] → [Menu] Note: • The PC fax reception (feature #443 on page 26) will not be reset. • If you select "Yes", the unit will automatically print out any received fax documents that have been stored into memory: – PC fax setting (feature #442 on page 70). – Fax preview (feature #448 on page 56). |
| Setting the information for saving a fax document as an email attachment (via an email server) (LAN connection only) • This feature can be programmed only through the web browser interface. | When you save the fax document as an email attachment, you need to program the email server and SMTP server settings beforehand. Consult your service provider or network administrator for details. 1. Start Multi-Function Station. 2. [Utilities] → [Configuration Web Page] → [Network Configuration] 3. Type "root" as the user name, then enter the password (feature #155 on page 64). → [OK] 4. Select the [Email Feature] tab. 5. Click [Edit] next to [Email Server]. 6. Enter the email server and SMTP server information. → [Submit] 7. Close the web browser. |
| Registering the email destinations (via an email server) (LAN connection only) • This feature can be programmed only through the web browser interface. | When you save the fax document as an email attachment, you can register email destinations (up to 300 destinations) for the unit through the web browser interface in advance. 1. Start Multi-Function Station. 2. [Utilities] → [Configuration Web Page] → [Network Configuration] 3. Type "root" as the user name, then enter the password (feature #155 on page 64). → [OK] 4. Select the [Email Feature] tab. 5. Click [Edit] next to [Send User]. 6. Click [Edit] next to the desired email user. 7. Enter the name and email address. → [Submit] 8. Close the web browser. |

9. Programmable Features

| Feature/Code | Selection |
|---|--|
| <p>Setting the FTP server information for saving a fax document (LAN connection only)</p> <ul style="list-style-type: none">• This feature can be programmed only through the web browser interface. | <p>When you save the fax document in the folder on the FTP server, you can register FTP destinations (up to 6 destinations) to the unit through the web browser interface.</p> <ol style="list-style-type: none">1. Start Multi-Function Station.2. [Utilities] → [Configuration Web Page] → [Network Configuration]3. Type “root” as the user name, then enter the password (feature #155 on page 64). → [OK]4. Select the [FTP Feature] tab.5. Click [Edit] next to [FTP Server].6. Click [Edit] next to the desired FTP server.7. Enter the server name, IP address, folder directory, etc. → [Submit]8. Close the web browser. <p>Note:</p> <ul style="list-style-type: none">• If you do not enter a folder directory in step 7, the fax document will be saved in the root folder. |

9.4 Copy features

| Feature/Code | Selection |
|---|--|
| Setting the paper input tray to use for copy [#][4][6][0] | <p>This feature will be displayed only when the lower input tray is installed (page 85).</p> <p>[1] “#1” (default): Standard input tray [2] “#2”: Lower input tray [3] “#1+#2”</p> <p>Note:</p> <ul style="list-style-type: none"> • To select “#2”, select “Plain Paper” or “Thin Paper” for the recording paper type setting (feature #383 on page 65). • To select “#1+#2”, <ul style="list-style-type: none"> – select the same paper size for the standard input tray (feature #380 on page 65) and lower input tray (feature #382 on page 65). If either is changed, “#1” will be selected automatically. – select “Plain Paper” or “Thin Paper” for the recording paper type setting (feature #383 on page 65). • If the copy input tray prompt (feature #471 on page 74) is activated, it overrides this feature. |
| Changing the default copy resolution [#][4][6][1] | <p>To change the default resolution setting for copying.</p> <p>[1] “Text/Photo” (default): For documents containing both text and photographs. [2] “Text”: For documents containing only text. [3] “Photo”: For documents containing photographs, shaded drawings, etc.</p> |
| Holding the previous page layout setting [#][4][6][7] | <p>[0] “Disabled” (default): Deactivates this feature. [1] “Enabled”: The unit will hold the previous setting.</p> |
| Holding the previous zoom setting [#][4][6][8] | <p>[0] “Disabled” (default): Deactivates this feature. [1] “Enabled”: The unit will hold the previous setting.</p> |
| Holding the previous collate setting [#][4][6][9] | <p>[0] “Disabled” (default): Deactivates this feature. [1] “Enabled”: The unit will hold the previous setting.</p> |
| Holding the previous duplex setting [#][4][7][0] | <p>[0] “Disabled” (default): Deactivates this feature. [1] “Enabled”: The unit will hold the previous setting.</p> <p>Note:</p> <ul style="list-style-type: none"> • When this feature is activated, it will be effective for the following: <ul style="list-style-type: none"> – When making 1-sided originals into 2-sided copies (page 40). – When making 2-sided originals into 2-sided copies (page 40). • Even if this feature is activated, it will not be effective when making 2-sided originals into 1-sided copies (page 40). • When making 2-sided originals into 2-sided copies, the original document settings will be reset even if this feature is activated. See step 2 to 4 on page 40 to change the setting again. |

9. Programmable Features

| Feature/Code | Selection |
|--|--|
| Setting the paper input tray prompt for copy [#][4][7][1] | <p>This feature will be displayed only when the lower input tray is installed (page 85).</p> <p>[0] “off”: Deactivates this feature.</p> <p>[1] “Auto” (default): When making a copy, you will be prompted to select the desired paper input tray if the recording paper size setting is different for the standard input tray (feature #380 on page 65) and the lower input tray (feature #382 on page 65).</p> <p>[2] “Always”: When making a copy, you will always be prompted to select the desired paper input tray.</p> <p>Note:</p> <ul style="list-style-type: none">• When prompted, select the desired paper input tray by pressing [◀] or [▶] repeatedly, then press [Start].• Even if “Auto” or “Always” is selected, this feature will not be activated if the recording paper type setting (feature #383 on page 65) is set to “Thick Paper”. Change the setting to “Plain Paper” or “Thin Paper” beforehand. |

9.5 PC print features

| Feature/Code | Selection |
|---|--|
| Setting the paper input tray in PCL [#][7][6][0] | <p>This feature will be displayed only when the lower input tray is installed (page 85).</p> <p>[1] “#1” (default): Standard input tray [2] “#2”: Lower input tray [3] “#1+#2”</p> <p>Note:</p> <ul style="list-style-type: none"> To select “#2”, select “Plain Paper” or “Thin Paper” for the recording paper type setting (feature #383 on page 65). To select “#1+#2”, <ul style="list-style-type: none"> select the same paper size for the standard input tray (feature #380 on page 65) and lower input tray (feature #382 on page 65). If either is changed, “#1” will be selected automatically. select “Plain Paper” or “Thin Paper” for the recording paper type setting (feature #383 on page 65). |
| Setting the number of copies in PCL [#][7][6][2] | <ol style="list-style-type: none"> [Menu] → [#][7][6][2] → [Set] Enter the number of copies from “001” to “999”, using the dial keypad. <ul style="list-style-type: none"> The default setting is “001”. [Set] → [Menu] |
| Setting the recording paper size in PCL [#][7][6][3] | <p>[1] “Letter”: Letter-size paper [2] “A4” (default): A4-size paper [3] “Legal”: Legal-size paper [4] “216×330” [5] “216×340”</p> <p>Note:</p> <ul style="list-style-type: none"> When you set feature #147 to “Inches”, the numbers are displayed in inches. |
| Setting the image reduction feature in PCL [#][7][6][4] | <p>[0] “off”: Deactivates this feature. [1] “on” (default): The document resolution will be automatically reduced when the data size is too large to print.</p> <p>Note:</p> <ul style="list-style-type: none"> This feature may lower the print quality by reducing the resolution. |
| Setting the recording paper direction in PCL [#][7][6][5] | <p>[1] “Portrait” (default): The document will be printed in portrait direction. [2] “Landscape”: The document will be printed in landscape direction.</p> |
| Setting the A4 wide feature in PCL [#][7][6][6] | <p>You can change the margin and printable area of A4-size recording paper so that 80 characters in 10 cpi font may be printed on a line.</p> <p>[0] “off” (default): Deactivates this feature. [1] “on”: The margin and printable area of A4 recording paper will be changed.</p> |
| Setting the lines per page in PCL [#][7][6][7] | <p>To set the number of lines per page in PCL printing.</p> <ol style="list-style-type: none"> [Menu] → [#][7][6][7] → [Set] Enter the number of lines per page from “005” to “128”, using the dial keypad. <ul style="list-style-type: none"> The default setting is “064”. [Set] → [Menu] |
| Setting the font source in PCL [#][7][6][8] | <p>This feature is available when the downloaded font is registered to the unit.</p> <p>[1] “Resident” (default): The document will be printed using resident font. [2] “Download Font”: The document will be printed using download font.</p> |

9. Programmable Features

| Feature/Code | Selection |
|---|--|
| Setting the font number in PCL [#][7][6][9] | <p>To set the font number to be used in PCL printing. The unit assigns a number to each font.</p> <ol style="list-style-type: none"> [Menu] → [#][7][6][9] → [Set] Enter the font number from “000” to “054”, using the dial keypad. <ul style="list-style-type: none"> The default setting is “000”. [Set] → [Menu] <p>Note:</p> <ul style="list-style-type: none"> If the font source in PCL (feature #768 on page 75) is set to “Download Font”, the default setting is “001”. To print the font list, see page 109. |
| Setting the font pitch/point in PCL [#][7][7][0] | <p>To set the font pitch/point to be used in PCL printing.</p> <ol style="list-style-type: none"> [Menu] → [#][7][7][0] → [Set] Enter the font pitch from “00.44” to “99.99”, or the point from “004.00” to “999.75”, using the dial keypad. <ul style="list-style-type: none"> The default pitch is “10.00” and the default point is “012.00”. The setting will be either font pitch or point depending on the font number selected in feature #769 (page 76). [Set] → [Menu] |
| Setting the symbol set in PCL [#][7][7][1] | <p>To set the symbol set to be used in PCL printing.</p> <ol style="list-style-type: none"> [Menu] → [#][7][7][1] Press [▼] or [▲] repeatedly to display the desired symbol set. → [Set] → [Menu] |
| Setting the line breaks in PCL [#][7][7][2] | <p>To set each behaviour when receiving CR, LF, and FF codes.</p> <p>[1] “CR/LF/FF” (default): CR=CR, LF=LF, FF=FF [2] “CR+LF/LF/FF”: CR=CR+LF, LF=LF, FF=FF [3] “CR/CR+LF/CR+FF”: CR=CR, LF=CR+LF, FF=CR+FF</p> |
| Setting the waiting time for auto continue mode [#][7][7][3] | <p>To set the length of time before the unit recovers if a memory overflow occurs.</p> <p>[1] “off” (default): Deactivates this feature. [2] “20s”: 20 seconds [3] “30s”: 30 seconds [4] “60s”: 60 seconds [5] “90s”: 90 seconds [6] “120s”: 120 seconds</p> |
| Changing the data timeout setting [#][7][7][4] | <p>The unit will automatically print the remaining data in memory when the computer does not send data to the unit during the set time.</p> <ol style="list-style-type: none"> [Menu] → [#][7][7][4] → [Set] Enter the desired data timeout setting from “005” seconds to “600” seconds, using the dial keypad. <ul style="list-style-type: none"> The default setting is “060” seconds. [Set] → [Menu] |
| Setting mutual A4/letter print [#][7][7][6] | <p>This feature allows printing in A4-size even if letter-size recording paper is loaded, and vice versa.</p> <p>[0] “off”: Deactivates this feature. [1] “on” (default): Printing is possible between A4/letter-size.</p> |

9.6 Scan features

| Feature/Code | Selection |
|--|--|
| Setting the scan mode for Push Scan [#][4][9][3] | [1] “Viewer” (default): The scanned image will be displayed in the [Multi-Function Viewer] window. [2] “File”: The scanned image will be saved as a file. [3] “Email”: The scanned image will be saved for email attachment. [4] “OCR”: The scanned image will be displayed in the OCR window. |
| Holding the previous scanning parameter for Push Scan [#][4][9][4] | [0] “Disabled” (default): Deactivates this feature. [1] “Enabled”: The unit will hold the previous scan settings for each mode of push scan. |
| Setting the information for scan to email address (LAN connection only) <ul style="list-style-type: none"> This feature can be programmed only through the web browser interface. | When you send scanned files as email attachments directly from this unit, you need to program the email server and SMTP server settings beforehand. Consult your service provider or network administrator for details. <ol style="list-style-type: none"> Start Multi-Function Station. [Utilities] → [Configuration Web Page] → [Advance Configuration] Type “root” as the user name, then enter the password (feature #155 on page 64). → [OK] Select the [Scan Feature] tab. Click [Edit] next to [Email Server]. Enter the email server and SMTP server information. → [Submit] Close the web browser. |
| Registering the scan to email address destinations (via an email server) (LAN connection only) <ul style="list-style-type: none"> This feature can be programmed only through the web browser interface. | When you send scanned files as email attachments directly from this unit, you can register email destinations (up to 300 destinations) for the unit through the web browser interface in advance. <ol style="list-style-type: none"> Start Multi-Function Station. [Utilities] → [Configuration Web Page] → [Advance Configuration] Type “root” as the user name, then enter the password (feature #155 on page 64). → [OK] Select the [Scan Feature] tab. Click [Edit] next to [Send User]. Click [Edit] next to the desired email user. Enter the name and email address. → [Submit] Close the web browser. |

9. Programmable Features

| Feature/Code | Selection |
|--|--|
| <p>Setting the information for scan to FTP (LAN connection only)</p> <ul style="list-style-type: none">• This feature can be programmed only through the web browser interface. | <p>When you send scanned files to an FTP server, you can register FTP destinations (up to 6 destinations) to the unit through the web browser interface.</p> <ol style="list-style-type: none">1. Start Multi-Function Station.2. [Utilities] → [Configuration Web Page] → [Advance Configuration]3. Type “root” as the user name, then enter the password (feature #155 on page 64). → [OK]4. Select the [Scan Feature] tab.5. Click [Edit] next to [FTP Server].6. Click [Edit] next to the desired FTP server.7. Enter the server name, IP address, folder directory, etc. → [Submit]8. Close the web browser. <p>Note:</p> <ul style="list-style-type: none">• If you do not enter a folder directory in step 7, the scanned image will be saved in the root folder. |

9.7 LAN features

| Feature/Code | Selection |
|---|---|
| LAN setting with a DHCP server [#][5][0][0] | [0] “Disabled”: Deactivates this feature. [1] “Enabled” (default): The following will be allocated automatically using a DHCP (Dynamic Host Configuration Protocol) server. <ul style="list-style-type: none"> – IP address – Subnet mask – Default gateway |
| Setting the IP address for the LAN connection [#][5][0][1] | This feature is available when feature #500 is deactivated. <ol style="list-style-type: none"> 1. [Menu] → [#][5][0][1] → [Set] 2. Enter the IP address of the unit on the LAN using the dial keypad. → [Set] → [Menu] |
| Setting the Subnet mask for the LAN connection [#][5][0][2] | This feature is available when feature #500 is deactivated. <ol style="list-style-type: none"> 1. [Menu] → [#][5][0][2] → [Set] 2. Enter the subnet mask of the network on the LAN using the dial keypad. → [Set] → [Menu] |
| Setting the default gateway for the LAN connection [#][5][0][3] | This feature is available when feature #500 is deactivated. <ol style="list-style-type: none"> 1. [Menu] → [#][5][0][3] → [Set] 2. Enter the default gateway of the network on the LAN using the dial keypad. → [Set] → [Menu] |
| Setting the primary DNS server for the LAN connection [#][5][0][4] | This feature is available when feature #500 is deactivated. <ol style="list-style-type: none"> 1. [Menu] → [#][5][0][4] → [Set] 2. Enter the primary DNS server of the network on the LAN using the dial keypad. → [Set] → [Menu] |
| Setting the secondary DNS server for the LAN connection [#][5][0][5] | This feature is available when feature #500 is deactivated. <ol style="list-style-type: none"> 1. [Menu] → [#][5][0][5] → [Set] 2. Enter the secondary DNS server of the network on the LAN using the dial keypad. → [Set] → [Menu] |
| Setting the machine name [#][5][0][7] | <ol style="list-style-type: none"> 1. [Menu] → [#][5][0][7] → [Set] 2. Enter the name of the unit to recognize on the LAN, up to 15 characters, using the English alphabet and numbers (see page 83 for character entry). <ul style="list-style-type: none"> • The following symbols can also be entered. ! @ # \$ % ^ & ' (. - _ { } 3. [Set] → [Menu] <p>Note:</p> <ul style="list-style-type: none"> • In order to recognize the unit on the LAN, the default name of the unit is assigned automatically. If you change the name, assign a unique name to avoid overlapping. |
| Displaying the MAC address of the unit [#][5][0][8] | <ol style="list-style-type: none"> 1. [Menu] → [#][5][0][8] → [Set] 2. The MAC address of the unit will be displayed. → [Menu] |

9. Programmable Features

| Feature/Code | Selection |
|---|---|
| IP filtering for the LAN connection [#][5][3][2] | <p>[0] “Disabled” (default): Deactivates this feature.</p> <p>[1] “Enabled”: The unit will deny/approve access from the pre-programmed IP patterns. You can program whether to deny or approve IP addresses. Up to 4 patterns each for IPv4 and IPv6 can be programmed through the web browser interface.</p> <ol style="list-style-type: none"> 1. Start Multi-Function Station. 2. [Utilities] → [Configuration Web Page] → [Network Configuration] 3. Type “root” as the user name, then enter the password (feature #155 on page 64). → [OK] 4. Select the [LAN Feature] tab. 5. Click [Edit] next to [IP Filtering]. 6. Click [Edit] next to [Filter (IPv4)]/[Filter (IPv6)]. 7. Change the mode and edit IP filtering information. → [Submit] 8. Close the web browser. |
| Setting the IP address automatically for the LAN connection [#][5][3][3] | <p>This feature will be displayed only when feature #500 is activated.</p> <p>[0] “Disabled” (default): Deactivates this feature.</p> <p>[1] “Enabled”: IP address will be allocated automatically without using a DHCP (Dynamic Host Configuration Protocol) server.</p> |
| Setting HTTPD for the LAN connection [#][5][3][4] | <p>[0] “Disabled”: Denies access to the web browser.</p> <p>[1] “Enabled” (default): Allows access to the web browser.</p> |
| IPv6 protocol [#][5][3][5] | <p>[0] “Disabled” (default): Deactivates this feature.</p> <p>[1] “Enabled”: IPv6 protocol can be used. After installing the printer driver, be sure to change the port to IPv6 protocol. You can check the IPv6 protocol address by printing the “Setup List” (page 109).</p> <p>Note:</p> <ul style="list-style-type: none"> • To activate this feature, you need to turn the power switch of the unit OFF, then ON. |
| Setting the paper input tray to use for the scan to email print feature [#][5][6][5] | <p>This feature will be displayed only when the lower input tray is installed (page 85).</p> <p>[1] “#1” (default): Standard input tray</p> <p>[2] “#2”: Lower input tray</p> <p>[3] “#1+#2”</p> <p>Note:</p> <ul style="list-style-type: none"> • To select “#2”, select “Plain Paper” or “Thin Paper” for the recording paper type setting (feature #383 on page 65). • To select “#1+#2”, <ul style="list-style-type: none"> – select the same paper size for the standard input tray (feature #380 on page 65) and lower input tray (feature #382 on page 65). If either is changed, “#1” will be selected automatically. – select “Plain Paper” or “Thin Paper” for the recording paper type setting (feature #383 on page 65). |
| Erasing all email addresses stored in the unit [#][5][7][8] | <p>[0] “No” (default)</p> <p>[1] “Yes”</p> <ul style="list-style-type: none"> • Disconnect the telephone line cord, USB cable and LAN cable before activating this feature. <p>To erase all email addresses:</p> <ol style="list-style-type: none"> 1. [Menu] → [#][5][7][8] 2. Press [1] to select “Yes”. → [Set] 3. Press [1] to select “Yes”. → [Set] → [Menu] |

9.8 Network features (LAN connection only)

These features can be programmed through the web browser interface.

| Feature | Tab | Selection |
|---|-----------------|---|
| Setting the LAN features | [LAN Feature] | Enter the LAN feature settings. See page 79 for details. |
| Setting the community name for SNMP | [SNMP] | Enter the SNMP community name. Consult your service provider or network administrator for details. |
| Setting the location where you use this unit | [SNMP] | Enter the location information of the unit. |
| Displaying the link local address for IPv6 | [IPv6] | The link local address will be displayed. |
| Displaying the IPv6 address for auto configuration | [IPv6] | The IP address for auto configuration will be displayed. |
| Setting the IP address for IPv6 | [IPv6] | Enter the IP address for IPv6. Consult your service provider or network administrator for details. |
| Setting the default router for IPv6 | [IPv6] | Enter the default router address for IPv6. Consult your service provider or network administrator for details. |
| Setting the information for scan to FTP | [FTP Feature] | Enter the FTP server information to carry out the following functions: <ul style="list-style-type: none"> – Sending scanned images to a folder on an FTP server (page 35). – Saving the fax document in a folder on an FTP server (page 53). |
| Setting the information for scan to email address | [Email Feature] | Enter the email server and SMTP server information to carry out the following functions: <ul style="list-style-type: none"> – Sending scanned images from the unit via an email (page 34). – Saving the fax document as an email attachment (page 53). |
| Registering the scan to email address destinations | [Email Feature] | Register email address destinations (up to 300 destinations) for the unit. See page 77 for details. |
| Setting the error notify feature | [Error Notify] | [Enabled]: The unit will send an email to registered destinations when a problem occurs. [Disabled] (default): Deactivates this feature. |
| Setting the email server information for the error notify feature | [Error Notify] | Enter the email server and SMTP server information to send error notification emails to. |
| Registering destinations for the error notify feature | [Error Notify] | Enter the email address to which error notifications will be sent and select the types of problems. [Life Warning]: A warning indicating that the toner cartridge or drum cartridge needs to be replaced soon. [Media Path Error]: An error indicating that there is a problem with the paper input tray. [Life Error]: An error indicating that the toner cartridge or drum cartridge needs to be replaced. |

9. Programmable Features

| Feature | Tab | Selection |
|--|-----------------------|--|
| Setting the scan to email print feature | [Scan to Email Print] | [Enabled]: The unit will automatically print email attachment that it receives. [Disabled] (default): Deactivates this feature. See page 31 for details. |
| Setting the email checking interval | [Scan to Email Print] | Enter the desired email checking interval for the scan to email print feature. |
| Setting the header print option | [Scan to Email Print] | [Enabled] (default): The unit will print the header information along with the received email attachments. [Disabled]: Deactivates this feature. |
| Setting the email server information for the scan to email print feature | [Scan to Email Print] | When you use the scan to email print feature, you need to program the POP server settings beforehand. See page 31 for details. |
| Displaying the scan to email print list | [Scan to Email Print] | The information for the 30 most recently received emails will be displayed. |

10.1 Character entry

The dial keypad is used to enter characters and numbers.

- Press [**◀**] or [**▶**] to move the cursor.
- Press the dial keys to enter characters and numbers.
- Press [**Back**] to erase the character or number highlighted by the cursor. Press and hold [**Back**] to erase all characters or numbers.
- To enter another character located on the same dial key, press [**▶**] to move the cursor to the next space, then press the appropriate dial key.

| Keypad | Characters |
|-------------|--|
| [1] | 1 . _ - [] { } + / = , ` : ; ? |
| [2] | A B C 2 |
| | a b c 2 |
| [3] | D E F 3 |
| | d e f 3 |
| [4] | G H I 4 |
| | g h i 4 |
| [5] | J K L 5 |
| | j k l 5 |
| [6] | M N O 6 |
| | m n o 6 |
| [7] | P Q R S 7 |
| | p q r s 7 |
| [8] | T U V 8 |
| | t u v 8 |
| [9] | W X Y Z 9 |
| | w x y z 9 |
| [0] | 0 @ () < > ! " # \$ % & ¥ * ^ ' → |
| [*] | To switch between uppercase and lowercase letters. |
| [Flash] | Hyphen |
| [Caller ID] | To insert a space. |
| [Back] | To delete a character. |

To select characters using [**▼**] or [**▲**]

Instead of pressing the dial keys, you can select characters using [**▼**] or [**▲**].

1. Press [**▼**] repeatedly to display the desired character. Characters will be displayed in the following order:
 - ① Uppercase letters
 - ② Numbers
 - ③ Symbols
 - ④ Lowercase letters
 - If you press [**▲**], the order will be reversed.
2. Press [**▶**] to insert the displayed character.
3. Return to step 1 to enter the next character.


10.2 Status of the unit

10.2.1 Using Remote Control

You can easily operate the following functions from your computer.

- Programming the features (page 63)
- Storing, editing or erasing items in directories (page 46)
- Storing or erasing items for broadcast transmission (page 47)
- Viewing items in the journal report (page 45)
- Saving the journal report to your computer
- Viewing items in the Caller ID list (page 58)
- Storing caller information into directories (page 60)
- Saving the Caller ID list on your computer

- 1 Start Multi-Function Station. → **[Remote Control]**
 - The **[Multi-Function Remote Control]** window will appear.

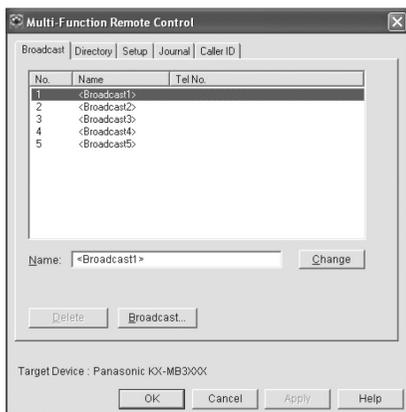

- 2 Select the desired tab.
 - The latest data in the unit will be displayed.
- 3 Perform the desired operation.
 - For details about each function, click **[Help]**.
 - To stop the operation, click **[Cancel]**.
- 4 **[OK]**
 - You can also click **[Apply]** to continue the next operation without closing the window.
- 5 Enter the password (feature #155 on page 64). → **[OK]**
 - The new data will be transferred to the unit and the window will close.

Note:

- Some of the features cannot be programmed from your computer.
- For details, see the help file by selecting [?] from Multi-Function Station.
- When another person is adjusting stored data in the unit, it may be overwritten. Make sure the unit is not currently being used for the same function.

10.2.2 Using Device Monitor

You can confirm the setting information and current status of the unit from your computer.

- 1 Start Multi-Function Station.
- 2 **[Utilities]** → **[Device Monitor]**
 - The **[Device Monitor]** window will appear.
- 3 Confirm the status of the unit.
 - [Status]**: Current status of the unit

Note:

- Additional information (toner and recording paper status, unit information, etc.) will be displayed in **[Status]** tab by clicking **[Advanced Information]**.
- You can update the status of the unit by clicking **[Refresh]**.
- If a printing error occurs, the Device Monitor will start automatically and display the error information.
- For details, see the help file by selecting [?] from Multi-Function Station.

10.2.3 Using the web browser (LAN connection only)

You can confirm the setting information and status of the unit from the web browser.

- 1 Start Multi-Function Station. → **[Utilities]** → **[Configuration Web Page]**
 - You can also access the unit by entering its IP address in a web browser.
- 2 Select a category from the menu bar.
 - [Status]**: Toner and paper information, etc.
 - [Device]**: Current status of the unit, etc.
 - [Advance]**: Feature settings information, etc.
 - [Network]**: Network information, etc.
 - When you select **[Device]**, **[Advance]** or **[Network]**, you can change which features are displayed by clicking the feature tabs at the top of the right frame.
- 3 Confirm the status of the unit.

Note:

- You can update the status of the unit by clicking **[Reload]**.

10.3 Cancelling the operations

You can cancel the current operation from the unit. You can also select the desired operation to cancel.

1 [Stop]

- The current operation will be cancelled.
- If the operation is not cancelled, go to step 2.

2 When a cancel confirmation message is displayed:


Press **[Set]** to cancel the operation.

When some operations are displayed:

Press **[▼]** or **[▲]** repeatedly to select the operation that you want to cancel. → **[Set]**

10.4 Lower input tray (optional)

You can add a lower input tray. See page 10 for accessory information.

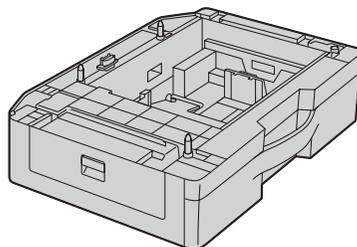

The lower input tray can hold:

- Up to 520 sheets of 75 g/m² paper.
- Up to 470 sheets of 80 g/m² paper.
- Up to 410 sheets of 90 g/m² paper.

- **The unit is set for printing A4-size thin paper by default.**
 - To use other paper sizes, change the recording paper size setting (feature #382 on page 65).
 - To use plain paper, change the recording paper type setting (feature #383 on page 65).


Important:

- Before starting installation of the lower input tray, be sure to turn the power switch OFF. For more details about the installation, please refer to the installation guide for the lower input tray.
- After installation, you can select the lower input tray to be used for the following:
 - Paper input tray setting for faxing (feature #440 on page 70).
 - Paper input tray setting for copying (feature #460 on page 73).
 - Paper input tray in PCL (feature #760 on page 75).
 - Paper input tray setting for the scan to email print feature (feature #565 on page 80).
- To use the lower input tray with your computer, you need to change the printer properties. See page 86 for details.


10. Useful Information

Caution for the lower input tray

- Do not drop the lower input tray.

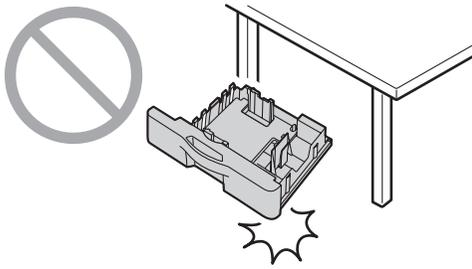

- Hold the lower input tray with both hands when removing or installing. The lower input tray weighs approximately 4.8 kg when fully loaded with recording paper. Do not touch the plate (①) on the left side of the lower input tray.

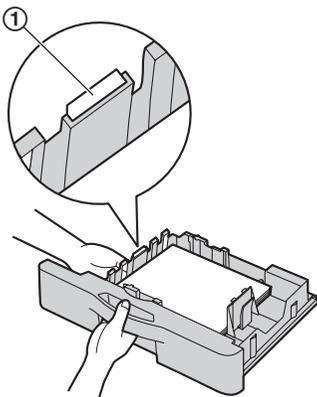

Approx. 4.8 kg

- Do not position the unit in a location where it is unstable or subject to vibrations. The unit weighs approximately 35 kg when the lower input tray is installed and fully loaded with recording paper.

10.5 Setting the lower input tray

To use the lower input tray with your computer, proceed as follows.

- 1 [Start]
- 2 Open the printer window.
For Windows 98/Windows Me/Windows 2000:
[Settings] → [Printers]
For Windows XP Professional:
[Printers and Faxes]
For Windows XP Home:
[Control Panel] → [Printers and Other Hardware] → [Printers and Faxes]
For Windows Vista:
[Control Panel] → [Printers]
- 3 Select the unit's name.
- 4 **For Windows 98/Windows Me/Windows 2000/Windows XP:**
Select [Properties] from the [File] menu.
 - The printer properties window will appear.**For Windows Vista:**
Select [Properties] from the [Organize] menu.
 - The printer properties window will appear.
- 5 Click [Auto Configuration] on the [Device] tab.
→ [OK]
 - The lower input tray will be automatically detected.
 - For [Number of Input Tray], [2] will be selected.

If the setting is not changed automatically, change it manually.
- 6 [OK]

11.1 Report messages

To indicate the unit's fax transmission/reception status, one of the following messages will be printed on the sending and journal reports (page 44).

| Message | Code | Cause & Solution |
|------------------------------------|----------------------|--|
| Communication Error | 40-42 46-72 FF | <ul style="list-style-type: none"> ● A transmission or reception error occurred. Try again or check with the other party. |
| | 43 44 | <ul style="list-style-type: none"> ● A line problem occurred. Connect the telephone line cord to a different jack and try again. ● An overseas transmission error occurred. Try using the overseas mode (feature #411 on page 67). |
| Document Jammed | ----- | <ul style="list-style-type: none"> ● Remove the jammed document (page 106). |
| Error-Not Your Unit | 53 54 59 70 | <ul style="list-style-type: none"> ● A transmission or reception error occurred because of a problem with the other party's fax machine. Check with the other party. |
| Junk Fax Proh. Reject | ----- | <ul style="list-style-type: none"> ● The junk fax prohibitor feature of this unit rejected fax reception. |
| Memory Full | ----- | <ul style="list-style-type: none"> ● The memory is full of received documents due to a lack of recording paper or a recording paper jam. Load paper (page 16) or remove the jammed paper (page 100). ● If the PC fax setting (feature #442 on page 70) is set to "Always", check the connection between the computer and the unit. ● If the fax preview mode (feature #448 on page 56) is set to "On", view, print or save the documents, and then erase unnecessary documents (page 53, 57). |
| No Document / Failed Pickup | ----- | <ul style="list-style-type: none"> ● The document was not fed into the unit properly. Re-insert it and try again. |
| Other Fax not responding | ----- | <ul style="list-style-type: none"> ● The other party's fax machine is busy or has run out of recording paper. Try again. ● The other party's fax machine rings too many times. Send the fax manually (page 44). ● The other party's machine is not a fax machine. Check with the other party. ● The number you dialled is not in service. |
| Pressed the 'Stop' key | ----- | <ul style="list-style-type: none"> ● [Stop] was pressed and fax communication was cancelled. |
| The cover was opened | ----- | <ul style="list-style-type: none"> ● The left cover was opened. Close it and try again. |
| OK | ----- | <ul style="list-style-type: none"> ● Fax transmission or reception was successful. |

11.2 Display messages

To indicate the unit's status, one or more of the following messages will appear on the display.

| Display | Cause & Solution |
|-------------------------------|--|
| "Call Service" | <ul style="list-style-type: none"> There is something wrong with the unit. Contact our service personnel. |
| "Change Drum" | <ul style="list-style-type: none"> There is something wrong with the drum cartridge. Replace the drum cartridge. |
| "Change Supplies Toner Empty" | <ul style="list-style-type: none"> The toner is empty. Replace the toner cartridge immediately. |
| "Change Supplies Toner Low" | <ul style="list-style-type: none"> The toner is reaching the end of its life. You will need to replace the toner cartridge soon. |
| "Check Document" | <ul style="list-style-type: none"> The document was not fed into the unit properly. Remove the document, and then press [Stop] to clear the message. Re-insert the document. If misfeeding occurs frequently, clean the document feeder rollers (page 108) and try again. |
| "Check Drum" | <ul style="list-style-type: none"> The drum cartridge is not inserted properly. Re-insert it correctly (page 13). |
| "Check Install Input Tray #1" | <ul style="list-style-type: none"> The paper input tray is not installed correctly. Pull out the paper input tray and re-insert it. <p>Note:</p> <ul style="list-style-type: none"> "#1": Standard input tray "#2": Lower input tray "#1+#2": Standard input tray and lower input tray |
| "Check Paper" | <ul style="list-style-type: none"> The recording paper size setting and/or the loaded recording paper is not appropriate. <ul style="list-style-type: none"> The recording paper size is not the same as the size selected for copy. The recording paper size is not the same as the size selected when printing from the PC. The recording paper size is not the same as the size selected for receiving a fax. <p>Change the recording paper size setting (feature #380 on page 65 or feature #382 on page 65), and load the appropriate recording paper.</p> |
| "Check Pick Up Input Tray #1" | <ul style="list-style-type: none"> Recording paper was not fed into the unit properly. Load the paper again (page 105). <p>Note:</p> <ul style="list-style-type: none"> "#1": Standard input tray "#2": Lower input tray |
| "Directory Full" | <ul style="list-style-type: none"> There is no space to store new items in the navigator directory. Erase unnecessary items (page 46). |
| "Drum Life Low" | <ul style="list-style-type: none"> The drum is reaching the end of its life. Replace the drum cartridge as soon as possible. |
| "Email Size Over" | <ul style="list-style-type: none"> When performing scan to email address, the total file size of scanned data exceeded the file size limitation. Divide the document into sections. |

| Display | Cause & Solution |
|------------------------------|--|
| "Fax in Memory" | <ul style="list-style-type: none"> ● The unit has a document in memory. See the other displayed message instructions to print out the document. For fax memory capacity, see page 110. ● If the PC fax setting (feature #442 on page 70) is set to "Always", <ul style="list-style-type: none"> – check the connection between the computer and the unit. – check that the computer is turned ON. ● If the fax preview mode (feature #448 on page 56) is set to "On", <ul style="list-style-type: none"> – view, print or save the received fax documents (page 52, 53, 56), and then erase the unnecessary documents (page 53). – turn the setting to "Off". The fax documents stored in memory will be printed automatically. – set feature #449 (page 71) to "On", and then print the received fax documents (page 53). |
| "File Size Over" | <ul style="list-style-type: none"> ● When performing scan to FTP server, the total file size of scanned data exceeded the file size limitation. Divide the document into sections. |
| "Keep Copying" | <ul style="list-style-type: none"> ● Copying has stopped due to some existing problem (Example: a lack of recording paper or a recording paper jam). See the other displayed message instructions to continue copying. |
| "Left Cover Open" | <ul style="list-style-type: none"> ● The left cover is open. Close it. |
| "Low Temperature" | <ul style="list-style-type: none"> ● The inside of the unit is extremely cold and cannot be operated. Use the unit in a warmer area. |
| "Memory Full" | <ul style="list-style-type: none"> ● When performing memory transmission, the document being stored exceeded the memory capacity of the unit. Send the entire document manually. ● When making a copy, the document being stored exceeded the memory capacity of the unit. Press [Stop] to clear the message. Divide the document into sections. |
| "Memory Overflow" | <ul style="list-style-type: none"> ● When printing a file, the document being stored exceeded the memory capacity of the unit. Press [Stop] to clear the message. Change the printer settings (page 30). |
| "Modem Error" | <ul style="list-style-type: none"> ● There is something wrong with the unit's modem. Contact our service personnel. |
| "No Fax Reply" | <ul style="list-style-type: none"> ● The other party's fax machine is busy or has run out of recording paper. Try again. |
| "Out of Paper Input Tray #1" | <ul style="list-style-type: none"> ● Recording paper is not loaded or the paper input tray has run out of paper. Load paper (page 16). ● Recording paper was not fed into the unit properly. Load the paper again (page 16). <p>Note:</p> <ul style="list-style-type: none"> ● "#1": Standard input tray ● "#2": Lower input tray ● "#1+#2": Standard input tray and lower input tray |
| "Paper Jammed" | <ul style="list-style-type: none"> ● A recording paper jam occurred. See the other displayed message instructions to remove the jammed paper (page 100). |
| "PC Fail or Busy." | <ul style="list-style-type: none"> ● The cable or the computer power cord is not connected correctly. Check the connections (page 19, 27). ● The software is not running on the computer. Restart the software and try again. |
| "Please Wait" | <ul style="list-style-type: none"> ● The unit is warming up. Wait for a while. |

11. Help

| Display | Cause & Solution |
|---------------------------|---|
| "Polling Error" | <ul style="list-style-type: none">● The other party's fax machine does not offer the polling function. Check with the other party. |
| "Redial Time Out" | <ul style="list-style-type: none">● The other party's fax machine is busy or has run out of recording paper. Try again. |
| "Remove Document" | <ul style="list-style-type: none">● The document is jammed. Remove the jammed document (page 106).● Attempted to send or copy a document longer than 600 mm of 1-sided document / 360 mm of 2-sided document using the automatic document feeder. Press [Stop] to remove the document. Divide the document into two or more sheets and try again. |
| "Replace Drum" | <ul style="list-style-type: none">● The drum cartridge's service life is finished. Replace the drum cartridge immediately. |
| "RX Memory Full" | <ul style="list-style-type: none">● The memory is full of received documents due to a lack of recording paper or a recording paper jam. Load paper (page 16) or remove the jammed paper (page 100).● If the PC fax setting (feature #442 on page 70) is set to "Always",<ul style="list-style-type: none">– check the connection between the computer and the unit.– check that the computer is turned ON.● If the fax preview mode (feature #448 on page 56) is set to "On",<ul style="list-style-type: none">– view, print or save the received fax documents (page 52, 53, 56), and then erase the unnecessary documents (page 53).– turn the setting to "OFF". The fax documents stored in memory will be printed automatically.– set feature #449 (page 71) to "On", and then print the received fax documents (page 53). |
| "Scanner Position Error" | <ul style="list-style-type: none">● There is something wrong with the scanner position. Turn the power switch OFF, then ON. If the problem cannot be solved, contact our service personnel. |
| "Transmit Error" | <ul style="list-style-type: none">● A transmission error occurred. Try again. |
| "Tray #2 Left Cover Open" | <ul style="list-style-type: none">● The left cover of the lower input tray is open (page 85). Close it. |
| "Warming Up" | <ul style="list-style-type: none">● The inside of the unit is cold. Let the unit warm up. Wait for a while. |


11.3 When a function does not work

11.3.1 General

| Problem | Cause & Solution |
|--|---|
| The unit does not work. | <ul style="list-style-type: none"> Check the connections (page 19, 27). |
| The recording paper exit becomes full quickly or the recording paper does not stack properly at the recording paper exit. | <ul style="list-style-type: none"> High humidity may cause the recording paper to curl. Try turning the paper over and re-inserting it. If the curl on the paper is heavy, please remove it from the recording paper exit. If you still have this problem, contact our service personnel. |
| I cannot adjust the volume or display items stored in the navigator directory. | <ul style="list-style-type: none"> The unit is set to scan mode or copy mode. Press [Fax] to switch modes. If you still have this problem, contact our service personnel. |
| A printing error is displayed while using PC FAX and Remote Control. | <ul style="list-style-type: none"> The printer driver is used for PC FAX and Remote Control. Transmission errors will be displayed as printing errors. |
| Multi-Function Station does not work properly. | <ul style="list-style-type: none"> If the USB cable is connected to a USB hub, connect the cable directly to the USB port on your computer. Make sure you have installed the latest Service Pack available for the version of Windows installed on your computer. See the Microsoft web site for details. If you have any other multifunction software installed on your computer, uninstall it. Check that your computer has enough memory and hard disk space. If your computer warns that there is insufficient memory, close other applications. If there is not enough space on the hard disk, delete unnecessary files. Uninstall Multi-Function Station once, and re-install it. |
| I cannot install or uninstall Multi-Function Station. | <ul style="list-style-type: none"> Some of the files needed to install or uninstall Multi-Function Station may be corrupted. Use the MfsCleaner utility (found on the supplied CD-ROM) to solve the problem. <ol style="list-style-type: none"> Insert the supplied CD-ROM into your CD-ROM drive. <ul style="list-style-type: none"> The setup program will start automatically. [Tools] → [Cleanup Tool] <ul style="list-style-type: none"> The [MfsCleaner] window will appear. Click [Clean], and then click [Yes] to restart the computer. <p>Note:</p> <ul style="list-style-type: none"> To install Multi-Function Station again, see page 26. |
| I cannot view the operating instructions using Multi-Function Station. | <ul style="list-style-type: none"> Install the operating instructions on your computer beforehand (page 27). |
| I cannot find the unit in the [Target Device] or [Device Select] dialogue box when operating the following functions. <ul style="list-style-type: none"> Scanning Remote Control PC FAX Device Monitor | <ul style="list-style-type: none"> The printer driver has not been installed. Install it on your computer (page 26). |

| Problem | Cause & Solution |
|---|--|
| I forgot the password for feature programming via remote operation. | <ul style="list-style-type: none"> You may have changed the feature programming password. If you do not remember it, assign a new password using feature #155 (page 64). When required to enter the current password, enter "0101" instead. |

11.3.2 Printing problems
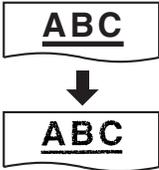
| Problem | Cause & Solution |
|--|---|
| <p>The printing quality is poor (e.g. has smudges, blurred points or lines).</p>  | <ul style="list-style-type: none"> Some paper has instructions recommending which side to print on. Try turning the recording paper over. You may have used paper with a cotton and/or fibre content that is over 20 %, such as letterhead or resume paper. The recording paper is too damp. Use new paper. |
| I changed the recording paper, but the printing quality is still poor. | <ul style="list-style-type: none"> The glass or rollers are dirty with correction fluid, etc. Clean them (page 107, 108). Please do not insert a document before correction fluid has dried completely. The toner save mode of feature #482 is ON (page 66). The remaining toner is low. Replace the toner cartridge. To check the drum life and quality, please print the printer test list (page 109). If printing quality is still poor, replace the toner cartridge and drum cartridge. |
| A blank sheet is ejected. | <ul style="list-style-type: none"> You placed the document facing the wrong way when using the copier. The other party placed the document in their fax machine the wrong way. Check with the other party. |
| Coloured and grey objects are printed in black instead of greyscale when printing from Microsoft PowerPoint or other applications. | <ul style="list-style-type: none"> Select [Color] or remove the check next to [Grayscale] in the print dialogue so that coloured or grey objects will be printed in greyscale properly. |
| When using the unit as a printer, the printing result is distorted. | <ul style="list-style-type: none"> Your unit is connected to the computer by USB. After cancelling printing using your computer, you must wait for 60 seconds before re-printing to avoid distorted printing. |

| Problem | Cause & Solution | | | | | | | | |
|---|---|------------------|-------------|---------------------------|---|---|--|---|--|
| I cannot find the PCL driver. | <ul style="list-style-type: none"> ● The PCL driver can be found in the following folder on the supplied CD-ROM. <table border="1" data-bbox="463 278 1270 633"> <thead> <tr> <th data-bbox="463 278 728 322">Operating system</th> <th data-bbox="728 278 1270 322">Folder path</th> </tr> </thead> <tbody> <tr> <td data-bbox="463 322 728 397">Windows 98/ Windows Me</td> <td data-bbox="728 322 1270 397">"D:\Drivers\Object\Printer\Win98Me\PCL"</td> </tr> <tr> <td data-bbox="463 397 728 498">Windows 2000/ Windows XP/ Windows Vista</td> <td data-bbox="728 397 1270 498">"D:\Drivers\Object\Printer\WinVistaXp2k\PCL"</td> </tr> <tr> <td data-bbox="463 498 728 633">Windows XP Professional x64 Edition/ Windows Vista x64</td> <td data-bbox="728 498 1270 633">"D:\Drivers\Object\Printer\WinVistaXp_x64\PCL"</td> </tr> </tbody> </table> <p data-bbox="477 643 1023 672">(where "D" is the drive letter of your CD-ROM drive)</p> <p data-bbox="477 701 989 761">For more details, refer to: http://panasonic.net/pcc/support/fax/mfp-faq.htm</p> | Operating system | Folder path | Windows 98/ Windows Me | "D:\Drivers\Object\Printer\Win98Me\PCL" | Windows 2000/ Windows XP/ Windows Vista | "D:\Drivers\Object\Printer\WinVistaXp2k\PCL" | Windows XP Professional x64 Edition/ Windows Vista x64 | "D:\Drivers\Object\Printer\WinVistaXp_x64\PCL" |
| Operating system | Folder path | | | | | | | | |
| Windows 98/ Windows Me | "D:\Drivers\Object\Printer\Win98Me\PCL" | | | | | | | | |
| Windows 2000/ Windows XP/ Windows Vista | "D:\Drivers\Object\Printer\WinVistaXp2k\PCL" | | | | | | | | |
| Windows XP Professional x64 Edition/ Windows Vista x64 | "D:\Drivers\Object\Printer\WinVistaXp_x64\PCL" | | | | | | | | |

11.3.3 Scanner

| Problem | Cause & Solution |
|--|---|
| I cannot scan. | <ul style="list-style-type: none"> ● When scanning at a high resolution, a large amount of available memory is required. If your computer warns that there is insufficient memory, close other applications and try again. ● The unit is in use. Try again later. ● There is not enough space on the hard disk. Delete unnecessary files and try again. ● Check the connection between the computer and the unit (page 19, 27). ● Restart the computer, and try again. ● You attempted to scan a document longer than the paper size which you set. Change the setting or divide the document into the appropriate paper size, and try again. |
| The document is not fed into the unit when using the unit as a scanner. | <ul style="list-style-type: none"> ● Remove the document in the automatic document feeder and re-insert it. |
| Even after clicking [Cancel], scanning continues. | <ul style="list-style-type: none"> ● Please wait. It may take a while for the cancel request to be accepted. |
| The name of the desired computer is not displayed on the unit when scanning documents from the unit (LAN connection only). | <ul style="list-style-type: none"> ● The printer driver has not been installed. Install it on your computer (page 26). ● The PC name list up feature has been set to [Off]. Set [PC name list up on device] to [On] (page 29). ● The maximum number of computers on the LAN is connected to the unit (up to 30 computers). Set [PC name list up on device] to [Off] on the other computers (page 29). ● The IP address of the unit may have changed. To detect the IP address, proceed as follows. [Start] → [All Programs] or [Programs] → [Panasonic] → the unit's name → [IP Address Checker] <ul style="list-style-type: none"> ● The IP address for the unit will be detected. |

11.3.4 Copier

| Problem | Cause & Solution |
|---|--|
| The unit will not make a copy. | <ul style="list-style-type: none"> You cannot make a copy during programming. Make the copy after programming. The document was not fed into the unit properly. Re-insert the document. Recording paper is not loaded or the unit has run out of paper. Load paper (page 16). |
| Letters on the copied documents are not clear. | <ul style="list-style-type: none"> The original document is too dark or too light. Change the contrast (page 37) and try again. |
| The copied documents are too dark and cannot be read. | <ul style="list-style-type: none"> You used a coloured paper as a document. Change the contrast (page 37) and make a lighter copy of the document, using “Text” resolution (page 37). |

11.3.5 Fax

| Problem | Cause & Solution |
|--|---|
| I cannot send documents. | <ul style="list-style-type: none"> The telephone line cord is connected to the [EXT] jack on the unit. Connect to the [LINE] jack (page 19). The other party's fax machine is busy or has run out of recording paper. Try again. The other party's machine is not a fax machine. Check with the other party. The other party's fax machine failed to answer the fax automatically. Send the fax manually (page 44). Set the maximum fax speed to “14 . 4Kbps” (feature #418 on page 68). |
| I cannot send a fax overseas. | <ul style="list-style-type: none"> Use the overseas transmission mode (feature #411 on page 67). Add two pauses at the end of the telephone number or dial manually. |
| The other party complains that letters on their received document are distorted. | <ul style="list-style-type: none"> If your line has special telephone services such as call waiting, the service may have been activated during fax transmission. Connect the unit to a line that does not have these services. Another telephone on the same line is off the hook. Hang up the extension telephone and try again. |
| The other party complains about the quality of their received documents. | <ul style="list-style-type: none"> Try copying the document. If the copied image is clear, there may be something wrong with the other party's machine. If the copied image is not clear, too dark, or black and white lines or smudges appear, refer to “11.3.2 Printing problems”, page 92. The original document is too dark or too light. Change the contrast (page 44) and try again. |
| The other party complains that received documents are too dark and cannot be read. | <ul style="list-style-type: none"> You used a coloured paper as a document. Change the contrast (page 37) and make a lighter copy of the document, using “Text” resolution (page 37), and try again. |
| I cannot receive documents. | <ul style="list-style-type: none"> The telephone line cord is connected to the [EXT] jack on the unit. Connect to the [LINE] jack (page 19). The PC fax setting (feature #442 on page 70) is activated and the received fax documents are automatically transferred to the computer. View the received documents using the computer (page 56). The fax preview mode (feature #448 on page 56) is activated and the received fax documents are automatically stored in memory. View the received documents (page 52, 57). Set the maximum fax speed to “14 . 4Kbps” (feature #418 on page 68). |

| Problem | Cause & Solution |
|---|--|
| I cannot receive documents automatically. | <ul style="list-style-type: none"> ● The receiving mode is set to TEL mode. Set to FAX ONLY mode. Press [Fax Auto Answer] repeatedly to turn ON the [Fax Auto Answer] light. ● The time taken to answer the call is too long. Decrease the number of rings before the unit answers a call (feature #210 on page 64). ● Make sure that the Distinctive Ring of feature #430 is set properly (page 61). If you do not subscribe to the Distinctive Ring service offered by your local telephone company, this feature should be OFF. |
| The display shows “Connecting”, but faxes are not received. | <ul style="list-style-type: none"> ● The incoming call is not a fax. Set to TEL mode. Press [Fax Auto Answer] repeatedly to turn OFF the [Fax Auto Answer] light. |
| The printing quality of the received documents is poor. | <ul style="list-style-type: none"> ● If documents can be copied properly, the unit is working normally. The other party may have sent a faint document or there may be something wrong with the other party’s machine. Ask them to send a clearer copy of the document or to check their fax machine. ● If documents can not be copied properly, refer to “11.3.2 Printing problems”, page 92. |
| The other party complains that they cannot send a document. | <ul style="list-style-type: none"> ● The memory is full of received documents due to a lack of recording paper or a recording paper jam. Load paper (page 16) or remove the jammed paper (page 100). ● If the PC fax setting (feature #442 on page 70) is set to “Always”, check the connection between the computer and the unit. ● If the fax preview mode (feature #448 on page 56) is set to “On”, view, print or save the documents, and then erase unnecessary documents (page 53, 56, 57). ● The unit is not in FAX ONLY mode. Press [Fax Auto Answer] repeatedly to turn ON the [Fax Auto Answer] light. |
| I cannot select the desired receiving mode. | <ul style="list-style-type: none"> ● If you want to set FAX ONLY mode: <ul style="list-style-type: none"> – press [Fax Auto Answer] repeatedly to turn ON the [Fax Auto Answer] light. ● If you want to set TEL mode: <ul style="list-style-type: none"> – press [Fax Auto Answer] repeatedly to turn OFF the [Fax Auto Answer] light. ● The Distinctive Ring of feature #430 is activated (page 61). |
| When an extension telephone is connected, I cannot receive documents by pressing [*][#][9]. | <ul style="list-style-type: none"> ● You must set remote fax activation to ON (feature #434 on page 69) beforehand. ● Press [*][#][9] firmly. ● You may have changed the remote fax activation code from [*][#][9] (default setting). Verify the remote fax activation code (feature #434 on page 69). |
| I cannot hear a dial tone. | <ul style="list-style-type: none"> ● The telephone line cord is connected to the [EXT] jack on the unit. Connect to the [LINE] jack (page 19). ● If you use a splitter/coupler to connect the unit, remove the splitter/coupler and connect the unit to the wall jack directly. If the unit operates properly, check the splitter/coupler. ● Disconnect the unit from the telephone line and connect a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your telephone company. ● The power cord or telephone line cord is not connected. Check the connections (page 19). ● If you connected the unit through a computer modem, connect the unit directly to a telephone line jack. |

11. Help

| Problem | Cause & Solution |
|---|--|
| I cannot make calls. | <ul style="list-style-type: none">● The dialling mode setting may be wrong. Change the setting (feature #120 on page 20). |
| The unit does not ring. | <ul style="list-style-type: none">● The ringer volume is turned OFF. Adjust it (page 23). |
| The other party complains they only hear a fax tone and cannot talk. | <ul style="list-style-type: none">● FAX ONLY mode is set (page 50). Tell the other party the number is only used for faxes.● If you use a Distinctive Ring service, make sure you have set the same ring pattern assigned by the telephone company (page 61). |
| The [Redial] or [Pause] button does not function properly. | <ul style="list-style-type: none">● If this button is pressed during dialling, a pause will be inserted. If pressed immediately after a dial tone is obtained, the last number dialled will be redialled. |
| The receiving mode does not function properly. | <ul style="list-style-type: none">● Distinctive Ring is set (feature #430 on page 61). |
| I cannot receive a fax document on the computer. | <ul style="list-style-type: none">● Make sure the following features are set beforehand.<ul style="list-style-type: none">– PC fax reception (feature #442 on page 70)– Computer setting for the PC fax reception (feature #443 on page 26) |
| I cannot display a received fax document. | <ul style="list-style-type: none">● Make sure the following features are set beforehand.<ul style="list-style-type: none">– Fax preview mode (feature #448 on page 56)– Web fax preview access code (feature #450 on page 56)● You cannot display a received fax document during printing, copying or scanning. Try again after printing, copying or scanning. |
| I cannot erase a received fax document. | <ul style="list-style-type: none">● View, print or save a received fax document before erasing (page 52, 56). |
| Received fax documents do not print automatically. | <ul style="list-style-type: none">● Feature #448 is activated and the received fax documents are saved into the memory of the unit. View the received documents on the display (page 52). |

11.3.6 Network

| Problem | Cause & Solution | | | | | | | | | | | | |
|---|--|---|-------------|------------|---------|-----------|---------------------------|---------|-------------|---|---------|---------------|---|
| <p>I cannot operate the following functions.</p> <ul style="list-style-type: none"> - PC printing - Scanning - Remote Control - PC FAX - Device Monitor | <ul style="list-style-type: none"> ● Confirm the LED via the LAN port of the main board. If the LED is glowing or blinking, network access is working correctly. If the LED is not glowing or blinking, confirm the LAN cable (category 5 straight cable) is connected to the LAN port of the main board correctly. ● If the LED is blinking and you cannot perform the desired operation, the IP address of the unit may have changed. To detect the IP address, proceed as follows. [Start] → [All Programs] or [Programs] → [Panasonic] → the unit's name → [IP Address Checker] <ul style="list-style-type: none"> ● The IP address for the unit will be detected. <p>Note:</p> <ul style="list-style-type: none"> ● If the IP address cannot be detected, enter it manually (feature #501 on page 79). The IP address of the computer and the unit must be in the same local IP address class as shown below. Set the IP address in the range of the number specified in the class corresponding to your local network scale. <table border="1" data-bbox="539 759 1273 1025"> <thead> <tr> <th>Class</th> <th>Subnet mask</th> <th>IP address</th> </tr> </thead> <tbody> <tr> <td>Class A</td> <td>255.0.0.0</td> <td>10.0.0.1 - 10.255.255.254</td> </tr> <tr> <td>Class B</td> <td>255.255.0.0</td> <td>172.xx.0.1 - 172.xx.255.254^{*1}</td> </tr> <tr> <td>Class C</td> <td>255.255.255.0</td> <td>192.168.xx.1 - 192.168.xx.254^{*2}</td> </tr> </tbody> </table> <p>*1 "xx" should be the same value for the unit and for the computer, as shown in the following example. Example: 172.16.0.1 - 172.16.255.254 (The available range of "xx" is 16 - 31)</p> <p>*2 "xx" should be the same value for the unit and for the computer, as shown in the following example. Example: 192.168.0.1 - 192.168.0.254 (The available range of "xx" is 0 - 255)</p> <ul style="list-style-type: none"> ● Your firewall software is blocking the connection. Disable the firewall software or change the firewall settings to make the Multi-Function Station work properly. ● LAN features can be used when the unit and the computer are connected in same network segment only. Make sure the network is configured correctly. Consult your network administrator. | Class | Subnet mask | IP address | Class A | 255.0.0.0 | 10.0.0.1 - 10.255.255.254 | Class B | 255.255.0.0 | 172.xx.0.1 - 172.xx.255.254 ^{*1} | Class C | 255.255.255.0 | 192.168.xx.1 - 192.168.xx.254 ^{*2} |
| Class | Subnet mask | IP address | | | | | | | | | | | |
| Class A | 255.0.0.0 | 10.0.0.1 - 10.255.255.254 | | | | | | | | | | | |
| Class B | 255.255.0.0 | 172.xx.0.1 - 172.xx.255.254 ^{*1} | | | | | | | | | | | |
| Class C | 255.255.255.0 | 192.168.xx.1 - 192.168.xx.254 ^{*2} | | | | | | | | | | | |
| <p>The unit does not appear in the [Select a Network Device] dialogue box when installing Multi-Function Station.</p> | <ul style="list-style-type: none"> ● Your firewall software is blocking the connection and the setup program may not list any units. Consult your network administrator and temporarily disable the firewall software. ● The unit is connected to another network segment and the setup program may not list any units. Make sure the network is configured correctly. Consult your network administrator. | | | | | | | | | | | | |

11. Help

| Problem | Cause & Solution |
|---|---|
| The [Windows Security Alert] dialogue box appears and asks if I want to block [PCCMFLPD] and I cannot operate the following functions after installing the Microsoft Windows XP Service Pack 2 or later. <ul style="list-style-type: none">– PC printing– Scanning– Remote Control– PC FAX– Device Monitor | <ul style="list-style-type: none">● Click [Keep Blocking] and run the Windows Firewall Setting Tool to allow the data transmission for Multi-Function Station (page 98). |

11.3.7 Using an answering machine

| Problem | Cause & Solution |
|--|--|
| I cannot receive documents automatically. | <ul style="list-style-type: none">● Your greeting message on the answering machine is too long. Shorten the message. Record a message less than 10 seconds long.● The answering machine rings too many times. Set to 1 or 2 rings. |
| I cannot receive voice messages. | <ul style="list-style-type: none">● Check if the answering machine is turned ON and connected to the unit properly (page 54).● Set the number of rings on the answering machine to 1 or 2. |
| I pressed the remote access code to access the answering machine remotely, but the line was disconnected. | <ul style="list-style-type: none">● The code may include “#” which is used for certain features provided by telephone companies. Change the code on the answering machine to another number which does not include “#”. |
| Callers complain that they cannot send a document. | <ul style="list-style-type: none">● There is no room left in the memory of your answering machine to record voice messages. See the operating instructions of the answering machine and erase unnecessary messages.● You set the answering machine to only give a greeting message. |

11.3.8 If a power failure occurs

- The unit will not function.
- If any documents are stored in the memory (i.e. during copying, PC printing), they will be lost.
- The unit is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.
- Fax transmission and reception will be interrupted.
- Documents during fax transmission or fax reception will be lost.
- When power is restored, a power down report will be printed out stating which fax items in the memory have been erased.

11.3.9 Firewall setting tool for Microsoft Windows XP Service Pack 2 or later/Windows Vista users (LAN connection only)

After installing Microsoft Windows XP Service Pack 2 or later/Windows Vista, you will not be able to use the following functions because the Windows Firewall feature will be activated and block the connection.

- Device Monitor
- LPD Manager (Network communication tool)

The Windows Firewall Setting Tool enables you to change the Windows Firewall security settings and to use the above functions properly.

- 1 Insert the CD-ROM that is supplied with the unit into your CD-ROM drive.

- If the **[Select Language]** dialogue box appears, select the desired language that you want to use with this software. Click **[OK]**.

2 [Tools] → [Windows Firewall Setting]

- The **[Windows Firewall Setting Tool]** window will appear.

3 [Add to the exceptions list] → [OK] → [OK]

To confirm the security settings (For Windows XP users)

1. [Start] → [Control Panel] → [Security Center]

- The **[Windows Security Center]** window will appear.

2. [Windows Firewall]

- The **[Windows Firewall]** dialogue box will appear.

3. Click the **[Exceptions]** tab.

4. Confirm that **[Panasonic Trap Monitor Service]** and **[Panasonic LPD]** are displayed and checked on the **[Programs and Services]** list.

To confirm the security settings (For Windows Vista users)

1. [Start] → [Control Panel] → [Security Center]

- The **[Windows Security Center]** window will appear.

2. [Windows Firewall]

- The **[Windows Firewall]** dialogue box will appear.

3. [Change settings]

- The **[User Account Control]** dialogue box will appear.

4. [Continue]

5. Click the **[Exceptions]** tab.

6. Confirm that **[Panasonic Trap Monitor Service]**, **[Panasonic LPD Manager]** and **[Panasonic LPD]** are displayed and checked on the **[Program or port]** list.

11.3.10 Notice for KX-MB200/KX-MB700/KX-FLB880 series users

If you have already installed KX-MB200/KX-MB700/KX-FLB880 series Multi-Function Station on your computer, use the following instructions to modify or add the printer driver, which changes after installing the KX-MB3000 series Multi-Function Station.

You can modify or add a printer driver, as follows:

1 Start Windows and insert the KX-MB200/KX-MB700/KX-FLB880 series CD-ROM into your CD-ROM drive.

- If the **[Select Language]** dialogue box appears, select the desired language that you want to use with this software. Click **[OK]**.

2 [Easy installation]

3 [Modify] → [Next]

4 Select **[Modify Utility]** or **[Add Printer Driver]**. → **[Next]**. Then follow the on-screen instructions.


Important:

- For users of versions prior to 1.12, download the latest software as follows, then activate it. **[Start] → [All Programs] or [Programs] → [Panasonic] → the unit's name → [Support Web Page]**. Then follow the on-screen instructions.


12.1 Recording paper jam

Caution:



- Do not pull out the jammed paper forcibly before opening the left cover.

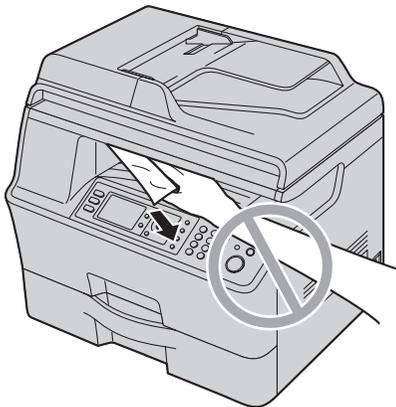

- Do not open the paper input tray before opening the left cover as the jammed paper may be pulled and the jam may get worse.

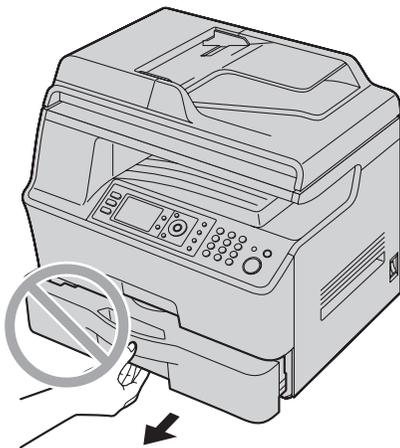

- 1 Hold the left cover open lever (①), and then pull open the left cover (②).

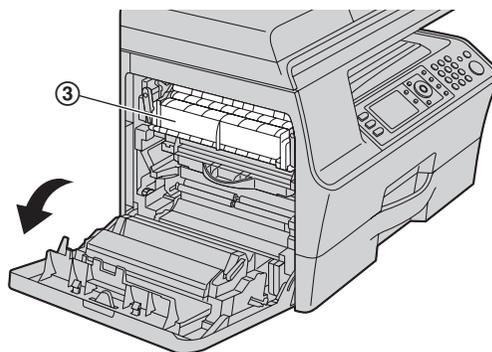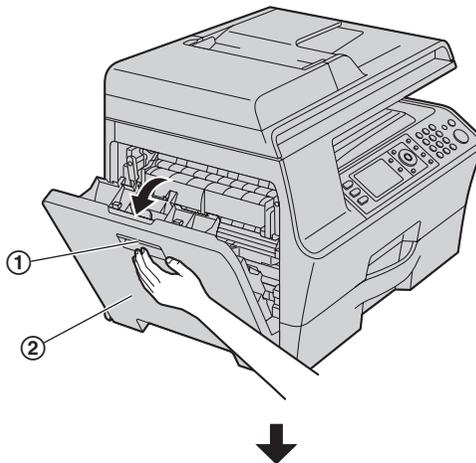

Caution:

- During or immediately after printing, the fuser unit (③) gets hot. Wait until the fuser unit cools down before removing the jammed paper.

12.1.1 When the recording paper has jammed inside of the unit

The display will show the following:


- "Paper Jammed"
"Open Left Cover"
"Hot Caution"
- "Paper Jammed"
↓
"Open Left Cover Hot Caution"

- 2** Remove the jammed paper.
- If paper is jammed inside the left cover, see case 1 to case 5 (page 101 to page 103).
 - If paper is not jammed inside the left cover, see case 6 (page 103).

Case 1:


When the recording paper has jammed near the rollers:

Remove the jammed paper (④) carefully by pulling it upward.

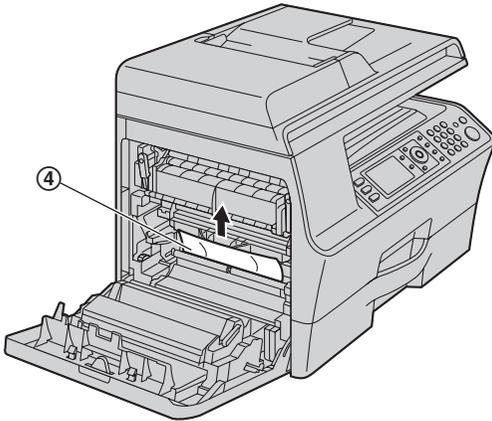**Case 2:**


When the recording paper has jammed near the drum and toner unit:

Remove the jammed paper (⑤) carefully by pulling it upward.

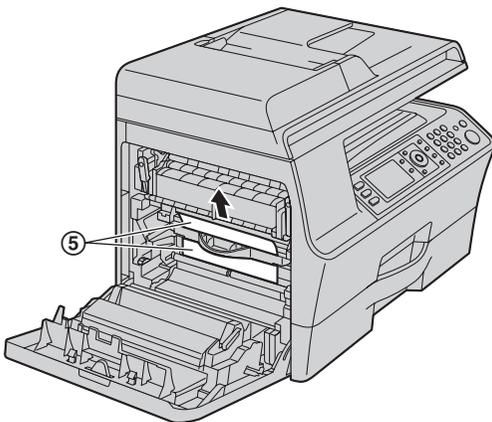**Case 3:**


When the recording paper has jammed near the fuser unit:

1. Push down both green levers (⑥) until they stop.

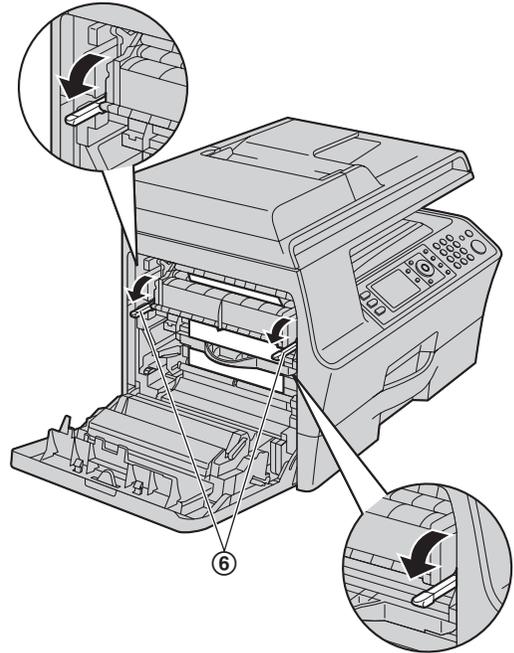

2. **When the recording paper has jammed inside the fuser unit:**


Remove the jammed paper (⑦) carefully by pulling it toward you.

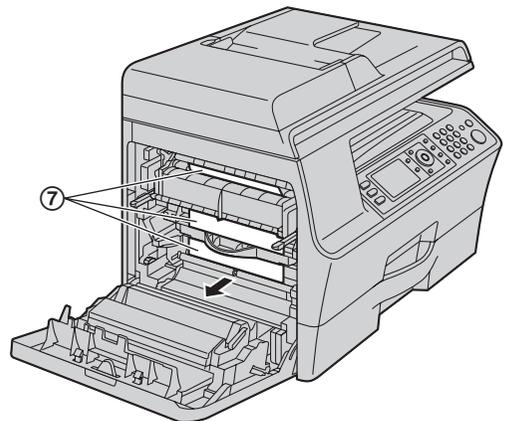


12. Paper Jams

When the recording paper has jammed over the fuser unit:

Push down the upper green lever (⑧), and remove the jammed paper (⑨) carefully by pulling it toward you.

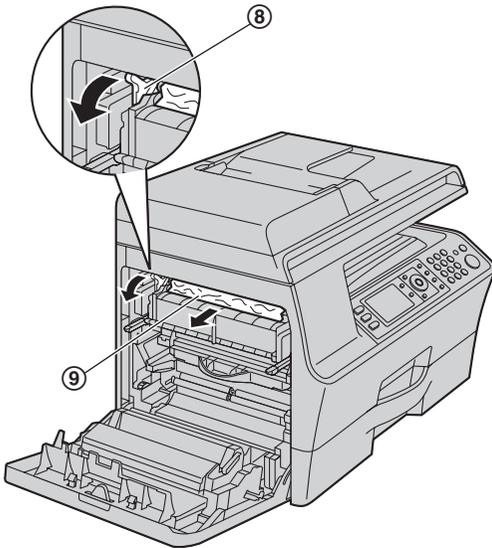


3. Push up the green levers (⑩) to the original position.

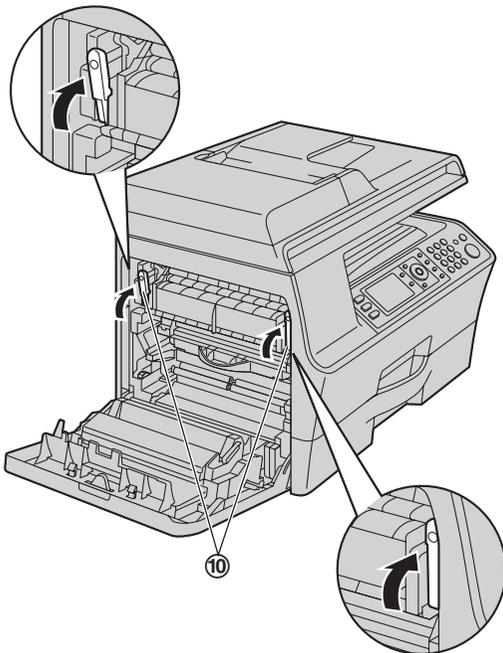


Case 4:

When the recording paper has jammed near the recording paper exit:


1. Push down both green levers (⑪) until they stop.

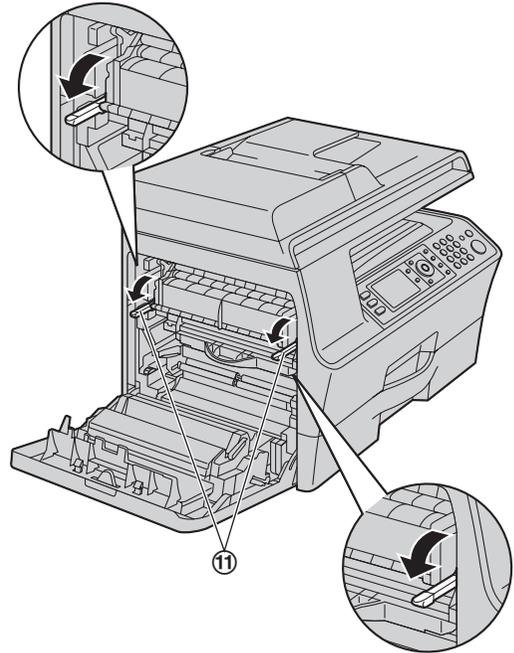


2. Remove the jammed paper (⑫) carefully by pulling it rightward.

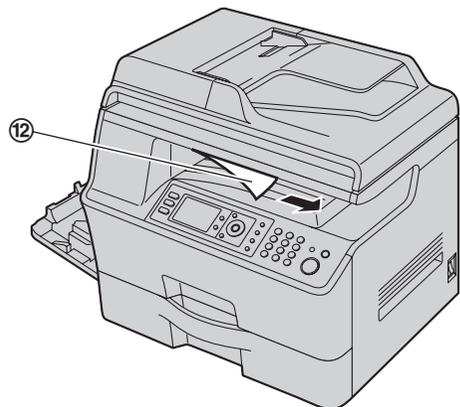

3. Push up the green levers (13) to the original position.

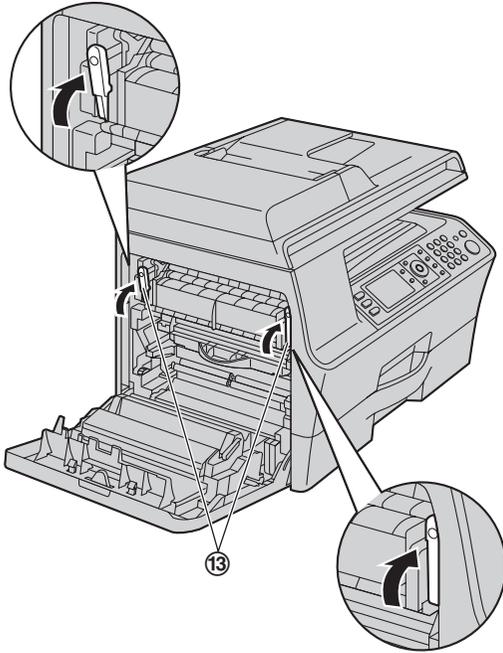


- Case 5:**
When the recording paper has jammed inside of the automatic duplex unit:
When the recording paper has jammed near the roller:
 Remove the jammed paper (14) carefully by pulling it upward.

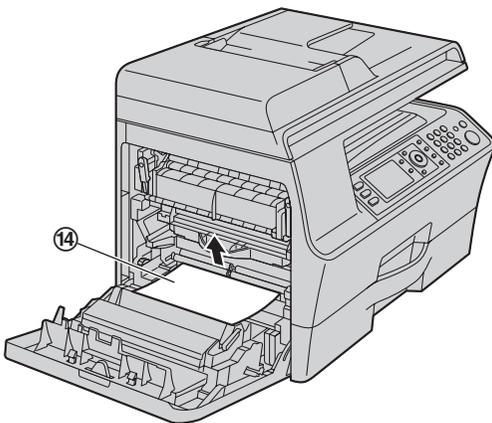


When the recording paper has jammed near the automatic duplex unit:

Remove the jammed paper (15) carefully by pulling it toward you.

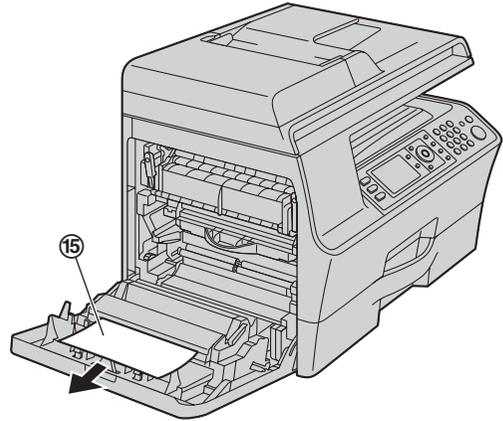


Case 6:
When the recording paper has jammed near the standard input tray:

1. Pull the standard input tray (16) until it clicks into place, then pull it completely out, lifting the front part of the tray.

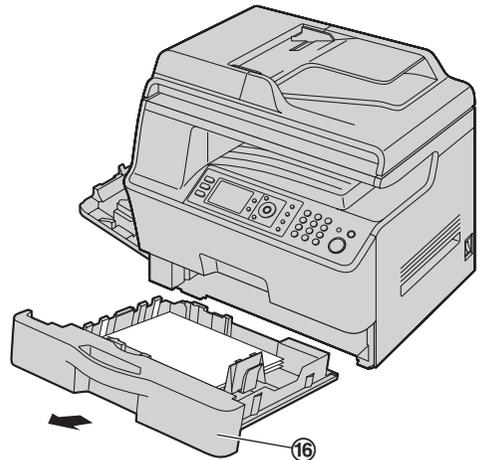


12. Paper Jams


- Remove the jammed paper (17) carefully by pulling it toward you.

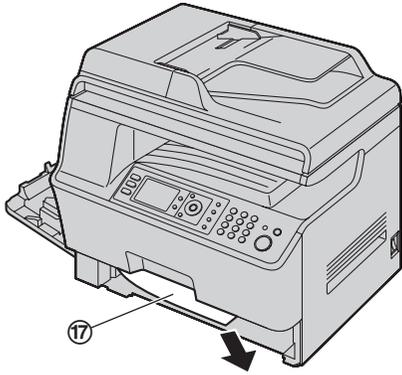

- Insert the standard input tray into the unit, lifting the front part of the tray. Then push it completely into the unit.

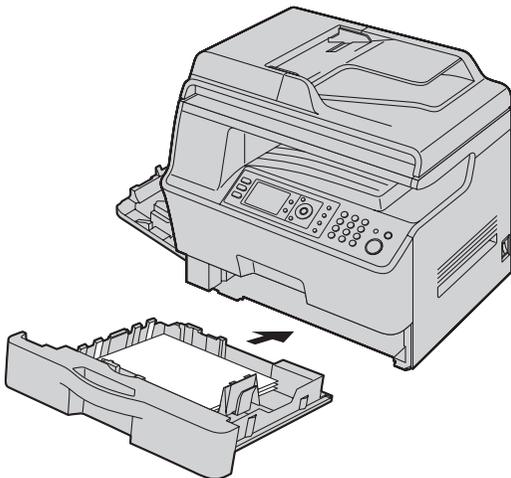

- Close the left cover.

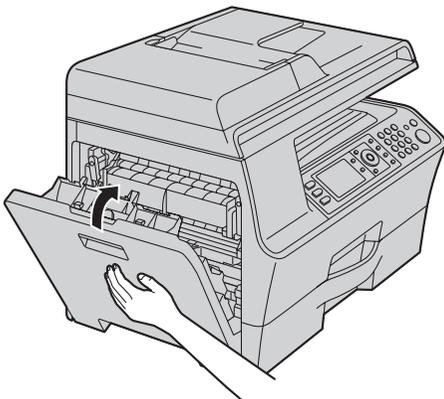


12.1.2 When the recording paper has jammed near the lower input tray


The display will show the following:

- "Paper Jammed"
"Open Tray #2"
"Left Cover"
- "Paper Jammed"
↓
"Open Tray #2 Left Cover"


- Open the cover (1) at the left side of the lower input tray.

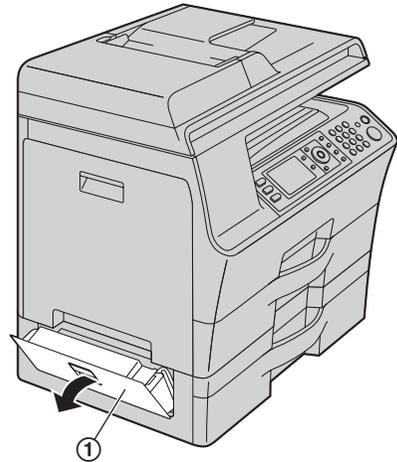

- Remove the jammed paper (2).

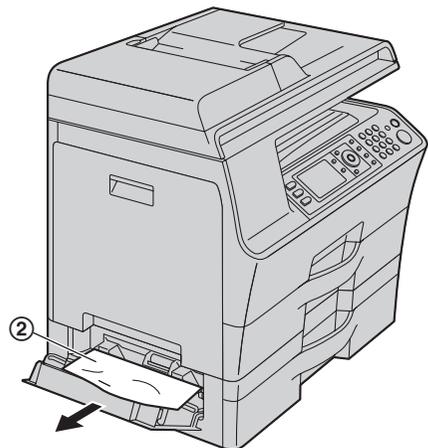

- 3 Close the cover at the left side of the lower input tray.

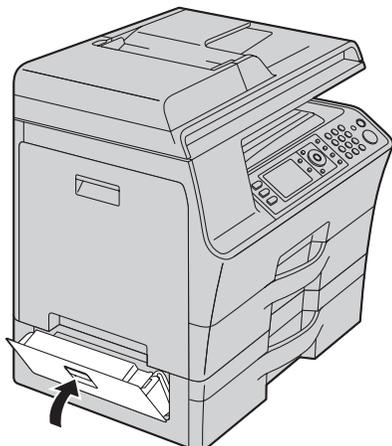


12.1.3 When the recording paper is not fed into the unit properly

The display will show the following:

- “Check Pick Up Input Tray #1” (standard input tray)
- “Check Pick Up Input Tray #2” (lower input tray)

- 1 Pull the paper input tray until it clicks into place, then pull it completely out, lifting the front part of the tray. Remove the recording paper and straighten.
- 2 Re-load the recording paper.

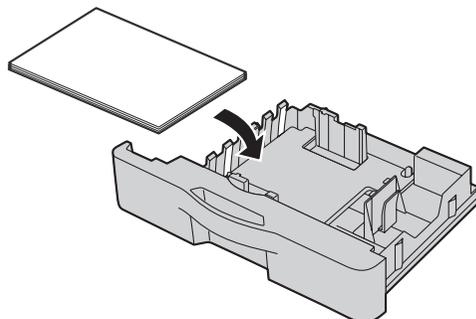

- 3 Insert the paper input tray into the unit, lifting the front part of the tray. Then push it completely into the unit.


Note:

- If the message is still displayed, check the recording paper specifications and load the recording paper again. See page 16 and page 85 for details.


12.2 Document jams (Automatic document feeder)

Caution:


- Do not pull out the jammed document forcibly before lifting the ADF cover.

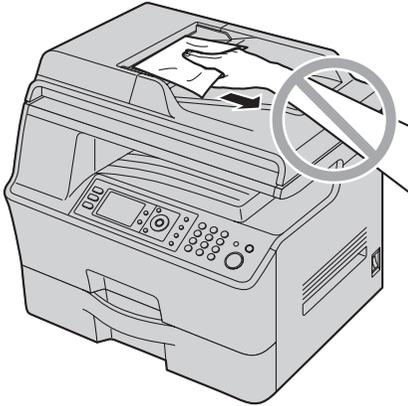

- 1 Open the ADF cover (①) while holding the document cover (②).

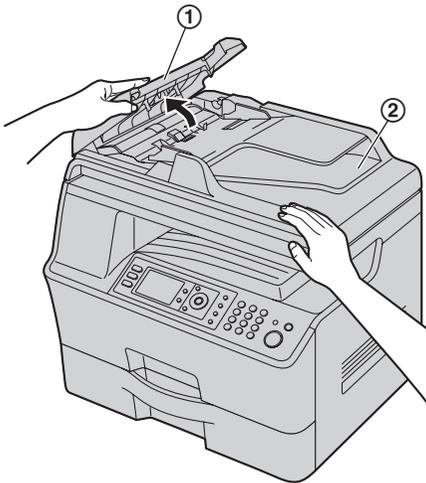


- 2 When the document has jammed near the document entrance:
Remove the jammed document (③) carefully.

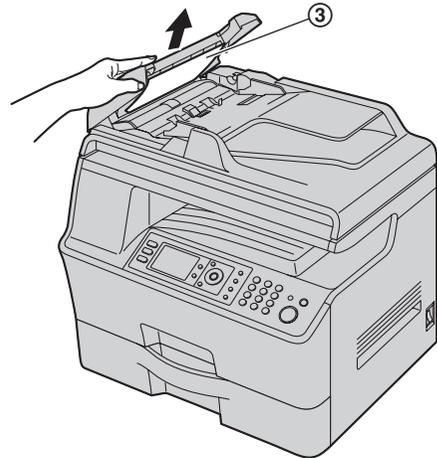


When the document has jammed near the document exit:

- Open the document tray (④) and remove the jammed document (⑤) carefully.

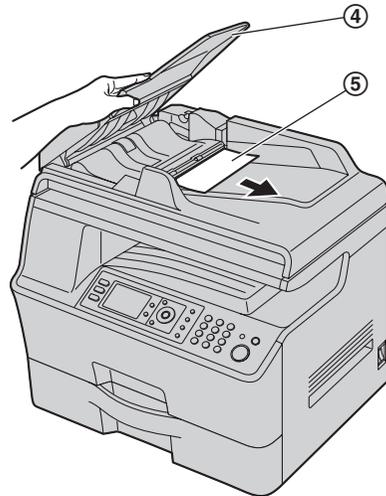

- 3 Close the ADF cover.

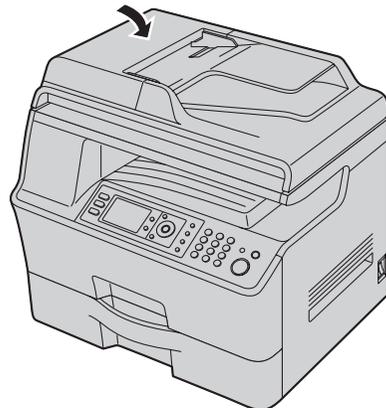

- 4 Press **[Stop]** to clear the message.

13.1 Cleaning the white plates and glass


Clean the white plates and glass when a black line, a white line or a dirty pattern appears on:

- your recording paper,
- the original document,
- the scanned data, or
- the fax document received by the other party.


Caution:

- Do not use paper products, such as paper towels or tissues for cleaning.


- 1 Open the document cover (①).

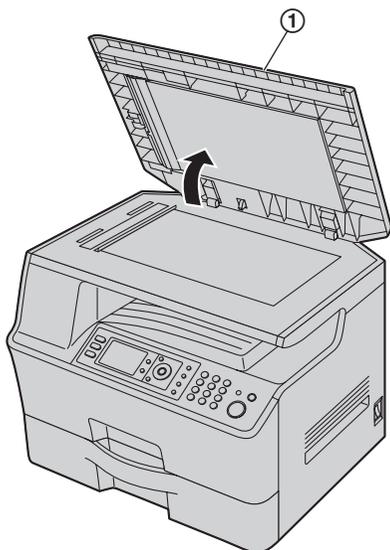

- 2 Hold the document cover (②) while cleaning the white plates (③) and the scanner glass (④).

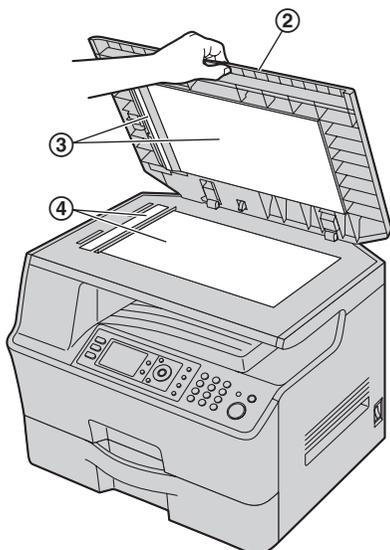

- 3 Close the document cover (⑤).

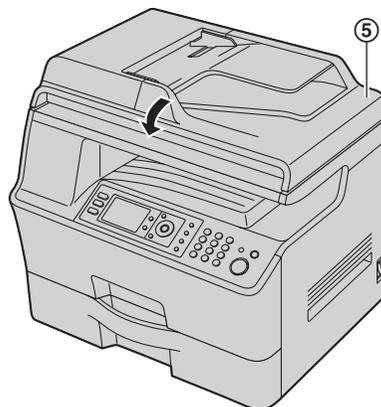


13.2 Cleaning the document feeder rollers

Clean the rollers when documents frequently misfeed.


Caution:

- Do not use paper products, such as paper towels or tissues for cleaning.


- 1 Turn the power switch OFF.
- 2 Open the ADF cover (①) while holding the document cover (②).

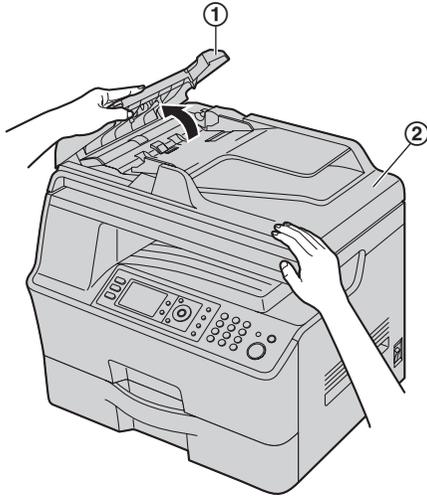

- 3 Clean the document feeder rollers (③) with a cloth moistened with water, and let all parts dry thoroughly.

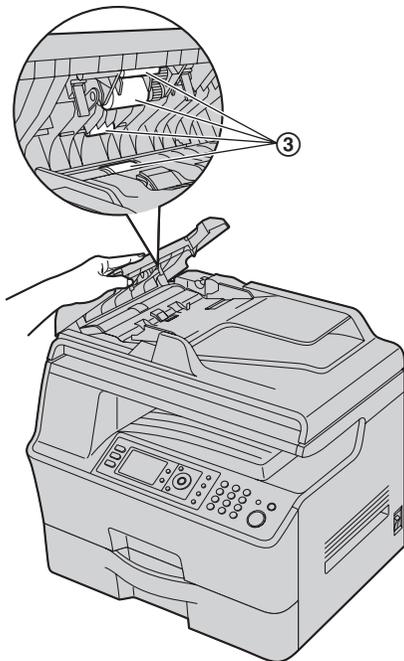

- 4 Close the ADF cover.

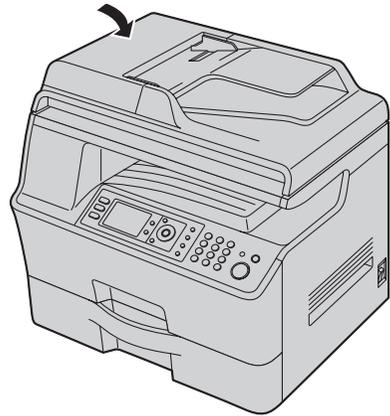


- 5 Turn the power switch ON.

14.1 Reference lists and reports

You can print out the following lists and reports for your reference.

- "Setup List"
- "Tel No. List"
- "Journal Report"
- "Broadcast List"
- "Printer Test"
- "Caller ID List"
- "PCL Font List"
- "Address List"
- "FTP Server List"

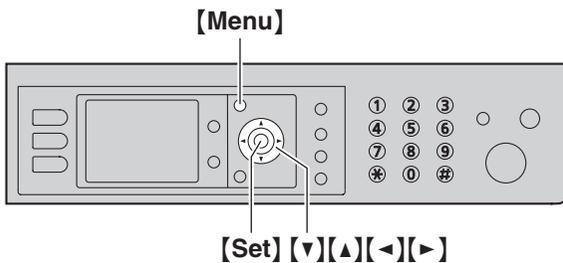

- 1 **[Menu]**
- 2 Press **[v]** or **[^]** repeatedly to select "Print Report".
- 3 Press **[←]** or **[→]** repeatedly to select the desired item.
- 4 Press **[Set]** to start printing. → **[Menu]**

14.2 Specifications

■ Applicable lines:

Public Switched Telephone Network

■ Document size:

Max. 216 mm in width, Max. 600 mm in length

■ Effective scanning width:

208 mm

■ Effective printing width:

A4: 202 mm

Letter/Legal/216 mm × 330 mm/216 mm × 340 mm:

208 mm

■ Transmission time*1:

Approx. 4 s/page (ECM-MMR Memory transmission)*2

■ Scanning density:

Scanning resolution:

Up to 600 × 2,400 dpi (Optical)

Up to 9,600 × 9,600 dpi (Interpolated)

Copy resolution:

Up to 600 × 600 dpi

Fax resolution:

Horizontal: 8 pels/mm

Vertical: 3.85 lines/mm-in standard resolution,

7.7 lines/mm-in fine/photo resolution,

15.4 lines/mm-in super fine resolution

■ Photo resolution:

64-level

■ Scanner type:

Colour Contact Image Sensor

■ Printer type:

Laser Printer

■ Data compression system:

Modified Huffman (MH), Modified READ (MR), Modified Modified READ (MMR)

■ Modem speed:

33,600 / 31,200 / 28,800 / 26,400 / 24,000 / 21,600 / 19,200 / 16,800 / 14,400 / 12,000 / 9,600 / 7,200 / 4,800 / 2,400 bps; Automatic Fallback

■ Operating environment:

10 °C – 32.5 °C, 20 % – 70 % RH (Relative Humidity)

■ Dimensions:

Approx. width 530 mm × depth 460 mm × height 480 mm

■ Mass (Weight):

Approx. 24 kg

■ Power consumption:

Standby: Approx. 8.0 W

Preheat: Approx. 80 W

Copy: Approx. 600 W

Maximum: Approx. 1,200 W (When the fuser lamp turns on)

■ Power supply:

220–240 V AC, 50/60 Hz

■ Memory capacity

(for operation and storing memory):

128 MB

14. General Information

■ Fax memory capacity:

10 MB in total

Approx. 630 pages of memory reception
(max. 255 pages per one reception)

Approx. 150 pages of memory transmission
(Based on the ITU-T No. 1 Test Chart in standard resolution, without using the Error Correction Mode.)

■ Scan to email address memory capacity:

5 MB in total (including the header and email message)

■ Scan to FTP server memory capacity:

10 MB in total

■ Laser diode properties:

Laser output: Max. 6.5 mW

Wavelength: 760 nm – 800 nm

Emission duration: Continuous

■ Print speed:

Letter: Approx. 35 ppm (pages per minute)

A4: Approx. 32 ppm (pages per minute)

■ Printing resolution:

Standard: Up to 2,400 × 600 dpi (True: 600 × 600 dpi)

Fine: Up to 2,400 × 600 dpi (True: 1,200 × 600 dpi)

Enhance: Up to 2,400 × 1,200 dpi (True: 1,200 × 1,200 dpi)

■ LED light of CIS properties:

LED radiation output: Max. 1 mW

Wavelength: Red 630 nm typ.

Green 520 nm typ.


Blue 465 nm typ.

Emission duration: Continuous

*1 Transmission speed depends on the contents of the pages, resolution, telephone line conditions and capability of the other party's machine.

*2 Transmission speed is based on the ITU-T No. 1 Test Chart with original mode. If the capability of the other party's machine is inferior to your unit, the transmission time may be longer.

ITU-T No.1 Test Chart

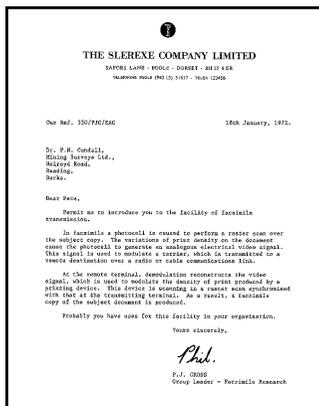

Note:

- Design and specifications are subject to change without notice.
- The pictures and illustrations in these instructions may vary slightly from the actual product.

- The accuracy of the clock is approximately ± 60 seconds a month.

Recording paper specifications

Plain paper/Thin paper size:

Letter: 216 mm × 279 mm

Legal: 216 mm × 356 mm

A4: 210 mm × 297 mm

216 mm × 330 mm

216 mm × 340 mm

Thick paper/Transparency/Label size:

Letter: 216 mm × 279 mm

A4: 210 mm × 297 mm

Recording paper weight:

Simplex: 64 g/m² to 165 g/m²


Duplex: 64 g/m² to 90 g/m²

Toner life

Toner cartridge life depends on the amount of content in a printed document. Toner cartridge life varies in actual usage. The following is the approximate number of pages that the toner cartridge can print according to the various printing examples.


Example 1

Approx. 5,000 pages can be printed.

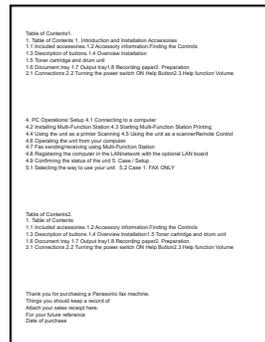

Example 2

Approx. 2,500 pages can be printed.

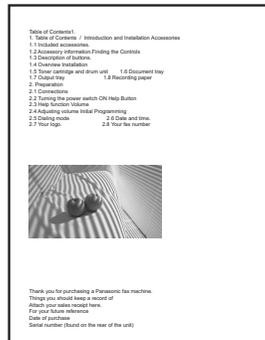

Example 3

Approx. 1,700 pages can be printed.

**Note:**

- There are various factors that determine the actual toner cartridge life, such as temperature, humidity, type of paper and how much toner you use for the number of pages per print job. The actual number of pages your toner cartridge will print may be significantly less than this estimate if your unit is often used for printing small number of pages per job. Because many of the factors that determine the actual toner cartridge life cannot be controlled, we cannot guarantee a minimum number of pages that will be printed by your toner cartridge.
- The number of pages changes with the depth, thickness and size of the characters.
- If you turn on the toner save feature, the toner cartridge will last approx. 20 % longer.

Drum life

The drum cartridge needs to be replaced regularly. The maximum drum life is approx. 15,000 pages.

Note:

- There are various factors that determine the actual drum cartridge life, such as temperature, humidity, type of paper and how much toner you use for the number of pages per print job. The actual number of pages your drum cartridge will print may be significantly less than this estimate if your unit is often used for printing small number of pages per job. Because many of the factors that determine the actual drum cartridge life cannot be controlled, we cannot guarantee a minimum number of pages that will be printed by your drum cartridge.

Waste disposal method

Waste material should be disposed of under conditions which meet all national and local environmental regulations.

14.3 Information of copyrights and licenses

- This product uses a part of NetBSD kernel.

The use of a part of NetBSD kernel is based on the typical BSD style licence below.

Copyright (c)

The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:
This product includes software developed by the University of California, Berkeley and its contributors.
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

However, parts of the NetBSD Kernel are provided with the following copyright notices.

Copyright (c) 1980, 1983, 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1980, 1986, 1989, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1980, 1986, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1980, 1986, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1985, 1986, 1988, 1993, 1994 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1988, 1990, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1988, 1990, 1993, 1994, 1995 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1988, 1990, 1993, 1995 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1988, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1988, 1993, 1995 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1989, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1989, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1990, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1990, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1990, 1993, 1994 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1991, 1993, 1994 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1991, 1993, 1995 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1993, 1994 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1993, 1994, 1995 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1986, 1993, 1995 The Regents of the University of California. All rights reserved.

Copyright (c) 1982, 1988, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1983, 1990, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1983, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1985, 1986, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1985, 1986, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1986, 1989, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1986, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1987, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1987, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1987, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1988 Regents of the University of California. All rights reserved

Copyright (c) 1988 Stephen Deering.

Copyright (c) 1988 University of Utah.

Copyright (c) 1988, 1989, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1988, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1988, 1992, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1989 The Regents of the University of California. All rights reserved.

Copyright (c) 1989, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1989, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1989, 1993, 1994 The Regents of the University of California. All rights reserved.

Copyright (c) 1990, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1990, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1991, 1993, 1994 The Regents of the University of California. All rights reserved.

Copyright (c) 1992 Regents of the University of California. All rights reserved.

Copyright (c) 1992, 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1993 The Regents of the University of California. All rights reserved.

Copyright (c) 1993 Adam Glass

Copyright (C) 1993 by Sun Microsystems, Inc. All rights reserved.

Copyright (c) 1994 Gordon W. Ross

Copyright (c) 1994 Winning Strategies, Inc. All rights reserved.

Copyright (c) 1995 The Regents of the University of California. All rights reserved.

Copyright (C) 1995, 1996, 1997, and 1998 WIDE Project. All rights reserved.

Copyright (c) 1996 The Regents of the University of California. All rights reserved.

Copyright (c) 1996 John S. Dyson All rights reserved.

Copyright (c) 1996 Matt Thomas. All rights reserved.

Copyright (c) 1996 Matthew R. Green. All rights reserved.

Copyright (c) 1996 Paul Kranenburg

Copyright (c) 1996, 1997, 1999, 2001 The NetBSD Foundation, Inc. All rights reserved.

Copyright (c) 1996, 2000 Christopher G. Demetriou. All rights reserved.

14. General Information

Copyright (c) 1996,1999 by Internet Software Consortium.
Copyright (c) 1996-1999 by Internet Software Consortium.
Copyright (c) 1997 Jonathan Stone and Jason R. Thorpe. All rights reserved.
Copyright (c) 1997 Christos Zoulas. All rights reserved.
Copyright (c) 1997 Manuel Bouyer. All rights reserved.
Copyright (c) 1997, 1998 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1997, 1998, 1999, 2000 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1997, 1998, 1999, 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1997, 1998, 1999, 2002 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1997, 1998, 2000, 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1997, 1998, 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1997,98 The NetBSD Foundation, Inc. All rights reserved.
Copyright (C) 1997-2000 Sony Computer Science Laboratories Inc. All rights reserved.
Copyright (c) 1997-2002 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1998 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1998 Todd C. Miller <Todd.Miller@courtesan.com> All rights reserved.
Copyright (c) 1998, 1999 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1998, 1999, 2000 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1998, 1999, 2000, 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1998, 2000 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1998, 2000, 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1999 The NetBSD Foundation, Inc. All rights reserved.
Copyright (C) 1999 WIDE Project. All rights reserved.
Copyright (c) 1999, 2000 Jason L. Wright (jason@thought.net) All rights reserved.
Copyright (c) 1999, 2000 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1999, 2000, 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1999, 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 2000 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 2000, 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 2000, 2001, 2002 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 2002 The NetBSD Foundation, Inc. All rights reserved.
Copyright 1998 Massachusetts Institute of Technology. All rights reserved.
Copyright 2001 Wasabi Systems, Inc. All rights reserved.
Portions Copyright (c) 1993 by Digital Equipment Corporation.
Portions Copyright (c) 1995 by International Business Machines, Inc.
Copyright (c) 1983, 1989 The Regents of the University of California. All rights reserved.
Copyright (c) 1996 by Internet Software Consortium. All rights reserved.
Copyright (c) 1980, 1986, 1989 Regents of the University of California. All rights reserved.
Copyright (c) 1988 The Regents of the University of California. All rights reserved.
Copyright (c) 1992, 1993 The Regents of the University of California. All rights reserved.
Copyright (c) 1994 Christopher G. Demetriou. All rights reserved.
Copyright (c) 1997 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1999 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 2001 The NetBSD Foundation, Inc. All rights reserved.
Copyright (c) 1996 Gardner Buchanan <gbuchanan@shl.com> All rights reserved.

Parts of the NetBSD Kernel are provided with the licenses that are slightly different from the above Berkeley-formed licence. Please refer the source code of the NetBSD Kernel about the details.

The source code of the NetBSD Kernel is provided by the NetBSD CVS Repositories

(<http://cvsweb.netbsd.org/bsdweb.cgi/>), and this product includes parts of the source code in the following directories.

<http://cvsweb.netbsd.org/bsdweb.cgi/src/sys/kern/>

<http://cvsweb.netbsd.org/bsdweb.cgi/src/sys/net/>

<http://cvsweb.netbsd.org/bsdweb.cgi/src/sys/netinet/>

- This product contains Net-SNMP software and is using it based on the following licence conditions.

---- Part 1: CMU/UCD copyright notice: (BSD like) ----

Copyright 1989, 1991, 1992 by Carnegie Mellon University

Derivative Work - 1996, 1998-2000

Copyright 1996, 1998-2000 The Regents of the University of California

All Rights Reserved

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

---- Part 2: Networks Associates Technology, Inc copyright notice (BSD) ----

Copyright (c) 2001-2003, Networks Associates Technology, Inc
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the Networks Associates Technology, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

14. General Information

---- Part 3: Cambridge Broadband Ltd. copyright notice (BSD) ----

Portions of this code are copyright (c) 2001-2003, Cambridge Broadband Ltd.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 4: Sun Microsystems, Inc. copyright notice (BSD) ----

Copyright © 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara,
California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Also this product contains software which includes following notices and licenses.

/*
Copyright 1988, 1989, 1990 by Carnegie Mellon University
Copyright 1989 TGV, Incorporated

All Rights Reserved

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and TGV not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

CMU AND TGV DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL CMU OR TGV BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

*/

- This product contains NetBSD software and is using it based on the following licence conditions.

/*-
* Copyright (c) 1990 The Regents of the University of California.
* All rights reserved.
*
* This code is derived from software contributed to Berkeley by Chris Torek.
*
* Redistribution and use in source and binary forms, with or without modification, are permitted provided
* that the following conditions are met:
* 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the
* following disclaimer.
* 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and
* the following disclaimer in the documentation and/or other materials provided with the distribution.
* 3. Neither the name of the University nor the names of its contributors may be used to endorse or
* promote products derived from this software without specific prior written permission.
*
* THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY
* EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED
* WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE
* DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY
* DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES
* (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;
* LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND
* ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT
* (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS
* SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
*/

14. General Information

- This product contains NetBSD software and is using it based on the following licence conditions.

/*

* Copyright (c) 1989 The Regents of the University of California.

* All rights reserved.

*

* This code is derived from software contributed to Berkeley by Tom Truscott.

*

* Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* 3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

* This product includes software developed by the University of California, Berkeley and its contributors.

* 4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

*

* THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

*/

- This product contains NetBSD software and is using it based on the following licence conditions.

/*

* Copyright (c) 1987, 1993, 1994

* The Regents of the University of California. All rights reserved.

*

* Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* 3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

* This product includes software developed by the University of California, Berkeley and its contributors.

* 4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

*

* THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;

* LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND
* ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT
* (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS
* SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
*/

- This product contains NetBSD software and is using it based on the following licence conditions.

/*-

* Copyright (c) 1990, 1993

* The Regents of the University of California. All rights reserved.

*

* This code is derived from software contributed to Berkeley by Chris Torek.

*

* Redistribution and use in source and binary forms, with or without modification, are permitted provided
* that the following conditions are met:

* 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the
* following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and
* the following disclaimer in the documentation and/or other materials provided with the distribution.

* 3. Neither the name of the University nor the names of its contributors may be used to endorse or
* promote products derived from this software without specific prior written permission.

*

* THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS" AND ANY
* EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED
* WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE
* DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY
* DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES
* (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;
* LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND
* ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT
* (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS
* SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
*/

- This product contains thttpd software that ACMELabs developed and is using it based on the following licence conditions.

Copyright 1995,1998,1999, 2000 by Jef Poskanzer <jef@acme.com>.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided
that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the
following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and
the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS" AND
ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE
FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR
SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER
CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR
TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF
THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

14. General Information

- This product contains NetBSD software and is using it based on the following licence conditions.

/*-

* Copyright (c) 1990 The Regents of the University of California.

* All rights reserved.

*

* This code is derived from software contributed to Berkeley by Chris Torek.

*

* Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* 3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

*

* THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

*/

- This product contains NetBSD software and is using it based on the following licence conditions.

/*-

* Copyright (c) 1990 The Regents of the University of California.

* All rights reserved.

*

* This code is derived from software contributed to Berkeley by Chris Torek.

*

* Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* 3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

*

* THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

*/

- This product contains NetBSD software and is using it based on the following licence conditions.

/*

* Copyright (c) 1989 The Regents of the University of California.

* All rights reserved.

*

* This code is derived from software contributed to Berkeley by Tom Truscott.

*

* Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* 3. All advertising materials mentioning features or use of this software must display the following acknowledgement:

* This product includes software developed by the University of California, Berkeley and its contributors.

* 4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

*

* THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

*/

- JPEG

This software is based in part on the work of the Independent JPEG Group.

15.1 Index

- # #101 Date and time: 23
 - #102 Your logo: 24
 - #103 Your fax number: 25
 - #114 Location: 63
 - #120 Dialling mode: 20
 - #121 Recall/Flash time: 63
 - #147 Scale: 63
 - #155 Change password: 64
 - #158 Maintenance time: 64
 - #159 Set all features to default: 64
 - #161 Ringer pattern: 64
 - #210 FAX ring count: 64
 - #212 TEL/FAX ring count: 67
 - #216 Automatic Caller ID list: 65
 - #226 Time adjustment: 65
 - #289 All directory erase: 67
 - #380 Paper size in the standard input tray: 65
 - #382 Paper size in the lower input tray: 65
 - #383 Paper type: 65
 - #401 Sending report: 44, 67
 - #402 Automatic journal report: 45, 67
 - #403 Power save: 65
 - #404 Manual answer mode: 67
 - #411 Overseas mode: 67
 - #412 Delayed send: 68
 - #413 ECM selection: 68
 - #416 Connecting tone: 68
 - #418 Maximum fax speed: 68
 - #430 Distinctive Ring: 61
 - #431 Fax ring pattern: 61
 - #432 Auto reduction: 69
 - #434 Fax activation code: 69
 - #436 Silent fax ring count: 69
 - #437 Memory reception alert: 70
 - #438 Friendly reception: 70
 - #440 Paper input tray setting for fax: 70
 - #442 PC fax setting: 70
 - #443 PC fax reception: 26
 - #445 Legal-size fax send: 70
 - #448 Fax preview mode: 56
 - #449 Automatic deletion: 71
 - #450 Web fax preview access code: 56
 - #459 Set fax features to default: 71
 - #460 Paper input tray setting for copy: 73
 - #461 Default copy resolution: 73
 - #462 Contrast hold: 65
 - #463 Default operation mode: 66
 - #464 Mode timer: 66
 - #467 Page layout hold: 73
 - #468 Zoom hold: 73
 - #469 Collate hold: 73
 - #470 Duplex hold: 73
 - #471 Copy input tray prompt: 74
 - #482 Toner save: 16, 66
 - #484 Counter view: 66
 - #493 Scan mode: 77
 - #494 Scan parameter hold: 77
 - #500 DHCP mode: 79
 - #501 IP address: 79
 - #502 Subnet mask: 79
 - #503 Default gateway: 79
 - #504 DNS server #1: 79
 - #505 DNS server #2: 79
 - #507 Machine name: 79
 - #508 MAC address: 79
 - #532 IP filtering: 80
 - #533 Auto IP: 80
 - #534 HTTPD: 80
 - #535 IPv6 protocol: 80
 - #565 Paper input tray setting for the scan to email print feature: 80
 - #578 All email address erase: 80
 - #760 Paper input tray in PCL: 75
 - #762 Number of copies in PCL: 75
 - #763 Paper size in PCL: 75
 - #764 Image reduction in PCL: 75
 - #765 Recording paper direction in PCL: 75
 - #766 A4 wide printing in PCL: 75
 - #767 Line per page in PCL: 75
 - #768 Font source in PCL: 75
 - #769 Font number in PCL: 76
 - #770 Font pitch/point in PCL: 76
 - #771 Symbol set in PCL: 76
 - #772 Line breaks in PCL: 76
 - #773 Auto continue mode: 76
 - #774 Data timeout: 76
 - #776 Mutual A4/letter print: 76
- A** Address list: 109
Answering machine: 54
Auto continue mode (Feature #773): 76
Auto IP (Feature #533): 80
Automatic deletion (Feature #449): 71
Automatic document feeder: 22, 39, 45
Auto reduction (Feature #432): 69
- B** Basic features: 63
Broadcast programming list: 109
Broadcast transmission: 47
- C** Caller ID: 58
Calling back: 59
Storing: 60
Caller ID list (Feature #216): 65
Character entry: 83
Cleaning: 107, 108
Collate hold (Feature #469): 73
Connecting tone (Feature #416): 68
Connections: 19
LAN: 19
USB: 27
Contrast: 37, 44
Contrast hold (Feature #462): 65
Copy: 37
Booklet: 42
Collation: 39
Duplex: 40

- Easy repeat: 41
- N in 1: 41
- N in 1 (Separate): 42
- Poster: 41
- Proof set: 39
- Quick ID: 41
- Reserve: 43
- Zoom: 37
- Copy features: 73
- Copy input tray prompt (Feature #471): 74
- Counter view (Feature #484): 66
- D** Data timeout (Feature #774): 76
- Date and time (Feature #101): 23
- Default copy resolution (Feature #461): 73
- Default gateway (Feature #503): 79
- Default operation mode (Feature #463): 66
- Delayed transmission (Feature #412): 68
- DHCP mode (Feature #500): 79
- Dialling mode (Feature #120): 20
- Directory: 46
 - All erase (Feature #289): 67
- Display messages: 88
- Distinctive Ring service (Feature #430): 61
- DNS server #1 (Feature #504): 79
- DNS server #2 (Feature #505): 79
- Document size: 21
- Drum cartridge: 13
- Drum life: 111
- Duplex hold (Feature #470): 73
- E** ECM selection (Feature #413): 68
- Email address
 - All erase (Feature #578): 80
 - Storing: 77
- Extension telephone: 51
- F** Fax Ability: 61
- Fax activation code (Feature #434): 69
- Fax features: 67
- Fax number (Feature #103): 25
- FAX ONLY mode: 50
- Fax preview mode (Feature #448): 56
- Fax Stream Duet: 61
- Flash time (Feature #121): 63
- Friendly reception (Feature #438): 70
- FTP server list: 109
- H** HTTPD (Feature #534): 80
- I** IP address (Feature #501): 79
- IP filtering (Feature #532): 80
- IPv6 protocol (Feature #535): 80
- J** Jams
 - Document: 106
 - Recording paper: 100
- Journal report (Feature #402): 45, 67, 109
- Junk fax prohibitor: 55
- L** Label: 31
- LAN features: 79
- Legal-size fax send (Feature #445): 70
- Location setting (Feature #114): 63
- Logo (Feature #102): 24
- Lower input tray (optional): 85
- M** MAC address (Feature #508): 79
- Machine name (Feature #507): 79
- Maintenance time (Feature #158): 64
- Manual answer mode (Feature #404): 67
- Maximum fax speed (Feature #418): 68
- Memory reception alert (Feature #437): 70
- Mode timer (Feature #464): 66
- Multi-Function Station software
 - Activating: 28
 - Installing: 26
 - Uninstalling: 28
- Mutual A4/letter print (Feature #776): 76
- N** Navigator directory
 - Sending faxes: 47
 - Storing: 46
- Network features: 81
- O** OCR software: 34
- Overseas mode (Feature #411): 67
- P** Page layout hold (Feature #467): 73
- Paper input tray setting
 - Copy (Feature #460): 73
 - Fax (Feature #440): 70
 - PCL (Feature #760): 75
 - Scan to email print (Feature #565): 80
- Paper size
 - Lower input tray (Feature #382): 65
 - Standard input tray (Feature #380): 65
- Paper type (Feature #383): 65
- Password (Feature #155): 64
- PC fax reception (Feature #443): 26
- PC fax setting (Feature #442): 70
- PCL
 - A4 wide printing (Feature #766): 75
 - Font number (Feature #769): 76
 - Font pitch/point (Feature #770): 76
 - Font source (Feature #768): 75
 - Image reduction (Feature #764): 75
 - Line breaks (Feature #772): 76
 - Line per page (Feature #767): 75
 - Number of copies (Feature #762): 75
 - Paper input tray (Feature #760): 75
 - Paper size (Feature #763): 75
 - Recording paper direction (Feature #765): 75
 - Symbol set (Feature #771): 76
- PCL font list: 109
- PC print features: 75
- Power failure: 98
- Power save (Feature #403): 65
- Power switch: 20
- Print
 - Duplex: 30
 - Email attachment: 31
 - Special media: 31
- Printer test: 109

15. Index

- Programming: 62
- Pull scan: 35
 - Scan application: 35
 - Viewer: 35
- Push scan: 33
 - Email: 33
 - Email address: 34
 - File: 33
 - FTP: 35
 - OCR: 34
 - Viewer: 33
- Q** Quick scan: 45
- R** Recall time (Feature #121): 63
- Receiving faxes
 - Automatically: 50
 - Computer: 56
 - Display: 52
 - Manually: 51
 - Web browser: 56
- Recording paper: 16
- Recording paper size: 110
- Redialling: 44, 47
- Reports
 - Address: 109
 - Broadcast programming: 109
 - Broadcast sending: 48
 - Caller ID: 65, 109
 - FTP server: 109
 - Journal: 45, 67, 87, 109
 - PCL font: 109
 - Power down: 98
 - Printer test: 109
 - Sending: 44, 67, 87
 - Setup: 109
 - Telephone number: 109
- Reset all features (Feature #159): 64
- Reset fax features (Feature #459): 71
- Resolution: 37, 44
- Ring count
 - FAX ONLY (Feature #210): 64
 - Silent fax (Feature #436): 69
 - TEL/FAX (Feature #212): 67
- Ringer pattern (Feature #161): 64
- Ring pattern for Distinctive Ring (Feature #431): 61
- S** Scale (Feature #147): 63
- Scan features: 77
- Scan mode (Feature #493): 77
- Scanner glass: 21, 37, 44
- Scan parameter hold (Feature #494): 77
- Scan to email print: 31
- Sending faxes
 - Broadcast: 48
 - Computer document: 49
 - From memory: 45
 - Manually: 44
 - Navigator directory: 47
- Sending report (Feature #401): 44, 67
- Set fax default (Feature #459): 71
- Setup list: 109
- Storing
 - Broadcast: 47
 - Caller information: 60
 - Email address: 77
 - Navigator directory: 46
 - Subnet mask (Feature #502): 79
- T** Telephone number list: 109
- TEL mode: 51
- Time adjustment (Feature #226): 65
- Toner cartridge: 13
- Toner life: 110
- Toner save (Feature #482): 16, 66
- Transparency: 31
- V** Volume: 23
- W** Web fax preview access code (Feature #450): 56
- Z** Zoom hold (Feature #468): 73

Notes

Notes

Notes



MB3150CX